SPLIT-CORE CURRENT TRANSFORMER JM21N-XXX-1A series

SUB-COOR STU-FOCOS TECHNOLOGY AC Vac

JM21N series of split-core current transformer offers 1A at secondary from sensed primary current. Without using secondary CT inside of meter, users directly connect JM21N series to a meter for high accuracy metering application. It enables one meter to be adopted for various current rating by only changing primary CT so it makes compact design meter and reduces developing cost. Also, over-voltage protection circuit is included to offer safe, fast and cost effective installation.

APPLICATIONS

- Power meter
- Switchgear
- Distributed measurement systems
- General Sets
- Control panels


Over-Voltage protection

FEATURES

- PC spring, output-terminal, secure locking hinge, one-touch structure make easy to install to the existent equipments such as a power distribution boards.
- Isolated plastic case recognized according to UL94-V0
- UL / EN 61010 1 certified

NOTICE

- · Core contact surface is waterproofed, however if it gets rusty,
- you could reuse after removing rusts with spraying WD-40 or CRC5-56 on the rusted side.
- Do not use any other chemicals except WD-40 or CRC5-56 on housing or any other parts.
- Customizing output lead wire

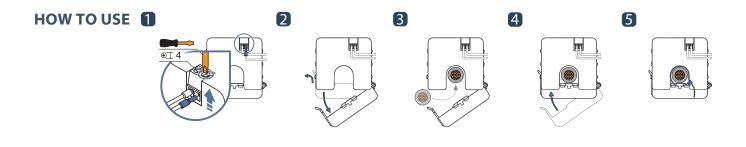

SPECIFICATION

(F=50/60Hz)

Accuracy	IEC Class 0.5S / ANSI Class 0.6		
Output Terminals	Terminal Block(2P) - PART NUMBER : LM5.08/02/90 SW(black)		
System Voltage	720V(0.72kV)		
Overload withstand	1.2 times rated current continuously		
Compliant with	IEC/EN61869-2, IEEE/ANSI C57.13 & IEC61010-1		
Operating Temperature Range	-20°C to 55°C		
Relative Humidity	0-85% non-condensing		
Latch/Unlatch	about 100 times		
Test Voltage	3kV for 1minute		
Frequency Range	50/60Hz		
Protection Level	Bipolar 6.5Vp		
Insulation Category CAT II or CAT III 600VAC			




BENEFITS Small-size, light-weight

- Simple Installation
- circuit is installed.




CURRENT TRANSFORMER RATIOS

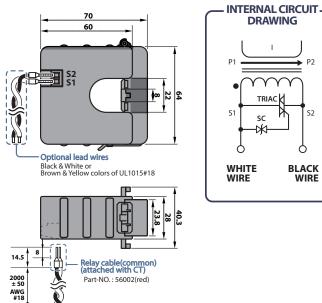


DRAWING P2 TRIAC S2 BLACK WIRF


19.7

 
PANEL MOUNT




DIN RAIL MOUNT

 

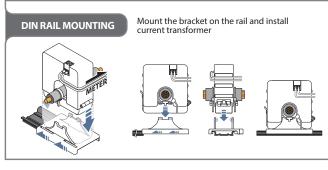

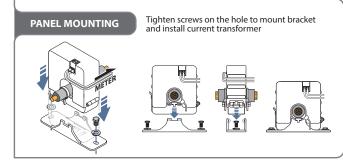

How to Order / Model Reference

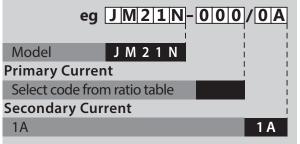

Current Transformer Ratios

Primary Current (A)	Meter			
	cl. 0.5S	cl. 1	cl. 3	Code
	cl. 0.6	cl. 1.2	cl. 2.4	
100		0.2		100
125		0.2		125
150		0.2		150
200	0.2			200
250	0.2			250
1A Secondary				

Accuracy conforms to IEC61869-2 & IEEE/ANSI C57.13 meets the measuring range from 1 to 120% of In

CAUTION: DANGER 🕂 A

- HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH In order to guarantee safe operation of the transformer,
- please read and understand the instructions thoroughly.
- For your reference, see NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and put into operation by
- qualified electrical personnel or appropriately trained individual. Before servicing the CTs, turn off all sources of power and
- use a properly rated voltage sensing device to check if the power is off. • Current transformer secondary must be shorted or connected to a burden all times.
- The transformer (split core type) must not be operated when it is not fully closed or the installation is not completed.
- Rearrange all covers and protective devices before powering the equipment.

NOTICE

- This product is not intentionally made for safety applications.
- Make sure not to install this transformer in hazardous or classified areas. • The installer is responsible for conformance to all applicable codes.
- Ignoring the warnings can lead to serious injury and/or cause damages.
- A qualifi-ed person is the one who is skilled and has knowledge about the construction and operation of this electrical equipment, and has received safety training to recognize and avoid the hazards involved.
- (NEC2011 Article 100) If this product is used in a way not specified by the manufacturer, the
- protection offered by the product may be impaired. No responsibility is taken by J&D Electronics for any consequences arising by not following this material properly

