Laser 6:1 Downhaul Rigging Guide

southeastsailboats.co.uk

Hopefully these rigging instructions are self explanatory. If you have any problems please contact us at sales@southeastsailboats.co.uk or sales@ropesforboats.com

The rigging of the downhaul avoids extra forces on the kicker fitting and is rigged without having to undo any pins or tie knots.

Step 1 – Start by passing the loop on the end of the primary through the sail cringle.



Step 2 – Pull the loop down to just below the kicker tang



Step 3 – Pass the eye on the end of the small assembly through the primary line loop.



Step 4 – Take the eye around the mast below the kicker tang.




Step 5 – Then pass the block through the eye



Step 6 – Thread the coloured control line from the block at the sail through the block at the kicker tang and back up to the block at the sail.



The position the primary loop should look like this.

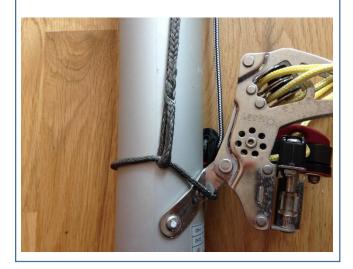

The position the control line block should look like this.

