

These instructions focus on how to rig the primary line which, with one end already spiced onto the centre block, requires a few key steps. Hopefully these instructions are self explanatory. If you have any problems please contact us at sales@southeastssailboats.co.uk or sales@ropesforboats.com

Step 1 – Remove the Top Block Pin/Bolt and Kicker Tang



Step 2 – Pass The Primary Line through the Kicker from the bottom towards the top



Step 3 – Thread the Primary Line Loop Through the Becket End



Step 4 – Push the Block all the way through the Primary Line Loop



Step 5 – It should now look like this




Step 6 – Pass the Kicker Primary Line over the top of the Top Block



Step 7 – Refit the Top Block Pin/Bolt and Kicker Tang



Step 8 – Remove the Plastic Handle and thread the Secondary Line through the Kicker in the usual way. Refit the Handle

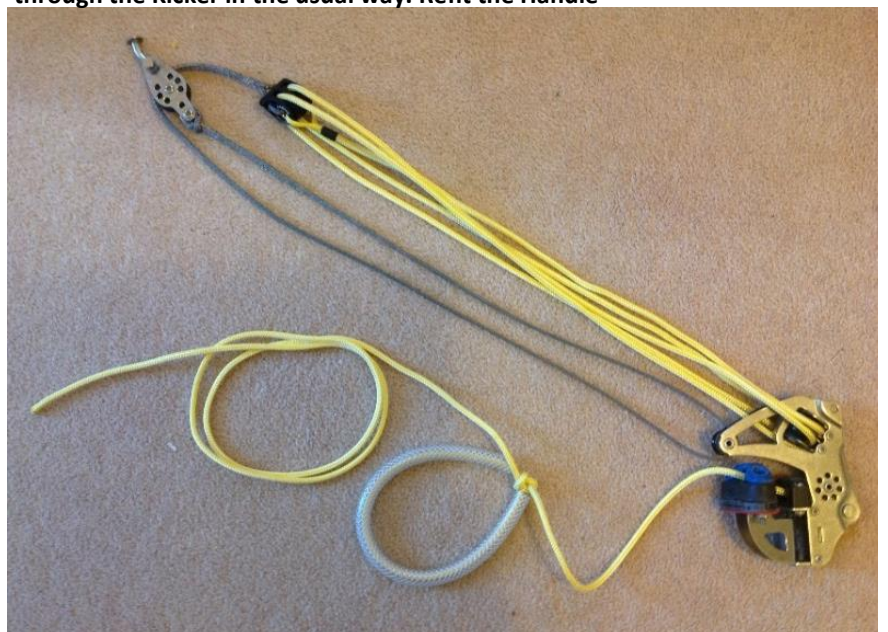

As a guide, fit the handle so that the remaining free tail (that is usually tied to the front of the centreboard) is approximately 1.2m long . When the kicker is fully off, the top of the black Harken middle block should sit about 3cm below the bottom of the top block becket - it should not be able to hit the top block.