

Laser Outhaul Rigging Guide – Quick Release Version

Hopefully these rigging instructions are self explanatory. If you have any problems please contact us at sales@southeastssailboats.co.uk

Part 1 – Installing the Blocks and Routing the Secondary Line


Step 1 – Fit the block(s) at the gooseneck. Slide the loop down the mast to the gooseneck before you put your sail on. If you have the Front of Boom double block stop go to Step 4



Step 2 – This depends on the whether you have selected the top of boom or side of boom centre block option.

For the top of boom, fit the block at the boom cleat by passing the loop through the cleat fairlead and then pass the block back through the loop (bottom left).

For the side of boom option, slide the block assembly down the boom from the gooseneck end, and position as shown (bottom right)

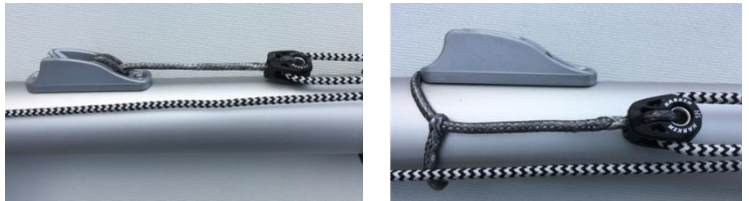

Step 3 – Thread the secondary (the coloured control line) through the block at the boom cleat and back through the block that's spliced to both the primary and secondary lines. Take the free end of the secondary and pass it through the block at the gooseneck and down to your normal deck block and cleats.



Step 4 – Thread the secondary (the coloured control line) through the block at the gooseneck and back through the block that's spliced to both the primary and secondary lines. Take the free end of the secondary and pass it through the second block at the gooseneck and down to your normal deck block and cleats.



Part 2 Primary Line - The rigging of the quick release primary line is shown below.

Step 1 – Pass the large loop through the boom end eye.



Step 2 – Pass the large loop through your clew block and back through the boom end eye. Then push the large loop over the end of the boom. Note that over time and use, the loop will tighten a bit as the line becomes softer.

