

The ULA Purist reel forgoes our conical drag and is a click-pawl style reel. A 2-prong clicker that rides on the edge of the spool provides the clicking sound and additional resistance when line is being pulled out to eliminate backlash.

The clicker assembly is made up of 3 parts. An allen screw, a 2-prong clicker (black plastic) and slotted clicker nut (Black). The shorter/thicker part of the clicker will come set up on the left side for left hand retrieve.



Directions:

Remove the spool by holding onto the frame of the reel in one hand and the spool in the other. Like our other reels simply pull the spool from the frame.



On the inside frame side, you'll see the clicker mounted below the spindle. On the outside of the frame (below the spindle nut – do not remove) there is an allen screw.

Using the allen key provided loosen this screw and remove the clicker assembly. Simply flip the clicker over 180 degrees and place it back in the slotted side of the clicker nut.

Hold the clicker nut and clicker in place and insert the allen screw from the outside of the frame and tighten.

*The clicker assembly has some up and down play and should generally be put in the middle of the range. If the clicker is too low and interfering with the spool, loosen and adjust the clicker assembly up. If it is too high and not engaging at all loosen and slide down.

After the retrieve swap is completed and re-assembled the thicker prong of the clicker will now be on the right side. Put the spool back into the frame and press together.