



single digital output

USR-M18#C-W#S Created: 01/02/2016

M18 LEDs

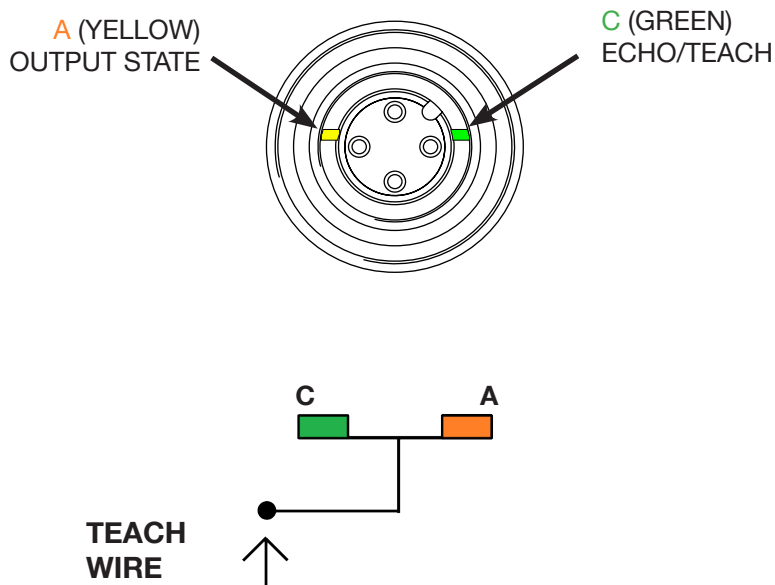


TEACH OPTIONS

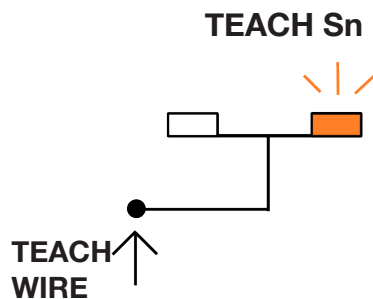

A BLINKING 5 TIMES TO ACQUIRE THE POINT

RECALL FACTORY PARAMETERS





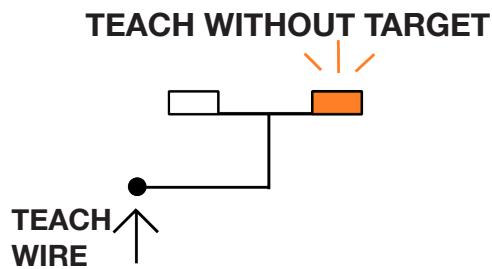


A BLINKING 5 TIMES FOR CONFIRM



single digital output

USR-M18#C-W#S Created: 01/02/2016

CONFIGURATION STATE

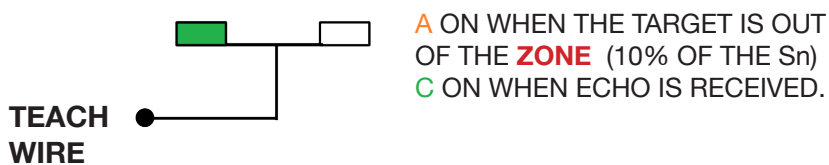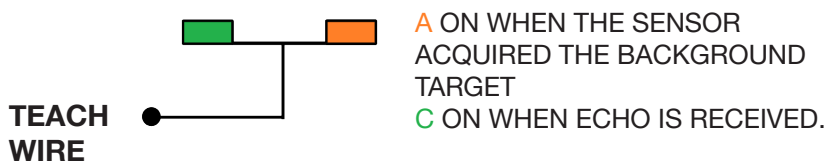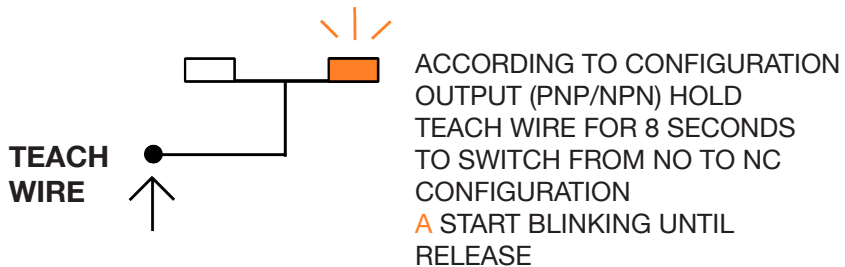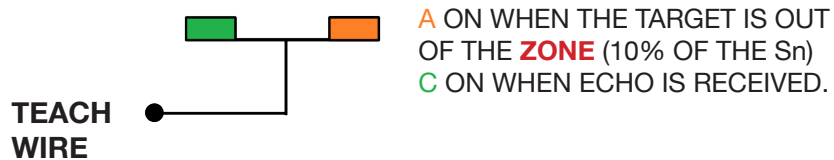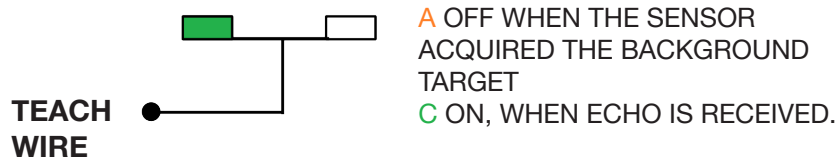

OUTPUT STATE

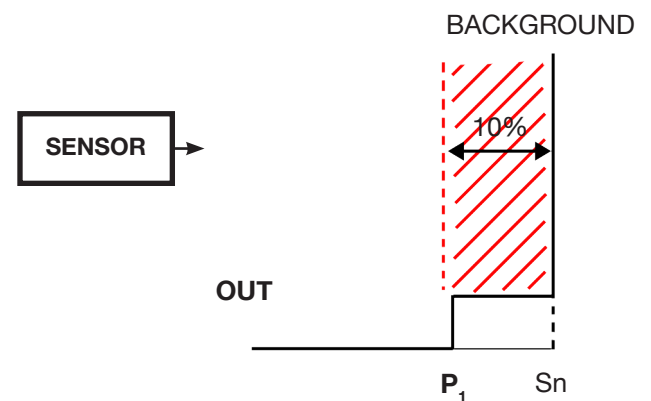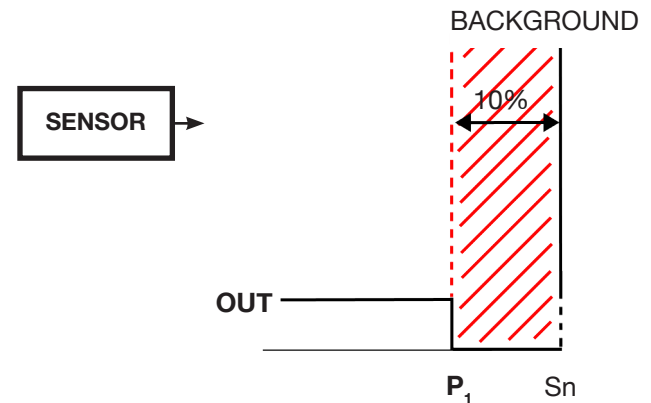

TEACH IN CONFIGURATION

DIGITAL OUTPUT

PNP: CONNECT THE **WHITE** WIRE TO THE **BLUE** WIRE

NPN: CONNECT THE **WHITE** WIRE TO THE **BROWN** WIRE