



AIR FRY TOASTER OVEN

INSTRUCTION BOOKLET

CUSTOMER SERVICE 1-877-926-6526

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- 1. READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE AIR FRY TOASTER OVEN.**
- 2. DO NOT** touch hot surfaces “△”. Use handles and knobs. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit.
- When the unit is not in use and before cleaning, unplug the oven from the wall outlet.
NOTE: Make sure the oven is turned off before unplugging.
- To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
- DO NOT** operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Take this appliance only to the nearest Authorized Service Center for examination, repair or adjustment.
- DO NOT** use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- DO NOT** use outdoors or for commercial purposes.
- DO NOT** use this appliance for other than its intended use.
- DO NOT** let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
- DO NOT** place the appliance near a hot gas or electric burner or in a heated oven.
- Extreme caution should be used when using containers constructed of material other than metal or glass.
- A fire may occur if the Air Fry Toaster Oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
- When using the oven, pull the unit out a minimum of 15 cm (6 inches) away from walls on all sides. Remove cords from other products from behind the oven.
- DO NOT** store any materials, other than manufacturer’s recommended accessories, in this unit when not in use.
- DO NOT** place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
- DO NOT** cover the oven with metal foil. This will cause overheating of the appliance.
- Oversized foods, metal foil packages, or utensils must not be inserted in a toaster oven as they may involve a risk of fire or electric shock.
- DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- When broiling, use extreme caution when removing tray or disposing of hot grease, hot liquid or hot oil.
- The door and the outer surface may get hot when appliance is used.
- To turn this appliance off, return all controls to the “off” position, then remove plug from wall outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from air outlet openings. Also, be careful of hot steam and air when you remove the cooking accessories from the appliance.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

- A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- If the power supply cord is too short, it is suggested to have a qualified electrician or serviceman to install an outlet near appliance.
- If an extension cord is used, the marked electrical rating of the extension cord must be the at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over unintentionally or pulled by children.

Hello!

Welcome to the GreenLife™ family!

We're dedicated to making every meal a little fresher, a little healthier, and a little better. From our healthy ceramic nonstick cookware to our time-saving appliances, our eye-catching products bring a pop of color and style to your kitchen so you can truly make any meal your own. We hope your purchase gives you a fresh new approach to healthy meals. **Enjoy!**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


BEFORE FIRST USE

- Ensure that there is enough ventilation around the oven and that the oven is completely dry before use.
- Place Air Fry Toaster Oven on heat resistant surfaces. Avoid placing on any untreated wooden surfaces.
- During first use, you may experience light smoke coming out from the oven, this is normal, and smoke should disappear after 5 minutes.
- The feet of the oven can leave some marks on the surface, if this happens, remove marks with damp cloth.
- To get better cooking performance, it is recommended to pre-heat the oven for about 10 minutes.

CONTENTS

| | |
|-------------------------------|---|
| Important Safeguards..... | 2 |
| About GreenLife | 3 |
| Parts..... | 4 |
| Operation | 5 |
| Cooking Chart | 6 |
| Tips & Hints | 6 |
| Cleaning and Maintenance..... | 6 |
| Troubleshooting | 6 |
| Warranty | 7 |

PARTS

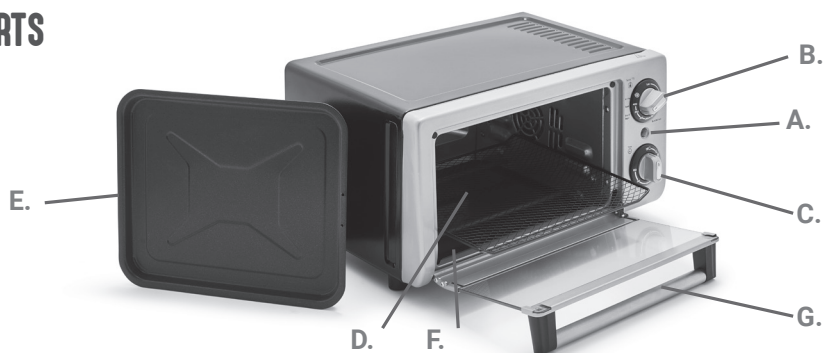

A. Indicator Light

Illuminates once the timer is set. The Air Fry Toaster Oven will automatically turn off, bell will sound, and Power Indicator Light will turn off when time has been reached.

B. Temperature/Shade Control Dial

Adjustable Temperature control Warm/250-450°F/Broil/Air Fry .

C. Timer Dial

Up to 60-minute timer with Auto Shut-Off.

D. Healthy, Nontoxic Rack/Air Fry Basket

Can be used for baking, broiling, and toasting. Accommodates up to a 9" pizza and 4 slices of toast. Use the rack/air fry basket with the baking pan.

E. Healthy Nontoxic, Nonstick Baking Pan

Place food in this pan to cool or use as the drip tray underneath the rack/air fry basket.

F. Crumb Tray/Door

Collects crumbs and grease.

G. Oven Door with Cool-Touch Handle

Constructed with tempered glass for safety.

OPERATION

Your Air Fry Toaster Oven is equipped with all the options of a full-size oven in a countertop appliance; toasts, bakes, broils, air fries.

NOTE: During initial startup you may detect a slight smell and/or smoke. Turn the temperature to max and let run for approximately 5 minutes.

1. Place your GreenLife Air Fry Toaster Oven on a clean, dry surface.
2. Make sure the Timer Dial is in the OFF position.
3. Plug cord into an electrical outlet.
4. Pre-heat Oven and then place food into Air Fry Toaster Oven on rack or baking pan.
6. Turn the Temperature Dial clockwise to desired setting, up to 450°F.
7. Turn the Timer Dial clockwise to the desired cooking time, up to 60 minutes.
8. The Power Light will light up once the Timer Dial is turned.

9. Once the cooking time has been reached, the timer will shut off automatically, bell will sound and Power Indicator Light will turn off.
10. After use, turn the Timer Dial off and unplug your Air Fry Toaster Oven.
11. Wait until the oven is completely cool before any cleaning or maintenance.
Note: If the timer is not expired, it is normal for it to keep ticking - even when unplugged. Simply turn the timer dial counterclockwise to OFF position to avoid this.

TOAST

1. Place oven rack in the oven. Place food on rack. Baking pan can be placed underneath the rack.
2. Turn the Temperature Dial to Toast .
3. Rotate Timer Dial clockwise to be "■" with around 4 minutes, then back to desired toast shade.

IMPORTANT

When choosing Toast color from light to dark, always rotate timer between "☐" to "■". This will ensure that the timer operates correctly and safely. When the toast cycle is finished the bell will ring and the electrical power is automatically turned off. To stop the cycle at any time, turn the timer counterclockwise to the off "☐" position and the bell will ring.

In this cycle both the top and bottom heating elements operate, however they may not glow red hot. Please note this is normal and they are operating properly.

BAKE

1. Place food on the baking pan and then place the pan in the oven.

Note: We suggest to always preheat the oven before placing the food inside.

2. Rotate the Temperature Dial "Ⓓ" to the desired temperature.
3. The Timer Dial "⌚" is the On/Off Switch.
4. Rotate the Timer Dial clockwise (up to 60 min). At the sound of the bell, the bake function will automatically turn off "☐".

During this cycle, both the top and bottom heating elements operate.

NOTE: Always monitor the food at this setting to ensure that you are not overcooking. Do not use oven plastic or paper cooking bags in the Air Fry Toaster Oven.

AIR FRY

1. Place oven rack in the oven. Place food on rack. Baking pan can be placed underneath the rack.

Note: We suggest to always preheat the oven before placing the food inside.

2. Rotate the Temperature Dial "Ⓓ" to the Air fry.
3. The Timer Dial "⌚" is the On/Off Switch.
4. Rotate the Timer Dial clockwise (up to 60 min). At the sound of the bell, the bake function will automatically turn off "☐".

During this cycle, both the top and bottom heating elements operate, and internal fan will running.

NOTE: Always monitor the food at this setting to ensure

that you are not overcooking. Do not use oven plastic or paper cooking bags in the Air Fry Toaster Oven.

BROIL / BAGEL

1. Place the food on the baking pan and then place the pan on the top of the rack in the oven. Close the oven door.

Note: We suggest to always preheat the oven before placing the food inside.



2. Rotate the Temperature Dial to Broil position.
3. The Timer Dial "⌚" is the On/Off Switch.
4. Rotate the Timer Dial clockwise (up to 60 min). At the sound of the bell, the bake function will automatically turn off "☐".

During this cycle, only the top heating elements operate.

NOTE: Always monitor the food at this setting to ensure that you are not overcooking. Do not use oven plastic or paper cooking bags in the Air Fry Toaster Oven.

COOKING CHART

| Temperature Dial | Description | Food |
|------------------------|--|---|
| Warm / 250F° / Defrost | The upper and lower heating elements heat to a low temperature for warming or defrosting. | Defrosting frozen food. Keeping cooked food warm. Cooking food on low. |
| 250F° – 450F° | Adjustable temperature settings. | Meat, vegetables, fish, pizza, nuggets, fries, cookies, muffins and more! |
| Toast | The upper and lower heating elements both heat to 400F°. The timer determines toast shading. | Sliced bread, English muffins, etc. |
| Broil / Bagel | The upper heating element heats to desired temperature. | Top browning or melting for bagles, pizza, open-faced sandwiches, and more! |

| Timer Dial | |
|---|---|
|   | Light and Dark shade control. Set the temperature dial to 400F°. |
| 0-60 Minutes | Timer settings by minute, up to 60 minutes |
| Auto Shut-Off | Bell will sound and light will turn off, once the time has elapsed. |

TIPS & HINTS

- For best results always use the baking pan under the rack/air fry basket.
- For better cooking results, it is recommended to pre-heat the oven for approximately 10 minutes.
- For best results and to preserve the nonstick coating longer, use nylon, plastic, wooden or rubber utensils.
- Never cut food on the baking pan or crumb tray.
- Remove stubborn stains with a melamine sponge and mild dish washing liquid;
DO NOT USE STEEL WOOL or any other abrasive cleaner, as it will damage the nonstick surface of the baking pan and crumb tray.

CLEANING AND MAINTENANCE

CAUTION: To prevent personal injury or electric shock, always turn the Temperature Dial to Off position and unplug from outlet.

- Allow unit to cool completely before cleaning.
- Once unit has cooled remove the rack and/or baking pan for cleaning.
- All surfaces can be cleaned with a clean damp cloth, including the interior.
- Do not immerse the appliance, power cord or power plug in water or any liquids.
- Do not use abrasive cleaners or sharp utensils to clean the Air Fry Toaster Oven or the accessories.
- Dry thoroughly.
- Healthy, Nontoxic Rack/Air Fry Basket and baking pan are dishwasher safe.
- Swing-open the crumb door, tip back oven and pull the crumb tray knob forward and then down.
- Shake off crumbs from crumb tray. Cleaning the crumb tray often will avoid any accumulation.

TROUBLESHOOTING

| Issue | Cause | Solution |
|--|--|--|
| Air Fry Toaster Oven does not turn on | Not plugged into a functional electrical outlet. | Make sure the oven is plugged into a functional electrical outlet. |
| Outside of oven is hot during use | Standard procedure. | This is normal. Only use the door handle while oven is on and during cool down period. |
| Power light does not illuminate | Timer is not set. | The timer has to be set for the power light to turn on. |
| Unsure if need to preheat oven | | For better cooking results, it is recommended to pre-heat the oven for approximately 10 minutes. |
| What oils can I use? | | Oils with high smoke points, like canola oil and grapeseed oils, are best. If you use Extra Virgin Olive Oil, cook on moderate heat settings to prevent it from burning onto your cooking surface. |
| Can I use spray oils? | | Avoid all oils in spray form as they may damage the nonstick coating of your cooking surface. |
| Bottom of bread is not browning | Using broil position instead of toast. | Check that your temperature dial is set to the toast position, not the broil position. |
| Bread is too dark | Using a too dark setting. | Adjust the shade control to a lighter setting. |
| Bread is too light | Using a too light setting. | Adjust the shade control to a darker setting. |
| Food is not crispy or fried evenly | Some foods may require more oil than others. | If not crispy enough, brush some oil on the food. |
| Food is undercooked | The temperature might be too low. | Use the Temperature Dial to increase temperature. |
| When air frying, food is unevenly cooked | Not flipping larger items while cooking. | Most foods do not need to be flipped during cooking, but larger items should be turned halfway through cooking cycle to ensure evenly cooked and browned result. |
| The drippings from the rack/air fry basket made a mess in the oven | Did not use baking pan with rack/air fry basket. | Be sure to always use the Baking Pan underneath the rack/air fry basket. |
| Unsure how crumb door works | Crumb door is not removable. | Crumb door opens for effortless cleaning. |
| Unsure which accessories are dishwasher safe | | Rack/Air Fry Basket and Baking Pan are dishwasher safe. |

BEFORE RETURNING YOUR GREENLIFE PRODUCT

If you are experiencing problems with your Air Fry Toaster Oven, we suggest that you call GreenLife customer service at 1-877-926-6526 before returning the product. A representative can confirm whether the product is under warranty and advise on next steps.

IMPORTANT: If the defective product is to be serviced by someone other than GreenLife's authorized service, please tell the servicer to call our consumer service at 1-877-926-6526 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

LIMITED WARRANTY

GreenLife Electrics are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenLife Electrics product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at greenlifecookware.com.

TERMS OF SALE; ARBITRATION

The terms on which The Cookware Company (USA), LLC sells GreenLife Electrics are available online at greenlife-cookware.com (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate in a class action or representative action with respect to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration.

Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at adr.org or by calling the AAA at 1-800-778-7879.) The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision. The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding.

Other than your right to pursue a claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/ or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, NEITHER YOU NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. The arbitral tribunal may not consolidate more than one person's claims, and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction. If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.

DID YOU KNOW?

We make cookware too!

Our healthy ceramic nonstick is not stuck in the past!

Our coating is derived from sand and it's toxin free,
no PFAS, PFOAs, lead or cadmium, so you can cook

with confidence. See our full collection:

www.greenlife-cookware.com



