



3-IN-1 BREAKFAST MAKER

INSTRUCTION BOOKLET

CUSTOMER SERVICE 1-877-926-6526

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
3. To protect against electrical shock, do not immerse cord or plugs or temperature control probe in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn unit Off and unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over the edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach temperature control probe to appliance first, then plug cord in the wall outlet. To disconnect, turn temperature control probe to OFF, then remove plug from wall outlet.
14. Do not use appliance for other than intended use. Use with wall receptacle only.
15. Do not use appliance unattended.
16. Never remove the food with any kind of cutting device or other metallic kitchen utensil.

17. This appliance is not intended for deep frying foods.
18. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
19. A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
20. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
21. Extreme caution should be exercised when using containers constructed of other than metal or glass.
22. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
23. Do not place any of the following materials in the oven: (List all materials – that is, paper, cardboard, plastic, and the like).
24. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
25. Appliance could be turned off by turning the control knob to setting 0 or unplugging the power cord.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be unintentionally pulled on by children or animals, or tripped over.

Hello!

Welcome to the GreenLife™ family!

We're dedicated to making every meal a little fresher, a little healthier, and a little better. From our healthy ceramic nonstick cookware to our time-saving appliances, our eye-catching products bring a pop of color and style to your kitchen so you can truly make any meal your own. We hope your purchase gives you a fresh new approach to healthy meals. **Enjoy!**

NOTICE

If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.

This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

It is not intended to be operated by means of an external timer or separate remote-control system.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CONTENTS

Important Safeguards.....	2
About GreenLife	3
Parts.....	4
Before First Use.....	4
Operation	4
Tips & Hints	5
Cleaning and Maintenance.....	5
User Maintenance.....	5
Warranty	6

PARTS

- 1. Healthy Ceramic Nonstick Griddle Area**
Compartmentalized for eggs, meat, veggies, pancakes & more!
- 2. Adjustable Timer Dial with Light**
Select number of cooking minutes and light will turn on. Unit and light will turn off at the end of cooking time.
- 3. Healthy Ceramic Nonstick Toast Tray**
Accommodates 2 slices of toast, or english muffins stacked vertically, or half a bagel.
- 4. Handles**
For easy moving and carrying.
- 5. Glass Lid**
For clear viewing or keeping warm.



BEFORE FIRST USE

Run the Breakfast Maker for 15 minutes before first use. There will be slight smoke and smell which is normal and common to appliances.

- Carefully unpack the Breakfast Maker and remove all packaging materials.
- Place the Breakfast Maker on a clean, flat surface.
- Before cooking on the Breakfast Maker for the first time, wipe the non-stick griddle surfaces and bread tray.

NOTE: Only the lid is dishwasher safe.

- Coat the ceramic nonstick surfaces with a high smoke point oil (i.e. avocado oil) or butter before heating. If necessary, remove excess oil with paper towel.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

OPERATION

- Plug cord into any standard 120 V AC wall outlet.
- Place the prepared ingredients into the compartments, as indicated below.

Note: Bread slices need to be stacked.



- Cover with glass lid.
- Rotate the dial to the desired number of minutes.
- Toast shade can be adjusted according to timing.
- Always disconnect the plug from the wall outlet when you have finished cooking

TIPS AND HINTS

- To avoid scratching the ceramic nonstick surfaces of the Breakfast Maker, do not stack objects on top of it.
- For best results and to preserve the ceramic nonstick coating longer, use nylon, plastic, wooden or rubber utensils.
- Never cut food on the ceramic nonstick surfaces.
- Remove stubborn stains with a melamine sponge and mild dish washing liquid; DO NOT USE STEEL WOOL or any other abrasive cleaner, as it will damage the ceramic nonstick surfaces.
- If toasting two slices of bread, flip the bread half way through or run another cycle, for even toasting on both sides.

CLEANING AND MAINTENANCE

CAUTION: Do not immerse the cord or plug in water or any other liquid.

CAUTION: To avoid accidental burns, allow your Breakfast Maker to cool thoroughly before cleaning.

1. When finished cooking, turn unit unplug cord from wall outlet and allow it to cool.
2. Remove bread tray and empty contents, rinse in sink if necessary. Wipe down the top griddle areas with a damp cloth (DO NOT immerse in water or place in the dishwasher); dry thoroughly with a towel. Glass lid can be washed in the sink or in the dishwasher.
3. Avoid hard scouring of the ceramic nonstick finish as this may cause surface scratches. Do not use steel wool, scouring pads, or abrasive cleaners on any part of the Breakfast Maker.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly other than cleaning must be performed by an authorized service representative.

BEFORE RETURNING YOUR GREENLIFE PRODUCT

If you are experiencing problems with your Breakfast Maker, we suggest that you call GreenLife customer service at 1-877-926-6526 before returning the product. A representative can confirm whether the product is under warranty and advise on next steps. IMPORTANT: If the defective product is to be serviced by someone other than GreenLife's authorized service, please tell the servicer to call our consumer service at 1-877-926-6526 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

TROUBLESHOOTING

Issue	Cause	Solution
Breakfast maker does not turn on	Not plugged into a functional electrical outlet.	Make sure the breakfast maker is plugged into a functional electrical outlet.
What oils can I use?		Oils with high smoke points, like canola oil and grapeseed oils, are best. If you use Extra Virgin Olive Oil, cook on moderate heat settings to prevent it from burning onto your cooking surface.
Can I use spray oils?		Avoid all oils in spray form as they may damage the nonstick coating of your cooking surface.
Timer light is not turning on	Not selecting the cooking minutes.	Use the adjustable timer to select number of cooking minutes and the light will turn on.
Unsure of how many slices of toast fits in the toast tray		The ceramic nonstick toast tray fits 2 slices of toast, 2 english muffins stacked vertically, or half a bagel.
Uneven toasting results when toasting 2 slices of bread	Not flipping the bread half way through.	If toasting two slices of bread, flip the bread half way through or run another cycle, for even toasting on both sides.
Uneven toasting results	Not using the top griddle.	Toast drawer operates at optimal performance when the top griddle is also in use.
Trying to cut food directly on the griddle surface of breakfast maker		Never cut food directly on the griddle surface of breakfast maker.
Scratches on interior after constant daily use	Breakfast maker has a ceramic nonstick interior griddle surface.	For best results and to preserve the nonstick coating longer, use nylon, plastic, wooden, or rubber utensils.
Unsure if breakfast maker is dishwasher safe		Only the lid is dishwasher safe.
Unsure how to clean breakfast maker		Remove bread tray and empty contents, rinse in sink if necessary. Wipe down the top griddle areas with a damp cloth (DO NOT immerse in water or place in the dishwasher); dry thoroughly with a towel.
Stubborn stains on nonstick griddle surface		Remove stubborn stains with a melamine sponge and mild dish washing liquid. DO NOT use steel wool or any other abrasive cleaner.

LIMITED WARRANTY

GreenLife Electrics are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenLife Electrics product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at greenlife-cookware.com.

TERMS OF SALE; ARBITRATION

The terms on which The Cookware Company (USA), LLC sells GreenLife Electrics are available online at greenlife-cookware.com (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate in a class action or representative action with respect to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration. Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at adr.org or by calling the AAA at 1-800-778-7879.)

The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision. The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding.

Other than your right to pursue a claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, NEITHER YOU NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. The arbitral tribunal may not consolidate more than one person's claims, and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction. If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.

DID YOU KNOW?

We make cookware too!

Our healthy ceramic nonstick is not stuck in the past!

Our coating is derived from sand and it's toxin free,
no PFAS, PFOAs, lead or cadmium, so you can cook

with confidence. See our full collection:

www.greenlife-cookware.com



