

#### IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS.
- Unplug from outlet when not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts, before cleaning and before storing the appliance.
- 3.To protect against electric shock, do not immerse cord, plugs, or this appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
   Keep out of reach of children.
- 5. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Never put oil or butter into the popping chamber, or operate popper without popcorn kernels in the popping chamber.
- 8. Do not use outdoors.
- 9. Do not let cord hang over edge of table or counter or touch hot surfaces.
- 10. Do not place on or near a hot gas or electric burner or in a heated oven.
- To disconnect, turn switch to OFF, then remove plug from wall outlet.
- 12. Do not use appliance for other than intended household use.
- 13. A popper that is plugged into an outlet, should not be left unattended.
- 14. **CAUTION** burns can result from misuse of this product. Read instruction manual for proper operating procedure.
- Do not touch hot surfaces. Chute and kernel scoop will become hot during popping.
- 16. Chute and kernel scoop must be in place before plugging in unit.
- 17. This unit pops with hot air. Do not place oil, shortening, butter, or margarine in

- the popping chamber. Use of these substances will cause hazards, including but not limited to a fire hazard, and will damage the unit.
- 18. Extreme caution must be used when moving an appliance containing hot/ warm butter. No other liquids or oils should be used with this appliance.
- 19. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

# SAVE THESE INSTRUCTIONS

# FOR HOUSEHOLD USE ONLY

### SPECIAL POWER CORD INSTRUCTIONS

#### **NOTICE**

This appliance has a polarized plug. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

# Hello!

#### Welcome to the GreenLife™ family!

We're dedicated to making every meal a little fresher, a little healthier, and a little better. From our healthy ceramic nonstick cookware to our time-saving appliances, our eyecatching products bring a pop of color and style to your kitchen so you can truly make any meal your own. We hope your purchase gives you a fresh new approach to healthy meals. **Enjoy!** 

#### **CONTENTS**

Important Safeguards	2
About GreenLife	(
Parts	4
Operating Instructions	
Cleaning and Maintenance	Ę
Warranty	6

#### **PARTS**

- A. Butter warmer /kernel scoop
- B. Chute
- c. Popping chamber
- D. Base
- E. On/Off Switch



#### **BEFORE FIRST USE**

Carefully unpack the Now Showing and remove all packaging materials. To remove any dust that may have accumulated during packaging, simply wipe the Now Showing's exterior with a clean, damp cloth. Rinse chute and butter warmer in warm water. Dry before using. Do not immerse the Now Showing, cord or plug in water or any other liquid.

#### **CORD INSTRUCTIONS**

- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a long cord.
- 2. Extension cords may be used if care is exercised in their use.
- 3. If an extension cord is used.
  - A) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
  - B) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

#### **OPERATING INSTRUCTIONS**

- 1. Fill the butter warmer/kernel scoop with up to  $\ensuremath{\ensuremath{\cancel{1}}}\xspace_2$  cup of kernels.
- Remove chute from unit and pour kernels into popping chamber. DO NOT operate the popper without kernels in chamber.
- Replace chute and return butter warmer/kernel scoop. IMPORTANT: Do not use your Now Showing without the butter warmer/kernel scoop in place.
- Add up to 2 tablespoons of butter to butter warmer/kernel scoop (optional). NOTE: Do not add additional ingredients into the popping chamber such as: butter, oil, salt, or sugar, as damage will occur.

- 5. Ensure the chute is securely place on top of the popping chamber.
  - IMPORTANT: Never turn on your Now Showing without the kernel scoop in place on the chute and the chute properly seated on the popping chamber.
- Place a large, heat-resistant bowl under the chute. It should be large enough to fit about 15 cups of popcorn. (½ cup of uncooked kernels).
- 7. Turn switch to ON.
  - CAUTION: Occasionally, hot kernels may be thrown from the popping chamber. To avoid any contact with hot kernels, keep face and hands away from the front chute and keep children away from the unit.
- 8. Turn the appliance off when the popping sound becomes infrequent or less intense (approximately 2-3 seconds between pops). To avoid burning your popcorn, immediately turn the unit off and unplug the unit from the wall outlet.

CAUTION: AFTER POPPING, THE POPPING CHAMBER IS EXTREMELY HOT. DO NOT REMOVE CHUTE OR PUT HANDS NEAR CHAMBER UNTIL IT IS COMPLETELY COOL.

#### **WARNING:**

- · Never leave the unit unattended.
- Never preheat the popping chamber prior to use.
- Never leave this product running after the popping cycle is complete.
- Failure to follow these instructions may cause the chute to melt. Warranty will become void

#### **ADDITIONAL BATCHES**

 Wait at least 15 minutes between batches of popcorn to allow the unit to cool and let the internal thermostat reset. After each batch, unplug the unit and allow it to cool before removing the chute.

**WARNING:** Failure to allow the unit to cool down after making a batch of popcorn can warp the chute and butter warmer/kernel scoop.

 Check to make sure the popping chamber is empty and the unit is unplugged and cool. Carefully wipe the popping chamber clean with a soft damp cloth and the Now Showing is ready to use again.

#### **CLEANING AND MAINTENANCE**

- 1. Unplug the Now Showing and let cool completely before cleaning.
- 2. Remove the chute and kernel scoop from base and wash with warm, soapy water. Rinse and dry thoroughly.
- 3. Use a damp cloth or sponge to wipe the base, popping chamber and chute clean. Dry with a soft cloth. Do not use abrasive cleansers or scouring pads. **Note:** chute and kernel scoop are top shelf dishwasher safe. Do NOT place any other parts in the dishwasher
- Additional servicing should be performed by an authorized service representative.

For customer service please call: 1-877-926-6526

IMPORTANT: Never immerse the Now Showing in water or any other liquid.

Note: This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

#### **TIPS AND HINTS**

Kernels	Popped Popcorn
1/4 cup	Approximately 7 cups
1/3 cup	Approximately 10 cups
1/2 cup	Approximately 15-18 cups

**NOTE:** Some high-quality popcorn has large kernels, which will produce more popped corn. Premium popcorn could produce larger amounts of popcorn than stated above.

**TIP:** To help retain the moisture content of the kernels, always store in an airtight container at room temperature.

It's important to use fresh popcorn. If your popcorn is old, the kernels will not fully pop and/or it may take longer to pop.

#### **SEASONING SUGGESTIONS**

Shredded cheese, paprika ,adobo seasoning, hot sauce, garlic powder, taco seasoning, soy sauce, italian seasoning and herbs.

**NOTE:** Seasonings should NOT be added to popcorn kernels. Add seasoning ONLY in the bowl of fully popped popcorn.

#### **TROUBLESHOOTING**

Issue	Cause	Solution
Popcorn maker starts to smoke	Kernel residue on the heating plate within unit.	Clean the kernel container within the unit and remove any residue.
Popcorn maker starts to smoke	Kernel could be expired or old.	Consider buying new kernels.
Popcorn maker starts to smoke	Overfilling the popcorn maker with dry kernels.	Do not overfill. Use the 1/2 cup measuring cup that was provided. Maximum use 1/2 cup for one batch at a time.
Popcorn maker stops working while the on/off indicator is still on	If unit overheats, it will trigger an internal safety device and cuts off power supply to heating.	Switch off unit and let the unit cool down. Remove all kernel residue. Unit will resume to normal use afterward.
Popcorn maker not operating	Unit malfunction.	Contact Customer Service.
1/2 cup of kernels makes too much popcorn	1/2 cup measuring cup provided with popcorn maker.	1/4 cup of kernels makes approximately 7 cups of popped popcorn. 1/3 cup makes approximately 10 cups of popped popcorn.
Chute and butter warmer/ kernel scoop is warped	Failure to allow the unit to cool down after making a batch of popcorn can warp the chute and butter warmer/kernel scoop.	Wait at least 15 minutes between batches of popcorn to allow the unit to cool and let the internal thermostat reset.
Unsure of how to clean popcorn maker	Popcorn maker cannot be immersed in water or any other liquid.	Use a damp cloth or sponge to wipe the base, popping chamber and chute clean.
Unsure of which accessories are dishwasher safe		Only chute and kernel scoop are top shelf dishwasher safe.

#### BEFORE RETURNING YOUR GREENLIFE PRODUCT

If you are experiencing problems with your GreenLife Now Showing, we suggest that you call GreenLife customer service at 1-877-926-6526 before returning the product. A representative can confirm whether the product is under warranty and advise on next steps.

**IMPORTANT:** If the defective product is to be serviced by someone other than GreenLife's authorized service, please tell the servicer to call our consumer service at 1-877-926-6526 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

## TROUBLESHOOTING LIMITED WARRANTY

GreenLife Electrics are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenLife Electrics product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at greenlife-cookware.com/warranty.

#### **TERMS OF SALE; ARBITRATION**

The terms on which The Cookware Company (USA), LLC sells GreenLife Electrics are available online at greenlife-cookware. com (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate in a class action or representative action with respect

to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration. Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at adr.org or by calling the AAA at 1-800-778-7879.) The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision. The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding. Other than your right to pursue a claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, **NEITHER YOU** NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, **CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY.** The arbitral tribunal may not consolidate more than one person's claims, and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction. If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.



