



QWIK EGG

INSTRUCTION BOOKLET

CUSTOMER SERVICE 1-877-926-6526



IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**

2. Remove all packaging and labels from appliance prior to use.
3. Never leave appliance unattended when in use.
4. Make sure the appliance is cleaned thoroughly before using.
5. Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
6. Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. For maintenance other than cleaning, please contact GreenLife directly at 1-877-926-6526 from 9AM-5PM EST Monday—Friday.
8. Only use approved ingredients with this appliance. Other ingredients may damage the appliance.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
10. Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
11. Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
12. Do not let the power cord touch hot surfaces or hang over the edges of tables or counters.
13. Unplug the appliance from power outlet and allow to cool when not in use, during assembly/ disassembly, and before cleaning the Qwik Egg.

14. When cleaning the Body of the appliance, do not submerge in water or other liquids. All removable parts are BPA -free and top shelf dishwasher safe.
15. Do not place this appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
16. Do not put your hands or other foreign objects into the Qwik Egg while it is operating. If food spills onto the Heating Plate, make sure the Qwik Egg is turned off and cooled before cleaning.
17. **WARNING!** Hot steam! Never place your hands or arms over the Steam Hole while the appliance is in use.
18. Keep hands and utensils away from Heating Plate while cooking eggs to reduce the risk of injury or damage to the Qwik Egg.
19. Internal base and contents (water and eggs) of Qwik Egg are hot when in use. Let cool before handling and/or cleaning.
20. Do not touch the Heating Plate when the Qwik Egg is hot. Use the handles.
21. If using a longer power-supply cord or extension cord, make sure that the electrical rating of the wire is compatible with the appliance. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
22. Use extreme caution when handling the Measuring Cup as it contains a sharp Pin on the bottom of the cup which may cause injury.
23. **WARNING!** The Lid becomes hot. When eggs are done, carefully remove the Lid by the Cover Handle. Allow the Lid to cool completely before touching or cleaning.
24. **NEVER** place the Poaching Tray or Omelet Tray directly on the Heating Plate. Always place on top of the Egg Tray.
25. Make sure the Qwik Egg is off before removing the eggs.
26. A short power cord should be used to reduce the risk of tripping and entanglement.
27. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

Hello!

Welcome to the GreenLife™ family!

We're dedicated to making every meal a little fresher, a little healthier, and a little better. From our healthy ceramic nonstick cookware to our time-saving appliances, our eye-catching products bring a pop of color and style to your kitchen so you can truly make any meal your own. We hope your purchase gives you a fresh new approach to healthy meals. **Enjoy!**

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

SPECIAL POWER CORD INSTRUCTIONS

NOTICE

This appliance has a polarized plug. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

CONTENTS

Important Safeguards.....	2
About GreenLife	3
Parts.....	4
Operating Instructions	5
Cleaning and Maintenance.....	6
Troubleshooting	6
Warranty	6

PARTS



- A. Handle
 - B. Steam Holes
 - C. Lid
 - D. Egg Tray
 - E. Bottom Cover
 - F. Base
 - G. Power Switch with Indicator Light
 - H. Omelet Tray
 - I. Measuring Cup
 - J. Needle (on the bottom of cup)
 - K. Poaching Tray
- Note:** Parts are BPA-free

USING YOUR EGG COOKER

SOFT, MEDIUM, AND HARD-BOILED EGGS

Suggested Timing

The following time guidelines are for medium to large eggs. Extra large or jumbo eggs may require additional time and water to achieve the desired results.

For firm eggs, let your eggs sit covered in the Egg Cooker for a few minutes before removing them.

For completely hard-boiled eggs, leave your eggs in the Qwik Egg for an extra minute after the buzzer sounds.

Egg Consistency	Cook Time
Soft Boiled	1-3 eggs 7 minutes 4-7 eggs 10 minutes
Medium Boiled	1-3 eggs 9 minutes 4-7 eggs 12 minutes
Hard Boiled	1-3 eggs 12 minutes 4-7 eggs 16 minutes

Timer Auto-Off

This Qwik Egg's thermal sensor will automatically turn the machine off when the water has fully evaporated from the Heating Plate and when the buzzer sounds.

ATTENTION: Do not unplug the unit while cooking. Should you unplug the unit while cooking, your Qwik Egg will still be turned on when you plug it back in. If the unit does not detect water on the Heating Plate, it will automatically shut off and reset itself in a few seconds.

BOILING EGGS

ATTENTION: Unplug your Qwik Egg before starting.

- Pierce the large end of each egg with the pin attached to the bottom of the Measuring Cup.
- Pour the corresponding amount of cold water into the Heating Plate using the Measuring Cup.
- Attach the Egg Tray Handle to the Egg Tray, and place the Egg Tray on the Heating Plate. Place each egg, end with the hole pointed upward, in each designated spot.
- Cover the Tray with the Lid and plug in your Qwik Egg. Simply press the Power Button to start cooking. The Indicator Light will turn on.
- A buzzer will sound when the eggs are finished cooking. Silence the buzzer by pressing the power switch. Cooking time will depend on number of eggs and desired style. Lift the Lid using the Lid Handle and use heat-resistant tongs to remove eggs. Parts will be hot: do not touch with bare hands.

POACHING EGGS

- Locate the "Omelet/Poached" marking on the Measuring Cup and fill to that level. Pour water into the Heating Plate. Place the Egg Tray on top of the Heating Plate.
- Lightly grease the Poaching Tray with cooking spray. Place the Poaching Tray on top of the Egg Tray and never directly on the Heating Plate.
- Break an egg into each section of the Poaching Tray. Cover with the Lid and plug in the Qwik Egg. Press the Power Button. When the buzzer sounds, your eggs will be ready to eat.

OMELET TRAY

1. Locate the “Omelet/Poached” marking on the Measuring Cup and fill to that level. Pour water into the Heating Plate. Place the Egg Tray on top of the Heating Plate.
2. Lightly grease the Omelet Tray with cooking spray. Place the Omelet Tray on top of the Egg Tray and never directly on the Heating Plate.
3. Tray fits approximately 2 Large Eggs. Do NOT overfill. Pour your eggs into the Omelet Tray. Add a small amount of water or milk for smoother results. Cover with the Lid and plug in the Qwik Egg. Press the Power Button. When the buzzer sounds, your eggs will be ready to eat.

Note: It is normal for the eggs to expand while cooking. They will contract once the Lid has been opened. Remove your omelet with a spatula.

CLEANING THE QWIK EGG

1. Make sure the Qwik Egg is unplugged before cleaning or moving the appliance.
2. Wash the Qwik Egg Accessories and Lid with warm, soapy water or dishwasher. Removable parts are top shelf dishwasher safe.
3. Use a wet cloth to wipe down the Base and Heating Plate.
4. Dry all parts thoroughly.

RUSTING: Your Qwik Egg will not rust. Over time, mineral deposits may develop on the Heating Plate of your Qwik Egg. While it may resemble rust, it is the residue of minerals present in your water

TWO WAYS TO CLEAN THE HEATING PLATE:

1. Use a mild solution of water and vinegar (10 parts water: 1 part vinegar) and gently scrub.
2. Use a melamine sponge and a little warm water to gently scrub the Heating Plate in a circular motion.

CAUTION: During and after use, the appliance will be hot. Do not attempt to clean your Qwik Egg before the appliance has cooled. Do not submerge the Base in water or other liquids. The Base of the appliance is NOT dishwasher safe.

WARNING: Always place the Omelet Tray and Poaching Tray on top of the Egg Tray, never directly on the Heating Plate.

TROUBLESHOOTING

Issue	Cause	Solution
The indicator light doesn't turn on	Not plugged into a functional electrical outlet.	Make sure the power cord is plugged into a functional electrical outlet.
The indicator light doesn't turn on	Can cook up to 7 eggs.	The Qwik Egg can cook up to 7 eggs, but this does not mean you need to use 7 eggs each time.
Unsure if need to poke eggs before boiling eggs	Measuring cup includes a pin on the bottom to pierce eggs before cooking.	Pierce the large end of each egg with the pin attached to the bottom of the Measuring Cup.
Unable to turn off buzzer that goes off when eggs are done cooking	Not pressing the power switch.	Silence buzzer by pressing the power switch.
The eggs are over or under cooked	Not using the correct amount of water.	Always use the Measuring Cup to determine the correct amount of water needed for your eggs.
The eggs are consistently overcooked		Make sure you remove the eggs from the Qwik Egg immediately following the buzzer.
Unsure if Qwik Egg turns off once water is evaporated and eggs are done		The Qwik Egg's thermal sensor will automatically turn the machine off when the water has been fully evaporated from the Heating Plate and when the buzzer sounds.
Mineral deposits developing on the heating plate	This is the residue of minerals present in your water.	This is not rust. Over time, mineral deposits may develop on the Heating Plate of your Qwik Egg.
Unsure of how to wash Qwik Egg		Use a wet cloth to wipe down the Base and Heating Plate.
Unsure of which accessories are dishwasher safe		Removable parts are top shelf dishwasher safe.

BEFORE RETURNING YOUR GREENLIFE PRODUCT

If you are experiencing problems with your GreenLife Qwik Egg, we suggest that you call GreenLife customer service at 1-877-926-6526 before returning the product. A representative can confirm whether the product is under warranty and advise on next steps.

IMPORTANT: If the defective product is to be serviced by someone other than GreenLife's authorized service, please tell the servicer to call our consumer service at 1-877-926-6526 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

LIMITED WARRANTY

GreenLife Electrics are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenLife Electrics product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at greenlife-cookware.com.

TERMS OF SALE; ARBITRATION

The terms on which The Cookware Company (USA), LLC sells GreenLife Electrics are available online at greenlife-cookware.com (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate

in a class action or representative action with respect to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration. Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at adr.org or by calling the AAA at 1-800-778-7879.) The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision. The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding. Other than your right to pursue a claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, **NEITHER YOU NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY.** The arbitral tribunal may not consolidate more than one person's claims, and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction. If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.

DID YOU KNOW?

We make cookware too!

Our healthy ceramic nonstick is not stuck in the past!

Our coating is derived from sand and it's toxin free,
no PFAS, PFOAs, lead or cadmium, so you can cook

with confidence. See our full collection:

www.greenlife-cookware.com



