

EN


※※ Due to the tolerance of every camera, please check below list for confirming the filter be correct installed. ※※

- (A.) Place the Clip filter as flat as the right and left plane on the wall of mirror.
 - (B.) Lean the filter on the top and bottom plane on the wall of mirror.
 - (C.) Press the Shutter to test if the mirror will hit the filter.
- * If the filter is shaking while the mirror lifts then please adjust the back side spring accordingly.

中文


※※ 因每台機身有公差狀況使機身之間的尺寸些微不一，因此安裝完濾鏡後請依以下步驟檢查濾鏡是否安裝正確。 ※※

- (A.) 確定濾鏡是平放於機身內的。
 - (B.) 確定濾鏡上下部分輕抵於機身上下方，防止濾鏡上下移動。
 - (C.) 開啟電源，按壓快門測試機內左側快門桿是否會使鏡片移動。
- * 若按壓快門會導致濾鏡移動，可依背面說明作微調，若否則請勿調整濾鏡。

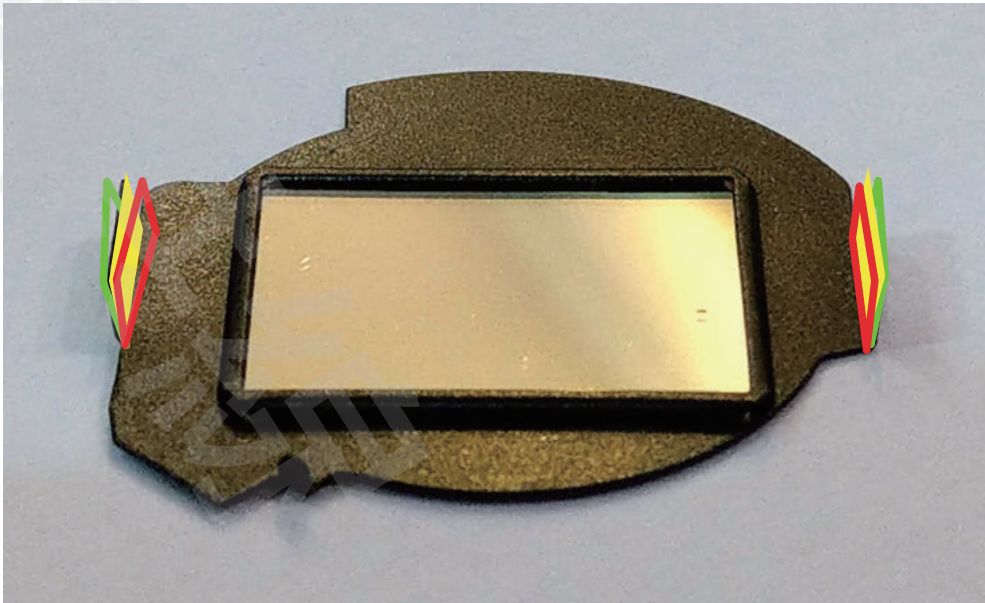

- Back Spring of Clip filter for Nikon APS-C
- Spring **Inward** Adjusting : When filter **can not be put in** the camera body.
- Spring **Outward** Adjusting : When filter **can not hold in** the camera body.
- Nikon APS-C內置濾鏡簧片
- 當濾鏡無法/很難裝入機身內,請將兩側簧片**向內調整**。
- 當濾鏡裝入機身後會在機身內移動,請將兩側簧片**向外調整**。

Note 1

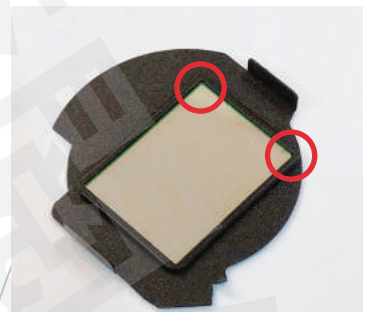

Note 2

** Please lay the filter on a flat ground and press the pointed location while adjusting to prevent the glass from breaking.

** 請將濾鏡置於平面,手指壓住內框邊角以輔助在調整濾鏡時可能造成的玻璃破裂。

※※ Please pay extra care with the very thin glass. ※※
※※ 請注意,玻璃非常的薄,務必放輕力道小心調整 ※※