
OVERVIEW

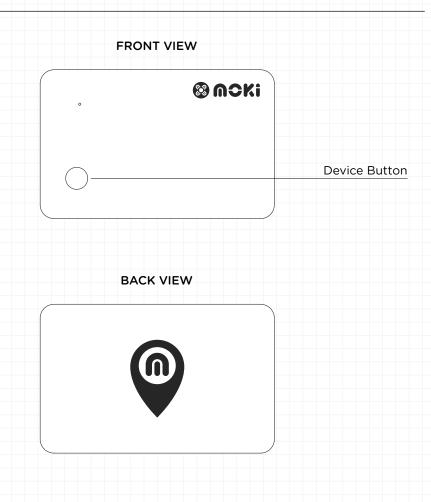

SAFETY INFORMATION

WARNING: HANDLING OF LITHIUM MANGANESE BATTERY CELLS

Use caution when working with and using lithium manganese batteries as they are very sensitive to charging characteristics and may explode, burn, or cause a fire if misused or mishandled. Always charge in or on a fire-proof surface. Never leave batteries charging unattended. Buyer is responsible for any damage or injury caused by misuse or mishandling of lithium batteries and chargers. Charge only with a smart charger designed for this specific type of lithium battery.

- DO NOT use if damaged in any way.
- DO NOT overcharge or over-discharge.
- DO NOT modify, disassemble, puncture, cut, crush, or incinerate.
- DO NOT expose to liquids or high temperatures.
- ALWAYS charge in or on a fire-proof surface and never leave charging batteries unattended.

MOKITAG CARD FUNCTIONS

Locating your item

Using a MokiTag Card paired with the Find My app you can track down your device on the Find My network - powered by hundreds of millions of iDevices around the world. Nearby devices securely send the location of your missing device to iCloud, allowing you to see its location in the Find My app.

Play sound

- Open the Find My app, click the Items tab, then click on your MokiTag Card.
- Click Play Sound, and the device will beep, so you can find the item easily.

DEVICE BUTTON

Power on

Press and hold the device button for 5 seconds. Your MokiTag Card will beep to indicate power is on.

Power off

Press the device button 5 times in 2 seconds. Your MokiTag Card will beep to indicate power is off.

Device status confirmation

Press the device button twice, the device beeps, indicating that the device is working. If the device does not beep, it means the device is powered off.

Factory reset

Unpair the item from the Find My app then, after the device is powered on, double-click the device button. The device will beep. Press the device button for 8 seconds until the device beeps. Release the button to complete factory reset. The device can now be paired.

PAIRING YOUR MOKITAG CARD

Pairing device

- Open the Find My app.
- Hold the device close to your iPhone, click the Items tab, tap + and then Add Other Item.
- Click Connect.
- Type a name for your device, select an emoji.
- Click Agree to acknowledge that this item will be linked to your Apple ID.
- Click Finish.

Enable lost mode

- Open the Find My app, click the Items tab, then click on your MokiTag Card.
- Under Lost Mode, click Enable.
- Read the instructions, click Continue and enter a phone number or email address.
- Confirm details, customise your lost message, and click Activate to complete the setup.

PAIRING YOUR MOKITAG CARD

Unpairing the device

- Open the Find My app, click on Items tab, then click MokiTag Card.
- Click Remove Item, then click Remove to unpair your MokiTag Card.

Note: After removing the device, the device will emit a beep, the device will shut down, and it is in pairing mode. If there is no re-pairing within 10 minutes, the device will leave the pairing state, and the device and the app cannot be paired at this time.

If you need to pair the device, you need to click the device button once, and the device will beep. At this point, the device enters the pairing state and can be re-paired with the app.

Pairing failure

When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems.

The following actions are recommended:

- Change the phone's network, such as switching between WiFi and your mobile network.
- · Factory reset your MokiTag Card.
- Pair with Find My app.

PRIVACY

How is my privacy protected?

Only you can see where your item is. Your location data and history are never stored on the item itself. Devices that relay the location of your item also stay anonymous, and that location data is encrypted every step of the way. So not even Apple or Moki knows the location of your device or the identity of the device that helps find it.

Designed to discourage unwanted tracking

If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:

- If you have an iPhone, iPad or iPad touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
- If you don't have an iOS device or a smartphone, a
 Find My network accessory that isn't with its owner
 for a period of time will emit a sound when it's
 moved. These features were created specifically to
 discourage people from trying to track you without
 your knowledge.

SCAN THIS CODE

Visit our website for more information about this, and many other great products



BATTERY LIFESPAN

Battery cannot be replaced.

Do not attempt to replace the battery in the MokiTag Card.

This battery has a lifespan of up to 2 years and cannot be replaced.

Please dispose of thoughtfully.

SPECIFICATIONS

MokiTag Card

Water resistance Rated IP67
Audio In-built speaker
Connectivity 20 metre range
Battery 2 year life span
Sensor Accelerometer

This product is designed to be used with Apple Find My.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimise its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste. Please dispose of thoughtfully.

LEGAL NOTICE

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

