




PlaySafe

Kids Headphones

HEADPHONES OVERVIEW

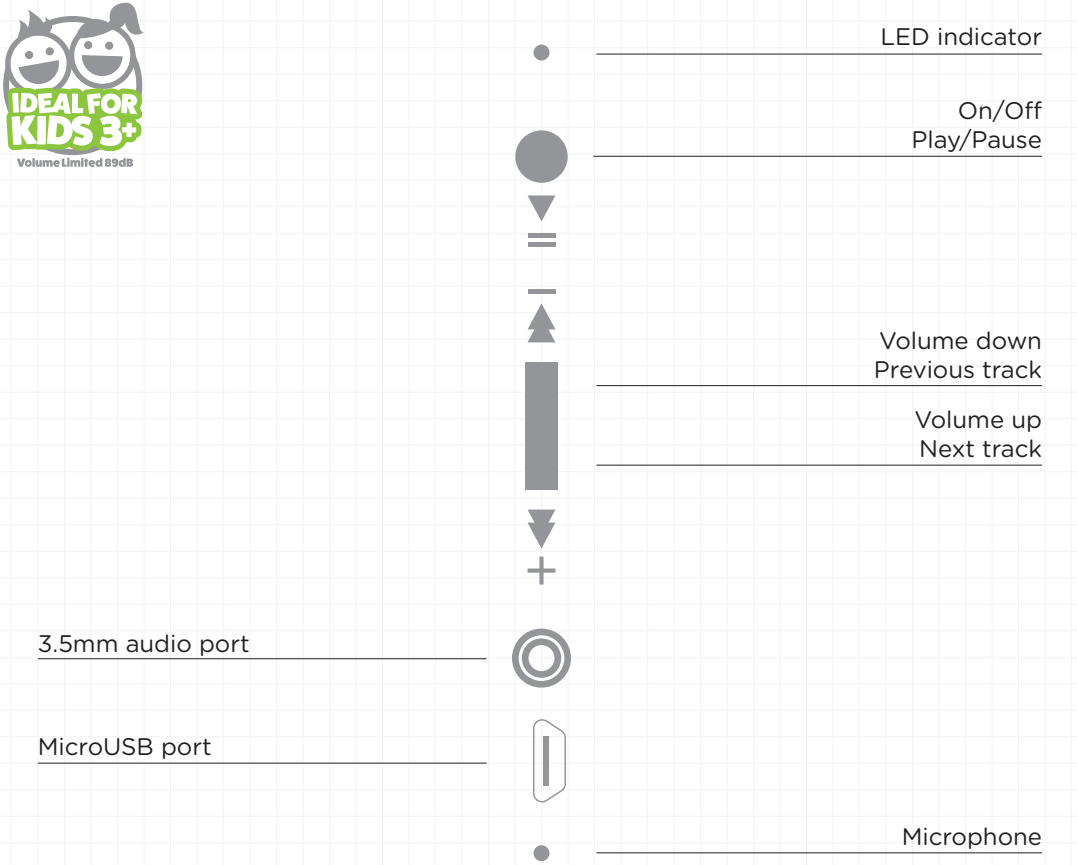

LED INDICATOR

Speed	Colour	Action
Solid	Red	Charging (when plugged in)
Solid	Blue	Charged (when plugged in)
Flashing	Blue/Red	Bluetooth pairing mode

CONTROL PANEL

ON/OFF button



Turn On/Off
Long press: Power On/Off
3 secs

Music Playback
Short press: Play/Pause

Incoming Call
Long press: Reject call
Short press: Answer call
Double tap: Redial last
number

Volume down button



Long press: Previous track
Short press: Volume down

Volume Up button



Long press: Next track
Short press: Volume up

WARNING - PLEASE READ FIRST

Moki *PlaySafe* Kids Headphones are volume limited to 85dB, which means it is safe for little kids to use for extended periods.

The Moki *Playsafe* Kids Headphones will connect wirelessly via Bluetooth, and also comes with a 3.5mm audio cable for non-Bluetooth mode.

We hope you enjoy this product.

BLUETOOTH® PAIRING

You must pair your Moki *Playsafe* Kids Headphones with a Bluetooth device before it can be used wirelessly.

1. Turn on Bluetooth mode on your mobile phone or play device.
2. The play device should automatically start searching for the headphones. Some players may require you to select “search for / add new device”.
3. Once turned on, the Moki *PlaySafe* Kids Headphones will enter pairing mode.
The LED indicator will flash blue/red, ready to pair with a Bluetooth-enabled device.
4. Select “Moki PlaySafe” on your device to pair your headphones. No password will be required. If your device requires a password, use “0000”.
5. If paired previously to a device, the Moki *PlaySafe* Kids Headphones will connect to that device.

Note: If headphones do not pair with a new device within 90 seconds they will enter “Standby mode”.

Moki *PlaySafe* Kids Headphones may be paired to PCs and laptops with Bluetooth capability. Go to your computer’s Bluetooth settings and follow the prompts to connect in a similar way as described above.

After pairing, ensure the “Sound Output” is set to “Play through Bluetooth” (not “Internal Speakers”). Some computers may require Bluetooth audio output to be enabled each time you connect.

BATTERY HEALTH

To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:

Warnings

- Please use supplied audio cable to charge headphones.
- Please disconnect audio cable after headphones are fully charged.
- Do not continue to charge headphones after they are fully charged.
- Do not use or leave the headphones near a heat source such as a fire or a heater.
- Do not place headphones in any liquid, fire or on a heater.
- Do not hit or throw the headphones.

Cautions

- Do not use or leave headphones in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions).
- Do not use headphones where there is a lot of static electricity, otherwise the safety devices within the headphones can be damaged.
- The headphones should be stored at room temperature.
- The headphone’s battery should be charged and discharged every so often in order to activate and restore the battery’s energy.
- Please follow battery waste recycling guidelines when disposing of the headphones.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste.

Please dispose of headphones thoughtfully.

The Bluetooth® word mark and logos are owned by Bluetooth® SIG, Inc. and any use of such marks by Moki is under license.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.