




# Rumblr

Wireless Speakers + TWS


## CONTROL PANEL

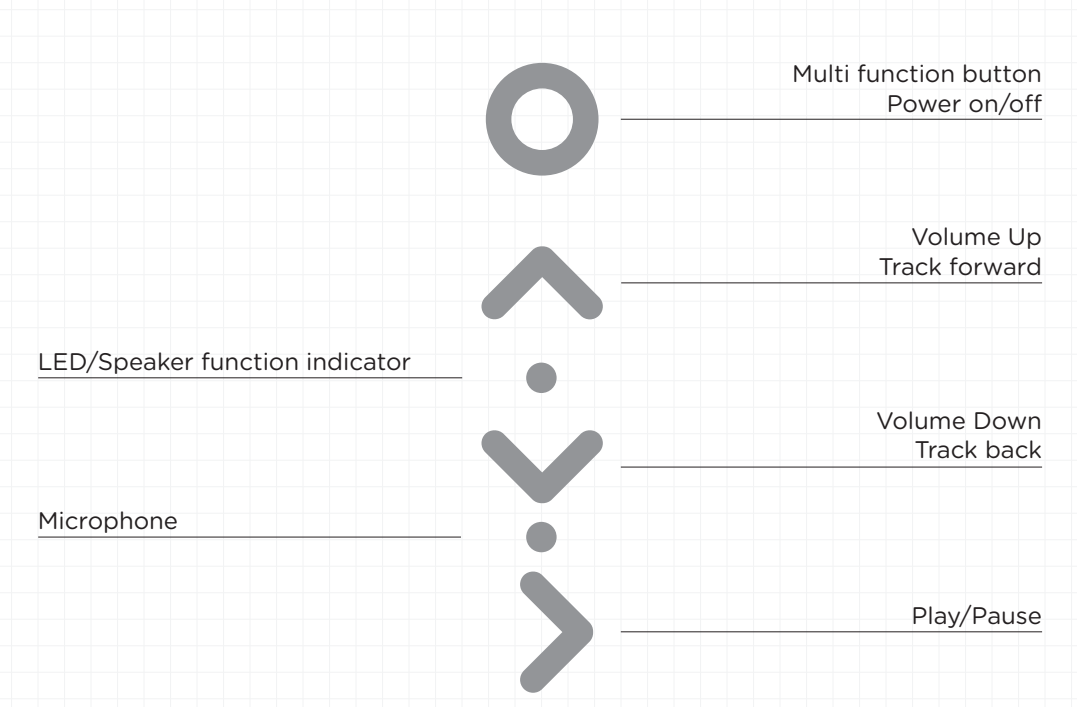

## LED/SPEAKER FUNCTION INDICATOR

Speed	Colour	Action
Rapid flash	White	Searching for Bluetooth devices
Slow flash	White	Successful pairing with Bluetooth device
Solid	White	AUX mode in use
Flashes twice quickly		SD card mode in use
Flashes slowly		Muted

## BACK OF SPEAKER OVERVIEW

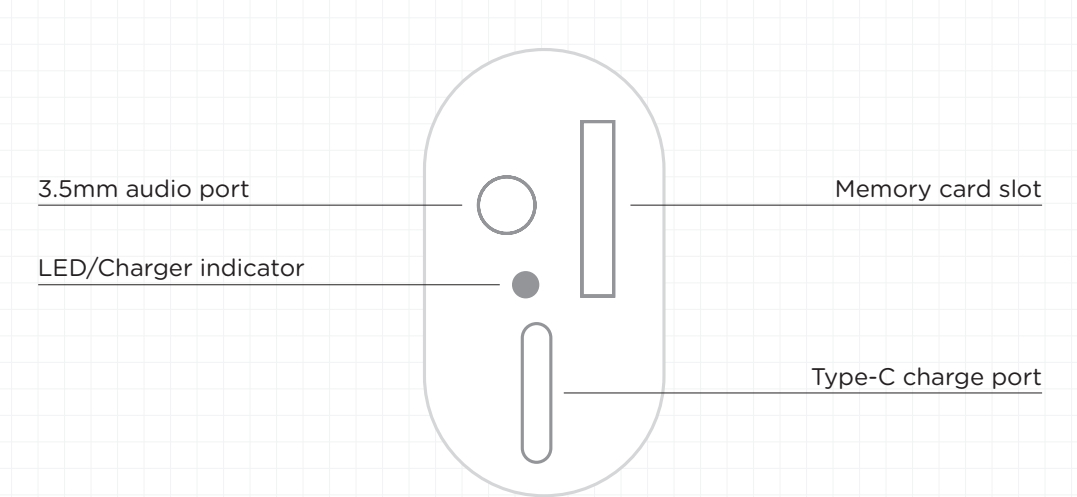


## CHARGING

Use the *included Type-C USB charge cable*. Plug one end into the DC 5V Type-C port of the unit, and plug the other end into a USB powered port or any other USB adaptor (not included).


The battery is fully charged in 6.5 hours. Charge time will be longer if speaker is being used during charging.

The red LED light indicates that the unit is charging. The red LED will turn off when the battery is fully charged. The charge cable can then be disconnected.

## TURNING SPEAKER ON/OFF


- Hold the  button for approximately 2 seconds to turn on the speaker. The speaker will make a beep sound, and the LED will flash white.
- Hold it again for approximately 2 seconds to turn off the speaker.

## BLUETOOTH PAIRING

1. Hold down the  button to enter Bluetooth mode.
2. Turn on Bluetooth mode on your mobile phone or device.
3. Search for speaker name “Moki Rumblr”.
4. Adjust the volume on your mobile phone or device to the desired level.



**Note:** Keep the speaker in range of 1 meter when pairing with your device. If the pairing is not successful, turn off the speaker and re-pair again.

Once paired with a device, the pairing connection will be remembered. It will automatically connect to that device when you turn the speaker on again.





Long press  button to disconnect existing Bluetooth connection manually.

The speaker will power off automatically to save power in case there is no operation/play with 5 minutes.

## HANDS FREE CALLS

1. Press  button once to answer an incoming call.
2. Press  button once to hang up.

## VOLUME/TRACK BUTTONS


1. Control volume from your mobile phone or Bluetooth device.
2. Short press   buttons to increase/decrease the volume.
3. Long press   buttons to go to the Next or Previous track.


## MEMORY CARD PLAY MODE

1. Plug your memory card into the memory card port on the speaker.
2. The speaker will enter memory card play mode automatically.

## TWS CONNECTION

**Two speakers can be synced and connected via TWS (True Wireless Stereo) Technology.**

1. Make sure you have 2 x Moki Rumblr speakers.
2. Quickly double click the  buttons on both speakers; the speakers will go into pairing mode to pair with each other first.
3. Wait for approximately 5-10 seconds until the two speakers “beep” once in sequence. This means both speakers have been paired.
4. The white LED on the main speaker will be ON, the white LED on the second speaker will flash.
5. Connect the main speaker to your mobile phone or device.

**Note:** Once the speakers have been paired via TWS, they will pair again each time they are turned on. If you want to unpair them, press the  button on either speaker twice. The speakers will “beep” indicating they are no longer paired.

## AUXILLARY PLAY MODE

1. Connect your 3.5 auxillary cable (not included) to the speaker.
2. Connect the other end to your audio device.
3. The LED indicator will stay solid white.

## TROUBLESHOOTING

Issue	Possible Solution
No power	<ul style="list-style-type: none"><li>• Make sure your speaker is turned on and make sure your speaker is completely charged.</li></ul>
No sound	<ul style="list-style-type: none"><li>• Make sure the volume of your speaker is not at the lowest setting.</li><li>• Make sure the connected audio device is playing audio.</li></ul>
Cannot pair the speaker with my Bluetooth device	<ul style="list-style-type: none"><li>• Make sure Bluetooth mode on your device is turned on.</li><li>• Your Bluetooth device may be out of range. Try moving it closer to the speaker.</li><li>• Move your Bluetooth device and/ or speaker away from other devices that generate electromagnetic interference, such as phones, microwave ovens, wireless network routers, or other Bluetooth devices.</li></ul>

## USER GUIDE

## BATTERY HEALTH

**To prevent the possibility of the battery from leaking, heating or catching fire, please follow these precautions:**

### Warnings

- Please use supplied USB charging cable to charge speaker.
- Please disconnect charge cable after speaker is fully charged.
- Do not continue to charge speaker after it is fully charged.
- Do not use or leave the speaker near a heat source such as a fire or a heater.
- Do not place speaker in any liquid, fire or on a heater.
- Do not hit or throw the speaker.

### Cautions

- Do not use or leave speaker in very high temperatures (ie. in direct sunlight or in a vehicle in extremely hot conditions)
- Do not use speaker where there is a lot of static electricity, otherwise the safety devices within the speaker can be damaged.
- The speaker should be stored at room temperature.
- The speaker battery should be charged and discharged every so often in order to activate and restore the battery’s energy.
- Please follow battery waste recycling guidelines when disposing of the speaker.

## E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste. Please dispose of speaker thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.

