




Power Bank+ 15,000mAh

ACC MPBP150

PRODUCT OVERVIEW

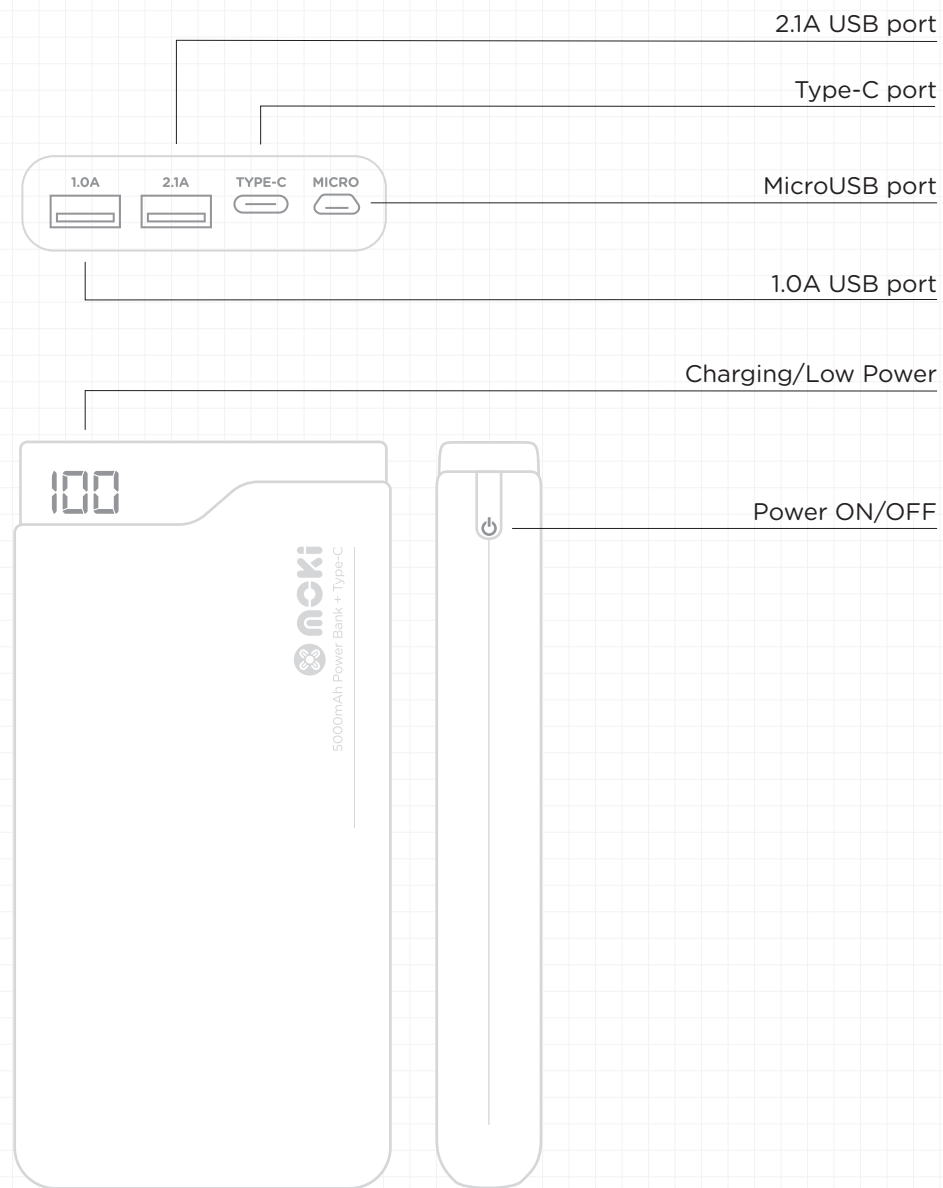

CHARGING

Recharge Power Bank+

Use the *included cable* or a Type-C to USB cable (sold separately) to recharge the *Power Bank+*.

Insert the MicroUSB (or Type-C) plug into the MicroUSB (or Type-C) port located on the top of the *Power Bank+* (see *Product Overview*).

Connect the USB plug to a USB port on a PC, laptop or USB power adaptor.

Power Bank+ LED percentage amount will increase as it charges. Recharge times will vary depending on the output power of the USB port used.

LED will display "100" when the *Power Bank+* is fully charged. Disconnect the charge cable.

Charging your device

Insert the cable into the appropriate port on your *Power Bank+*.

Insert opposite end into the device that requires charging.

LED will indicate that the device is being charged, and how much charge is left in the *Power Bank+*.

Note: To keep maximum longevity of the battery cells used in *Power Bank+*, always recharge when LED indicates low power.

Leaving the *Power Bank+* uncharged for long periods (>6 months) may reduce the capacity of the battery cells.

If you only use the *Power Bank+* occasionally or in emergencies, it is recommended to check and recharge every few months to ensure the best operation and maximum battery life.

CAUTION

To prevent against electric shock or short circuit:

- Do not use or charge any device with wet hands or in a wet/damp environment.
- Always confirm plug orientation before attempting to connect any cable.
- Do not insert anything else into ports or the body of *Power Bank+*.
- Do not attempt to open or modify the *Power Bank+*.
- Regular exposure to excessive heat (>45C) will reduce the overall life expectancy of your *Power Bank+*.
- Always recharge any device or *Power Bank+* in a ventilated area.
- Do not cover charging device or *Power Bank+* with blankets, papers or anything that will increase temperatures.
- Do not keep stored in hot cars or in direct sunlight.
- The *Power Bank+* is not a toy. Keep out of reach of children.

E-WASTE

This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE).

This means that this product must be handled according to the European Directive 2002/96/EC in order to be recycled or dismantled to minimize its impact on the environment. For further information, please contact your local or regional authorities.

Should you need to dispose of this product, please note that electrical products should not be disposed of with household waste. Please dispose of speaker thoughtfully.

SCAN THIS CODE

Visit our website for more information about this, and many other great products.

