

 
aerix

Aerix
Duet

Integrated
music center

User
manual

ENG
version

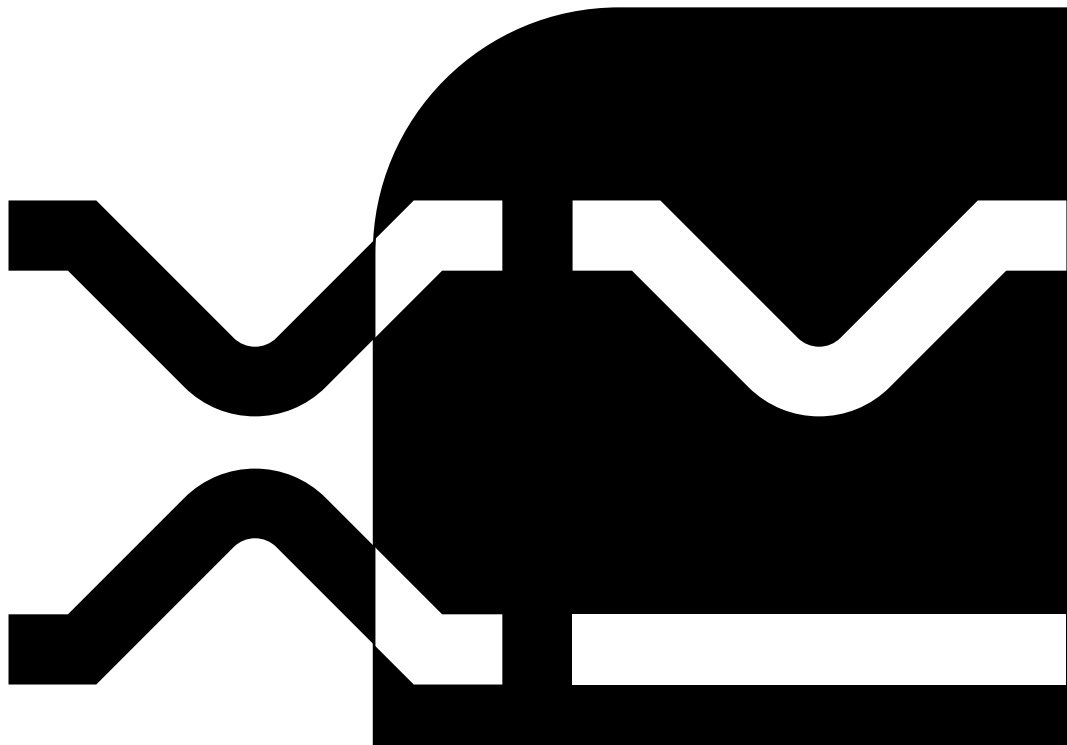


CONTENT

Getting Started	P.01
Quick Start	P.03
Remote Control	P.06
Bluetooth Music	P.08
Wi-Fi Music	P.09
AUX input & Optical input	P.10
Menu Setting	P.11
Specifications	P.12
Spotify Connect	P.13
Important Safety Instruction	P.14

GET STARTED

 - ① Duet
- ② AC power chord
- ③ AC adaptor
- ④ Remote control
- ⑤ User manual

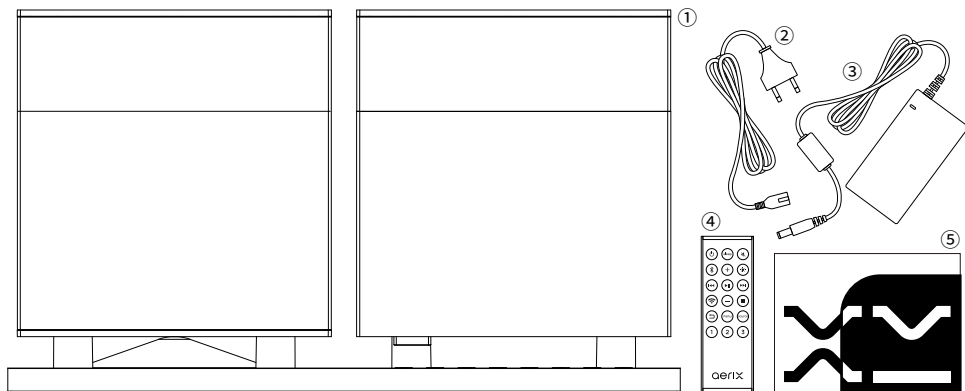

GET STARTED

Step 1.

Unpack all components from the shipping box. Please save the original packaging material in case you ever need to return the system since the limited warranty does not cover shipping damages.

Step 2.

 
Remove the insulating plastic from the bottom of remote control.

Step 3.


Insert the DC power cable of the external power supply into the DC power plug on the back panel. Connect the AC power cable of the external power supply to an AC outlet.


QUICK
START
-
FRONT

- ① Dot LED Display : Showing system info
- ② IR receiver
- ③ Transducer*2
- ④ Subwoofer

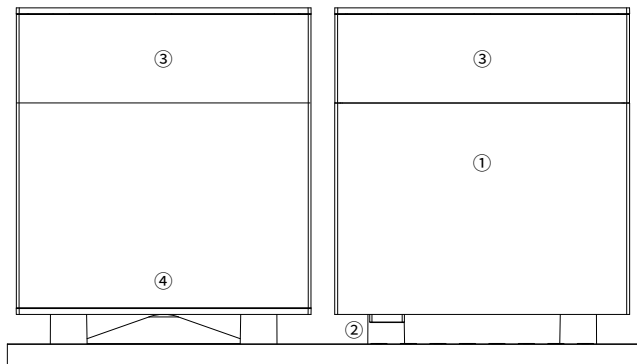


QUICK START - BUTTON

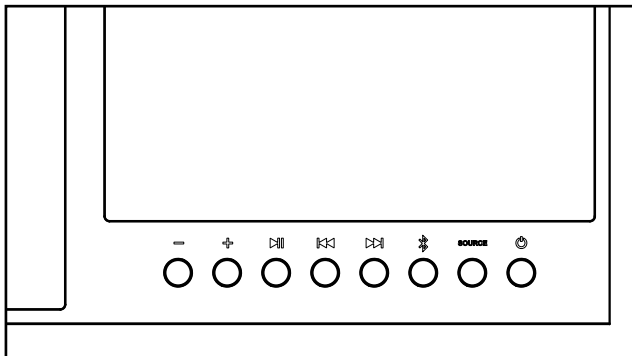 

 - Power on or Standby


SOURCE - Bluetooth, Wi-Fi, Optical, AUX


 - Bluetooth (Long press reconnect)

 - Skip forward

 - Skip back

 
 - Play/Pause Bluetooth or Wi-Fi music

 - Volume increase / adjust menu setting page up

 - Volume reduce / adjust menu setting page down





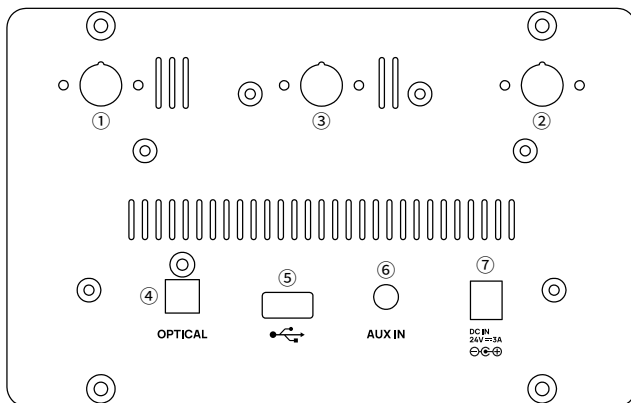










QUICK START - BACK

- ①② Wi-Fi Antenna
- ③ Bluetooth Antenna
- ④ Optical input
- ⑤ USB (For factory firmware update only)
- ⑥ AUX input
- ⑦ DC in | DC Power Plug (For 24V/3A DC Adaptor)



REMOTE CONTROL



-  | Power on / standby
-  | Press once to switch 5/10/15/20/30 minute ; countdown into standby mode
-  | Mute
-  | Bluetooth pairing or disconnection
-  | Volume increase or adjust menu setting page up
-  | LED display & indicator on or off ① Press once: LED display off ② Press twice: power indicator off ③ Press three times: LED display & indicator off ④ Press four times: LED display & indicator on
-  | Skip back
-  | Play / pause Wi-Fi or Bluetooth music
-  | Skip forward
-  | Wi-Fi model / disconnection (Long press 8 second)
-  | Volume reduce or adjust menu setting page down
-  | Stop Wi-Fi or Bluetooth music
-  | Return command
-  | Setting time / alarm time / alarm on or off / sound mode
-  | Select Bluetooth, Wi-Fi, optical, AUX input
- 1 2 3** | Sound model (1. Natural, 2. Hyper, 3. Retro)

REMOTE CONTROL

How to change battery in the remote control?

1. Open the battery lid that is on the backside of the remote control.
2. Remove the existing battery and replace it with a new 3 V battery (CR2025 type).
3. Inside the new battery compartment there are symbols showing in which direction the batteries should be placed.



BLUETOOTH MUSIC

1. Press Duet source key to Bluetooth mode (display shows "PAIRING").
2. Turn on your smart device (source) for Bluetooth function. Select "Aerix Duet MK3" from the pairing list.
3. As soon as they pair, they will automatically connect and your Duet will display " PAIRED".
4. To enter pairing mode again, press Bluetooth key form Remote control.
5. For some devices you may need to input "0000" as the pairing password.
6. Display may show song's info when you stream Web stations.
7. When system re-boot, it will auto connecting your mobile device.

To get the best sound quality when streaming audio to your Duet over Bluetooth, we highly recommend using a device that supports aptX or AAC.

Wi-Fi MUSIC

It is recommended to utilize the AirPlay function on Apple devices for configuring and playing Wi-Fi music. (This includes iPhone, iPad, iPod, and iMac.)

1. Download Play-Fi APP first (Android: Play store / iOS:App Store /Windows:<https://play-fi.com/>)
2. Go to Duet Menu setting page, select WPS or AP mode.
3. Setting Wi-Fi on your device with "PlayFiDevicexxxxx".
4. Open Play-Fi App on your device.
5. Select Wi-Fi AP ID
6. Setup AP to Duet (Display Searching → CONNECTING TO Wi-Fi → CONNECTED ; mean connection success).
7. System may ask you device update (Do not disconnect while system updating, or system will damage!)
8. Now, you can play Wi-Fi music by Play-Fi APP! (while play Wi-Fi music display will show "STREAMING")
9. If system reboot, change source to Wi-Fi. It will display "CONNECTING TO Wi-Fi", After a few seconds it will to "CONNECTED".

Short cut (Keys on the machine):

1. Wi-Fi music:press Source button key for **3 seconds**.
2. WPS mode:press Source button key for **3-8 seconds**.
3. AP mode:press Source button key **over 8 seconds**.

AUX INPUT

Connect the 3.5mm audio cable to the external AUX connector on the back panel. You can also use your 3.5mm to RCA audio cable and listen on any external music source.

OPTICAL INPUT

Connect your optical cable to the external optical connector on the back panel.

MENU SETTING

TIME:

- Setting Time
- Enter to adjust Hour/Minute
- Use **+/-** key to increase or reduce
- Use **◀▶** to switch Hour/Minute

ALARM:

- Setting Alarm time As setting time step
- On/off (Setting Alarm function on or off by up or down key)

WI-FI:

- Setting WPS or AP Mode (by up or down key. Default is AP)
- Clear Data

SOUND:

Setting sound mode to 1. Natural, 2. Hyper, 3. Retro mode

SPECIFICATIONS

Acoustic

2 unit of 1.5" Transducer

5.25" Heavy magnetic rounded Subwoofer

Frequency response : 45 Hz ~ 20,000 Hz

360° Sound Coverage

Power

Transducer : 50W x2

Subwoofer : 100W x1, THD < 0.5%

Control Keys

Vol.- / Vol.+ / Play / Back / Next / Bluetooth / Source / Power

Input

DC 24V/3A, Wi-Fi Antenna x2, Bluetooth Antenna x1, AUX , Optical

Dimensions

W448 x D257.4 x H250.2 mm


Netweight

10 kg

HOW TO USE SPOTIFY CONNECT



You'll need Spotify Premium to use Connect, see details overleaf.

1. Add your new device to the same wifi network as your phone, tablet or PC (see product user instructions for details).
2. Open the Spotify app on your phone, tablet or PC, and play any song.
3. If you're using the app on a phone - tap the song image in the bottom left of the screen. For tablet and PC move to step 4.
4. Tap the Connect icon .
5. Pick your device from the list. If you can't see it, just check it's connected to the same wifi network as your phone, tablet or PC.

All done! Happy listening.

Licenses

The Spotify Software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses.

IMPORTANT SAFETY INSTRUCTIONS



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-sup

IMPORTANT SAFETY INSTRUCTIONS

Caution: Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

ply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

13. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on apparatus.

14. Correct disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

15. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

16. Do not ingest the battery, chemical burn hazard.

17. (The remote control supplied with) This product contains a

IMPORTANT SAFETY INSTRUCTIONS

This product contains a lithium coin cell battery. Abuse of this can result in:

- smoke or gas hazard
- heat hazard
- fire hazard
- explosion hazard

coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

18. Keep new and used battery away from children.

19. If the battery compartment does not close securely, stop using the product and keep it away from children.

20. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

21. The battery (battery, batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

22. Do not handle leaking or damaged Lithium batteries.

23. Risk of leakage. Only use the specified type of batteries. Never mix new and used batteries. Observe correct polarity. Remove batteries from products that are not in use for extended periods of time. Store batteries in a dry place.

24. Do not recharge non-rechargeable batteries.

25. Avoid exposure to extreme heat or cold.

IMPORTANT SAFETY INSTRUCTIONS

Ventilation

Do not block any ventilation openings on the back or under the Duet. To ensure reliable operation of the product and to protect it from overheating, put the Duet in a position and location that will not interfere with its proper ventilation. For example, do not place the Duet on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in position, such as in a bookcase or in a cabinet that may keep air from flowing through its ventilation openings. Do not push objects of any kind through openings.

Overloading

To prevent risk of fire or electric shock, avoid overloading wall outlets or extension cords.

Open fire

Keep this product a safe distance away from any open flame such as a lit candle. No open flame sources, such as lighted candles, should be placed on the product.

IMPORTANT SAFETY INSTRUCTIONS

Operating Temperatures

The recommended operating temperature range for the product is 41 to 104 degrees Fahrenheit (5 to 40 degrees Celsius).

Front grille panel

Never remove front grille panel because the panel is non detachable and will void the Limited Warranty.

Avoid Hearing Damage

Playing very loud music for an extended period of time can result in permanent hearing loss.

Label location

The product labels and safety related markings are located at the bottom of the product.

IMPORTANT SAFETY INSTRUCTIONS



Here by, Aerix Co., Ltd., declares that this Integrated Music Center/Duet is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC."

This device operates in the 5150-5350 MHz frequency range, and is restricted to indoor use only. Outdoor operation in this range is prohibited.

CONTACT
US

Official website

www.aerix.co

Email

info@aerix.co

Thank you for your purchase and for joining the Aerix community!

