

Wheel Replacement Instructions



Step 1:

Place the rolling bag on its side.

Use the included 5 mm hex wrench to remove the wheel screw by turning it **counterclockwise**.



Step 3a:

Slide the new wheel onto the axle. The wheel is asymmetrical, so make sure it's oriented as shown with the *longer side facing down* so that it slides into the groove at the base of the axle.



Step 4:

New Screw and Washer Installation

Place the lock washer on the screw and using your fingers, thread the screw **clockwise** into the axle.

Finish tightening the screw using the 5 mm hex wrench until snug.

If the wheel is binding, back out the screw just to the point where the wheel spins freely.



Step 2:

Pull the wheel up and off the axle.

Clean the axle and wheel housing using a damp cloth.



Step 3b:

Confirm the wheel bearing is seated correctly on the axle as shown.

Included with the kit:

[1x] 5 mm Hex Wrench; [2x] Machine Screws;
[2x] Lock Washers; [2x] Wheels

CONTACT US

If you require any assistance, please contact our customer support team via:

www.thinktankphoto.com/pages/contact-us

©2021 Think Tank Photo PIN0062a