

For more information please visit: www.thinktankphoto.com

TRIPOD/LIGHT STAND ATTACHMENT



Step 1: Place the "Tripod Strap" under the webbing on the side of the bag, matching the hook and loop material to keep the strap in position. When attaching a tripod or light stand(s), hook the strap under a tightening knob to minimize movement while traveling.

Step 2: Place a tripod leg or two into the side pocket. Attach the second tripod strap directly above the side pocket to secure the lower portion of the tripod or light stand(s). Tighten both tripod straps to secure.

Due to the weight of video and photographic equipment, we recommend that you **do not lift the roller off ground or pull up stairs by the aluminum handle system.** Please use the fabric handle on top of the bag itself.



RAIN COVER ATTACHMENT



Step 1: Start at bottom of the roller and place front feet through holes in the rain cover.



Step 2: Pull rain cover to the top of the roller and detach the hook and loop panel. Place retractable handle through the slot.



Step 3: Tighten the rain cover.



Step 4: Attach hook and loop panel between retractable handle tubes. The rain cover will bunch-up around the handle tubes so the hook and loop panel will secure only in the middle.