

For more information please visit: www.thinktankphoto.com

TRIPOD OR MONOPOD ATTACHMENT



Step 1: Locate the two adjustable tripod straps provided with the StreetWalker.



Step 2: To open the Double Gatekeeper buckle, press the gate inwards then depress the top plastic bar in order to release the gate.



Step 3: Slide the opened Double Gatekeeper buckle through the webbing loop and close it by depressing the top plastic bar and securing the gate.



Step 4: Attach the tripod straps to the webbing loops at the top and near the bottom of the StreetWalker.


EXTENDABLE HANDLE



Open the zipper flap on top of the StreetWalker to reveal the extendable handle. To raise the handle, **press and hold** the button on the middle of the handle and simultaneously raise the handle completely. The release button must always be held down for the handle to be fully extended or retracted.

HANDLE USE

Due to the weight of video and photographic equipment, we recommend that you **do not lift the roller off ground or pull up stairs by the aluminum handle system**. Please use the fabric handle on top of the bag itself.

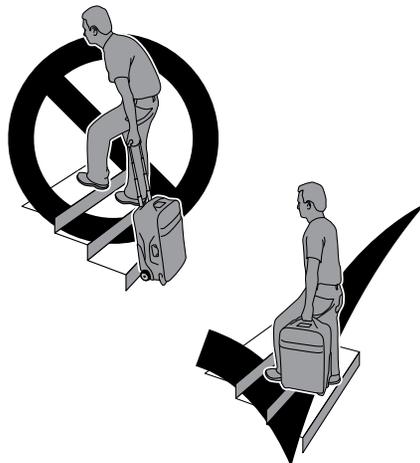

CARRYING A TRIPOD



Step 1: Insert two tripod legs into the outside lower pocket.



Step 2: Unlock the adjustable strap, then pull the strap tight around the top of the tripod. Tighten the lower strap around the exposed leg for additional stability.

For more information please visit: www.thinktankphoto.com

DEPLOYING BACKPACK STRAPS



Step 1: Completely unzip the panel covering the backpack straps.



Step 2: Pull the panel down fold the top half of the zippered panel underneath to create a lumbar pad.



Step 3: Wrap the panel to the bottom of the bag and tightly attach the panel in place with the hook and loop.



Step 4: Untuck the backpack straps from the pocket and adjust as needed for proper fit. Reinsert the backpack straps into the pocket to use the backpack as a rolling bag.

RAIN COVER ATTACHMENT



Step 1: Place front feet through holes in rain cover and pull rain cover to the top of the roller.



Step 2: Detach the hook/loop panel at the top of the bag. Place retractable handle through slot and tighten rain cover.



Step 3: Re-attach hook/loop panel between retractable handle tubes and tighten drawstring to secure the rain cover.

ADJUSTABLE STERNUM STRAP



The sternum strap adjusts up and down along the blue rails on the backpack straps.