

Video Rig Rolling Bag Instructions



For more information please visit: www.thinktankphoto.com

SETTING THE ZIPPER LOCK



Step 1: To LOCK the main compartment, push the ends of the sliders HARD into the slots.



Step 2: To UNLOCK the main compartment, set your combination then push the end buttons INWARD.



Step 3: The lock's combination is preset from the factory at 0 0 0. To CHANGE the combination, there is a hole on the side of the lock. Push the button IN with a pen until you hear a "click."



Step 4: SET the numbers to your desired combination. REMEMBER your new combination!



Step 5: PUSH both ends inward HARD until you hear a "click." Your new combination is now active.



TSA (Transportation Security Authorization) lock allows for airport personnel to access your bag. Think Tank Photo does not recommend gate-checking your gear, but there may be situations where airport personnel requires entry. Please note that there is no individual key for this bag.

SECURITY ID PLATE



 
The Security ID plate located on the back may be registered at: thinktankphoto.com/lostandfound_registration.aspx

SECURITY CABLE AND COMBINATION LOCK



Security cable and combination lock in top pocket can be used to secure zipper and lock the bag to immovable objects.

SETTING THE CABLE LOCK

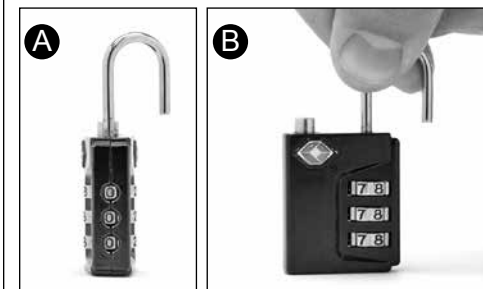

Turn the dials and align the numbers so that 0-0-0 is visible inside the indicator window. (Figure A).

Pull up the shackle and turn 90° counter-clockwise to align the small protrusion on the shackle with the notch on the lock body.

Press the shackle down firmly and then turn another 90°. (Figure B).

With the shackle still turned in the position above, turn the dials to your own personal combination.

 
Return the shackle to the original position. Your personal combination is now ready to use.

For more information please visit: www.thinktankphoto.com

LARGE TRIPOD/LIGHTSTAND ATTACHMENT



Step 1: Place the "Tripod Strap" under the webbing on the side of the bag, matching the hook and loop material to keep the strap in position. When attaching a tripod or lightstand(s), hook the strap under a tightening knob to minimize movement while traveling.

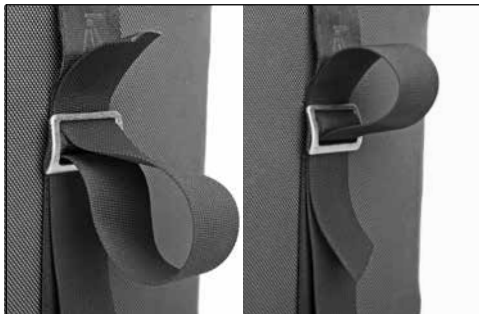

Step 2: Thread the tripod cup through the buckle on the right side of the bag as shown. Be sure to back-thread the webbing to prevent the strap from loosening with use.



Step 3: Place feet into tripod cup and adjust the length of strap so that the tripod cup has adequate clearance from the ground.



Step 4: Attach "Compression Strap" to secure the lower portion of the tripod or lightstand(s). Tighten both the Compression Strap and Tripod Strap to secure.

TRIPOD/LIGHTSTAND ATTACHMENT

 


Step 1: Place the "Tripod Strap" under the webbing on the side of the bag, matching the hook and loop material to keep the strap in position. When attaching a tripod or lightstand(s), hook the strap under a tightening knob to minimize movement while traveling.




Step 2: Attach "Compression Strap" to secure the lower portion of the tripod or lightstand(s). Tighten both the Compression Strap and Tripod Strap to secure.

VERTICAL SUPPORTS

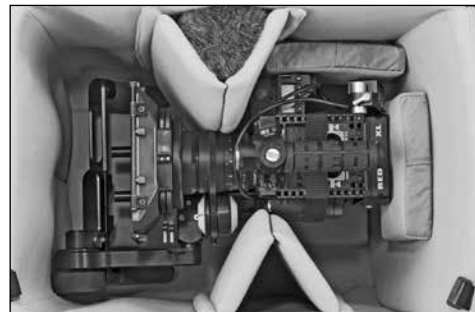

The vertical supports help to stabilize your camera. Position each one at a point that is able to stabilize the rig (usually the camera body). If there are large protrusions (viewfinder or handle grip) on one side, use the larger vertical support. Depending on your camera size, you will most likely use the smaller vertical support on the opposite side.

 TIE-DOWN STRAP

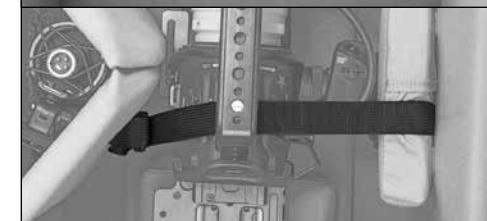

Use the tie down strap to secure your camera during transit.