

Video Tripod Manager 44

thinkTANK®

For more information please visit: www.thinktankphoto.com



The Security ID plate located on the back may be registered at:

thinktankphoto.com/lostandfound_registration.aspx




Security cable and combination lock in top pocket can be used to secure zipper and lock the bag to immovable objects.



TSA combination lock for securing main zipper. There are many instances when photographers must leave behind some or all of their gear. It is absolutely vital that this gear be secured from theft.

SETTING THE CABLE LOCK

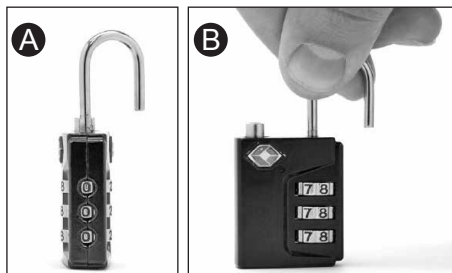

1. Turn the dials and align the numbers so that 0-0-0 is visible inside the indicator window. (Figure A).
2. Pull up the shackle and turn 90° counter-clockwise to align the small protrusion on the shackle with the notch on the lock body.
3. Press the shackle down firmly and then turn another 90°. (Figure B).
4. With the shackle still turned in the position above, turn the dials to your own personal combination.
5. Return the shackle to the original position. Your personal combination is now ready to use.