

Purafide

 
XP120 Air Purifier

Owners Manual

Performance Index


Product Name	XP120 Air Purifier
Product type	Air Purifier Unit
Rated Voltage	24V \approx 1.5A
Rated Power	16W
Product Usage	Removes pollutants such as particulate matter, gas pollutants and microorganisms in the air.
Method of Cleaning	(2) H13 HEPA & Activated Carbon Filters
Particulates CADR	120m ³ /h
Energy Efficiency Index	Qualified (Particulates)
Noise	< 30 dB - 55dB
Coverage area	Cleans 360 square feet every 30 minutes
Product size	6.5X6.5X9 Inches
Weight	3 lbs

Product Structure

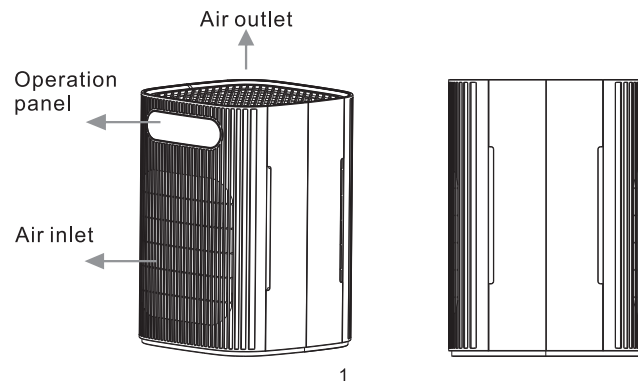



Please read this manual completely before using this product.

 Button control

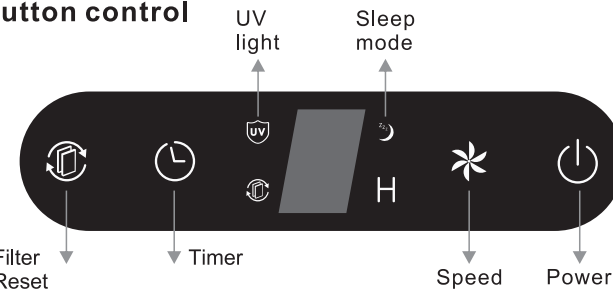

Setup instructions

  - ◆ **This unit holds two filters**
Remove the front and back panels by pulling on the sides of the panels to open.
- They will be tight, so pull hard.
- Remove the filters from the plastic bags and put them back in the unit before use.

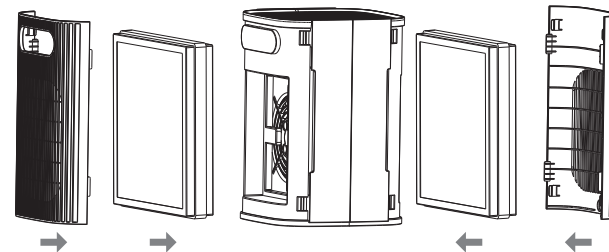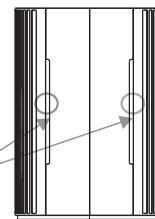

Reminder: Make sure to remove the plastic bags on the filters.

How to use

Plug unit in: Once the unit has power you will hear a chime, power indicator will turn red and the unit enters a standby state.

Power on: After the power button is pressed, you will hear a chime and the control panel lights up. The unit is now in operation mode, the UV light is automatically turned on, and the unit starts on fan speed 2 (medium).

Fan speed: To change the fan speed, press the 'fan' button once to enter fan speed mode, then press the button again to change speeds. The display will show 1, 2, 3 and sleep mode. (Low, Medium, High, Sleep/Silent)

Timer Mode: Automatically turns the unit off once the time you set is reached. Press the timer button to enter timer mode, press the button again to set the time, and the digital display will show the time for 1-8 hours. Press for two seconds to cancel the timer. When the timer is active the display will light up an "H" and show the remaining time and not the fan speed.

Filter Replace and Reset: When the filter replacement icon is lit, it is necessary to replace the filter. Once you replace the filter, press the filter reset button and hold for 3 seconds to reset the unit.

Sleep mode: In sleep mode, the sleep icon is lit, and all other lights are off. Press any key to wake up the display and press the fan speed to exit the sleep mode.

Filter maintenance

The filters will need to be replaced about every two - three months.

The filter icon will light up after every 1500 hours of use, prompting the need to change the filters. After the filters are replaced, pressing the reset button for 3 seconds the filter icon goes out.

Do not wash the filters in water, these filters are not washable. Please dispose of filters properly. If needed you can vacuum the HEPA filter.

 
If the filter screen is not reset 500 hours after the icon is on, the reset button will flash red slowly to prompt the user to change the filters.

※Tips

- Turn the unit off and unplug the power cord before cleaning and maintenance.
- Do not operate with the filter removed (any the dust that is sucked into the unit may cause equipment failure).
- Unplug the unit if it will not be used for a long period of time, as it uses a very small amounts of power in the standby state.
- Environmental factors, such as, heavy dust, pets, smokers, severe air pollution may shorten the filter replacement cycle.

Precautions:

1.Placing the unit near a heater may cause deformation and/or discoloration of the unit over time.

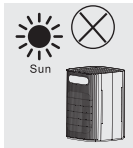


2. In order to effectively circulate the air in the room, do not block the air inlets or outlet. Place the unit about 3 inches from the wall, furniture, curtains, etc.



3. Do not place objects on the unit as it may cause vibration or the machine to malfunction. This is especially true of magnets and metal objects.

 4. Do not block the air inlet or outlet or place objects on, in or in front of the air inlet or outlet.

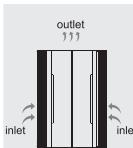

5. You may need to clean the outside of the front and back panels at times. This is where dust is pulled in the the filters and some dust and hair can get trapped on these panels. Just use a dry cloth to clean.

6. Ensure the power cord is properly plugged into an outlet and is securely plugged into the back of the unit.

Warning

Prohibited

1. Do not shake the machine while it is running.

2. Do not pull on the power cord while moving or storing it. Pulling the power cord may cause a short circuit or damage to the inside of the power cord, resulting in fire or electric shock.

3. Do not cut, excessively twist or pull the power cord. If the power cord is damaged, it must be replaced by a professional to avoid danger. Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.

4. Do not use with wet hands or if the plug is wet otherwise there is a danger of electric shock.

5. Do not use power supplies, universal sockets or connected devices that exceed the rated value 24V adapter. Using a universal outlet that exceeds the rated value or connecting the power supply may cause the power cord to overheat and cause a fire.

6. Do not put your fingers or metal objects into the gap of the air outlet, otherwise it may cause electric shock or injury.

7. Do not allow water, flammable detergents or other liquids to enter the unit in order to avoid electric shock or fire.

8.This unit is not a substitute for normal ventilation equipment, daily vacuum cleaning and range hoods used in the kitchen.

9. Do not use this unit directly next to gas appliances, heating devices or stoves.

10.Do not use this unit in an extremely wet or humid room as the filter needs to remain dry.

11.Never place units on unstable surfaces as the unit may fall resulting in injury, damage, electric shock or fire.



Warnings

1.Turn off the power to the machine immediately when any of the following conditions occur as they may cause electric shock, sparks or smoke:
 • There is abnormal sound or vibration during operation.
 •The product is abnormally hot and has a burnt odor.

2.Clean the power plug if:
 • The power plug is dusty, moisture may damage the insulated part of the plug, resulting in a fire.
 • The appliance is not used for a long time, please unplug the power cord.

3.Be sure to disconnect the power before performing maintenance on the unit to avoid electric shock and injury.

4.Plug the cord securely into the power outlet (if the plug is not securely inserted, it may cause electric shock due to overheating or even cause a fire.)
 • Do not use a damaged plug or a loose power outlet.

5.Disconnect the power cord from the wall outlet by pulling on the plug box.
 • Pulling on the power cord to unplug may cause damage to the power cord, electric shock, short circuit, or fire.

6.If any of the following conditions occur, unplug the unit for 1 hour, remove and replace the filters, ensure both covers are secured in place and plug unit back in and see if the condition remains, if so contact support:

- The buttons do not work.
- The power cord or plug is abnormally hot.
- An abnormal sound or vibration.
- Any other abnormalities or malfunctions.

7.Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.

For IEC:This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.If the supply cord is damaged, it must be replaced by a qualified persons in order to avoid a hazard.

For EN:This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Troubleshooting your unit

Issue	Solution
Unit won't power on	1. Is the unit plugged in to an outlet with power? 2. Make sure the filter covers are snapped in place completely. 3. Check the power cord on the back of the unit.
Buttons not responsive	1. Is the unit plugged in with power? 2. Make sure you are pressing directly on the button on the control panel. 3. See "How To Use" section for control panel operations.
Notice an odd odor	1. Are the filters removed from the plastic bag? 2. Carbon filters absorb odor like sponges and once they are full they can not absorb more. Everyone's homes are different and some use up the carbon filters faster than others.
Removing panel doors	The front and back panel doors snap to the unit tightly, we know. Pull from the slots on the side of the units firmly.

Packing details

Air Purifier Unit	1pc
H13 HEPA Filter	2 pcs
Product Manual	1pc
Power Adapter	1pc

Certificate of Quality

INSPECTION MAN _____

The products are approved to leave the factory after passing inspection