


## Izdelek

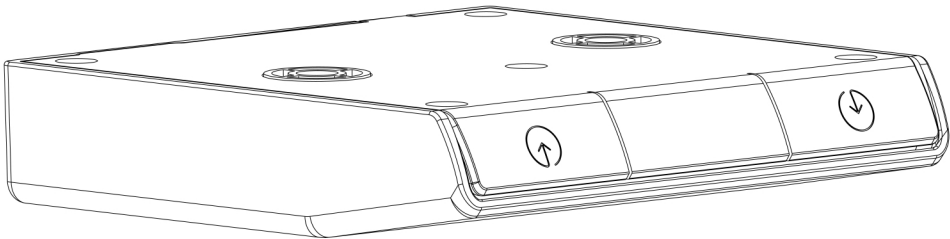

## Specifikacije

### 1. Dva gumba: "↑", "↓".

Nastavi mizo navzgor; "↑"

Nastavi mizo navdol; "↓".

## Navodila

### Ponastavitev

a) Ko je miza v najnižjem položaju, pritisnite gumb "↓" za 5 s, da vstopite v način ponastavitve, ponastavitev bo končana, dokler dvižni sistem ne doseže dna, nato pa se odbije in ustavi.

b) Ko dvižni sistem odpove, spustite ter pritisnite gumb "↑". Ponastavitev bo končana, dokler dvižni sistem ne doseže dna, nato pa se odbije in ustavi.

### Odpravljanje težav

Če se po pritisku gumbov po določenem času miza ne odzove, počakajte več kot 18 minut, preden ga ponovno uporabite.

#### Waste disposal



This sign indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can recycle the product, ensuring environmental safety.