

PLEASE READ AND SAVE THESE INSTRUCTIONS

SUNPAD™ Seedling

Heat Mat



Thank you for choosing a SUNPAD™ PRO Heat Mat part of the SUNPACK™ family of Seed Propagation products. SUNPAD™ Heat Mats have been sold under other brand names to satisfied customers for over 25 years. Your complete satisfaction is very important to us. For safety and optimal performance, please carefully read these instructions before operating this product.

How to Use Your SUNPAD™ PRO Seedling Heat Mat

- Place the mat on a stable, flat, surface without any standing water. SUNPAD™ Heat Mats are for indoor use only
- Insert the power cord into a standard 120V outlet
- Place propagation trays or other plant containers on top of the heat mat. For best results, cover the trays or containers with a humidity dome
- SUNPAD™ Heat Mats are designed to raise the root area temperature of your plants approximately 10 to 20 degrees Fahrenheit above the current ambient air temperature
- To maintain a more precise temperature, we recommend using our SUNPACK™ Digital Heat Mat Thermostat [SPTEMP]

IMPORTANT WARNINGS

- Fire or electric shock may result from improper use
- Do not immerse the heat mat in water
- Make sure the surface under the heat mat is free of sharp points or objects which might puncture the mat

- Do not place the mat inside tray or cover directly with soil or growing medium
- Do not cover the heat mat with any type of insulating material
- Do not use the heat mat if it shows any signs of deterioration such as cracking, melting or discoloration
- Keep the surface of the heat mat clean and free of debris
- Disconnect heat mat from electrical power before cleaning the heat mat
- Do not pick up the heat mat by the electrical cord as it may cause damage to the heat mat

12 MONTH LIMITED WARRANTY AND DISCLAIMER

What the Warranty Covers:

DSM&T warrants this product to the original purchaser against defective material and workmanship that occurs during normal use for a period of 12 months from the date of purchase. At the company's option, DSM&T will either repair or replace the product with the same product free of charge during the warranty period. This warranty is limited to replacement or repair of the product only and does not include personal injury, property loss or damage arising from the use of the product. Purchaser is responsible for retaining the original proof of purchase receipt to validate this warranty.

Warranty Exclusions:

Damage resulting from accident, misuse, abuse, modification or tampering with the product, lack of reasonable care or other failure not resulting from defects in materials or workmanship. Some states do not allow the exclusion or limitation of consequential damages, so the above limitations may not apply to you.

Disclaimer:

SUNPAD Heat Mats have been designed and tested only for use in their specified application. It is the responsibility of the customer to ensure that the product is used according to DSM&T's instructions and warnings.

For Warranty Service:

Contact the company by mail or telephone to obtain a Return Authorization number

DSM&T Company Inc.
10609 Business Drive
Fontana, CA 92337

Phone: 909 357-7960

Toll Free: 800 525-0201

Fax: 909 357-7950

Email: info@sunpackproducts.com

Deliver, mail, or ship the defective product together with a copy of the original bill of sale to the above address, Attn: Heat Mat RMA

You must pay any postage, shipping, or other expenses and if covered by the warranty, DSM&T will pay the return shipping charges to any destination within the United States or Canada.

SUNPAD Heat Mats are covered by the following U.S. patents: 9,370,045, 9,781,772 and 10,064,243

© 2020 SUNPAD™