

FilterQueen®  
**CORDLESS STICK VACUUM**  
FQSVBO



# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS PRIOR TO USING THIS APPLIANCE.



**WARNING: to reduce the risk of fire, electric shock or injury:**

- Check that the voltage indicated on the electrical plug corresponds with that of the local network before connecting the battery to the main power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use the appliance for anything other than its intended use.
- Do not carry the appliance with your finger on the power switch, as to avoid accidents.
- To disconnect the appliance, unplug the electrical cord from the wall outlet. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not touch floor nozzle when the vacuum cleaner is on.
- Do not put any object into vacuum cleaner openings. Do not use with any openings blocked; keep free of dust, lint, hair or anything that may reduce airflow.
- Do not use outdoors or on wet surfaces.
- Do not operate the vacuum cleaner or charger if it has been damaged in any way. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact Customer Service.
- Avoid excessive heat and damage to the unit or battery.
- Do not pull the charger by cord, use cord as a handle, or cause damage to the cord.
- Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity for the charger.
- Do not handle charger or vacuum cleaner with wet hands.
- Use only with designated battery pack. Other battery pack may create a risk of injury and fire.
- Liquid ejected from the battery may cause irritation or burns. If the liquid gets on the skin, (1) seek medical attention, (2) wash quickly with soap and water, and (3) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes.
- When battery pack is not in use, keep away from metal objects, like paper clips, coins, keys, nails, screws, etc., that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- This product is functioning at a temperature range within 40°F - 104°F.
- Do not use battery/appliance that is damaged/modified, this may result in fire, explosion or injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 266°F may cause explosion.
- Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.
- Store vacuum cleaner and charger indoors in a cool, dry area.
- Do not incinerate this appliance even if it is severely damaged.
- Contact local waste facility before discarding in trash.

<b>INPUT</b>	100-240V
<b>OUTPUT</b>	27VDC, 500mA
<b>POWER</b>	180W
<b>BATTERY CAPACITY</b>	2600mAh

## PRODUCT PARTS LIST



2-in-1 Brush



Crevice Nozzle



Wall Bracket




Filter



Power Adapter



Main Power Unit

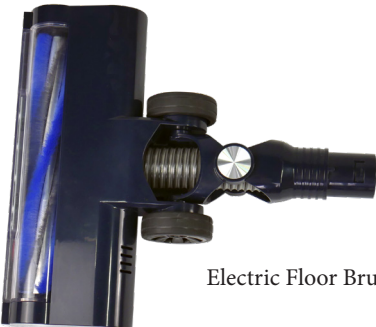

Electric Floor Brush




Adjustable Wand

# GET TO KNOW YOUR STICK VACUUM




# GET TO KNOW YOUR STICK VACUUM

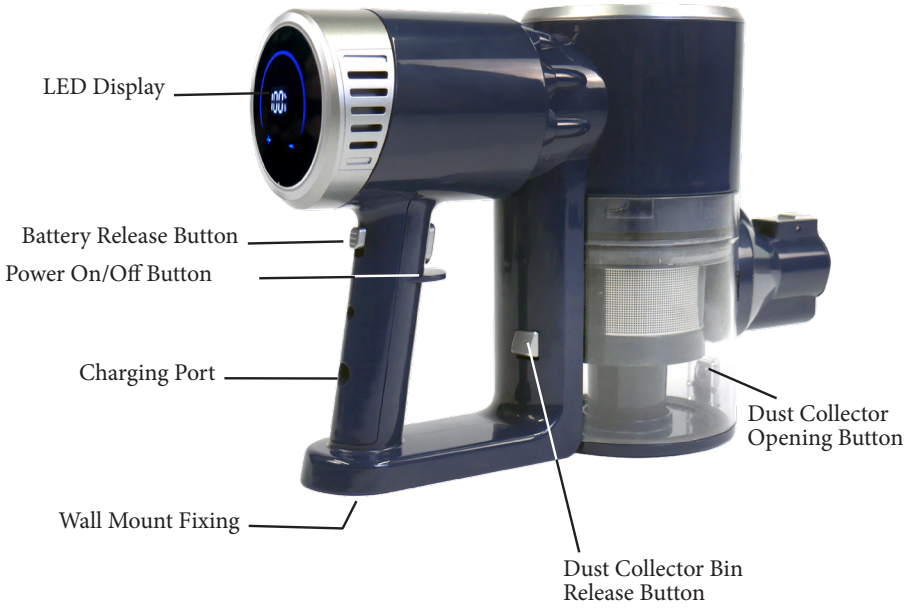

# ASSEMBLY

Attach different accessories for different tasks as illustrated.

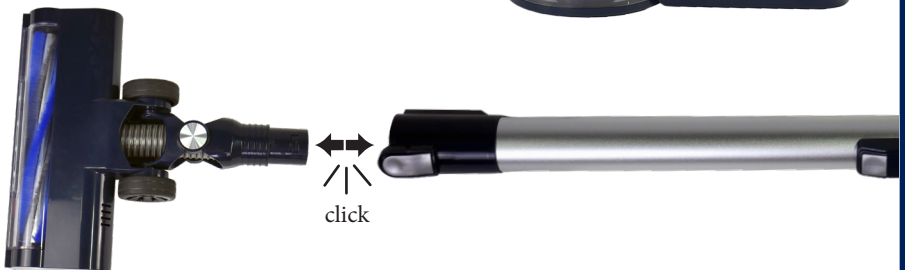

# OPERATING

Before use, make sure that:

1. There is sufficient power.
2. The dust collector and filters have been cleaned, dried and are in place.



Press the power button.



Press suction strength button to switch suction level.



Turn vacuum power head for better reach under furniture.



Insert the crevice tool to clean in hard to reach places.



Adjust the wand for different uses and heights.



Insert the 2-in-1 brush to clean upholstery or curtains.

# EMPTYING DUST COLLECTOR



1. Hold vacuum base, press the dust collector opening button while over a garbage can.



2. Click bottom into place once emptying is complete.


# REMOVING DUST COLLECTOR





1. Hold vacuum base, twist the dust collector while pressing release button.

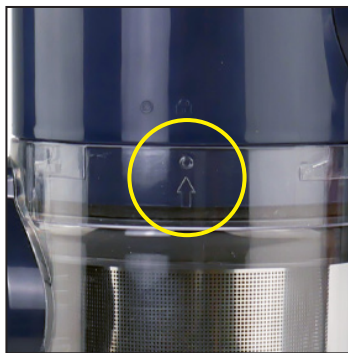

2. Twist dust collector while pressing button to release.



3. Rotate the dust collector so that the  lines up with the  to click the dust collector back into place.



# DUST COLLECTOR & FILTER CLEANING



1. Take out HEPA washable filter and the metal filter from the dust collector.



2. Clean filters with warm water and mild dish soap.



3. Air dry the washable HEPA filter and metal filter until they are completely dry.





4. Clean dust collector with damp cloth and mild soap. Let air dry.




5. Once filters and dust collector are dry, place together and lock into place.



6. Rotate the dust collector so that the  lines up with the  to click the dust collector back into place.

# ROLLER BRUSH CLEANING

Make sure electric floor brush attachment is detached from the wand. Do not use sharp tools when cleaning the roller brush to avoid damage.

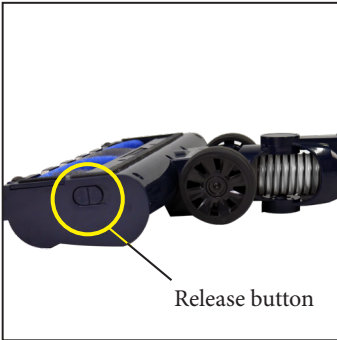

1. Press release button on the side of the electric floor brush to release rolling brush.



2. Remove the rolling brush.



3. Remove hair, strings, etc. from the roller brush.



4. Place the rolling brush back into position and click in.

# WALL MOUNTING



1. Measure the distance between the bracket holes.



2. Drill two holes as measured into the wall. Secure the backplate using the screws provided.



3. Align the vacuum cleaner at the raised point of the bracket and hang.

The package contains adhesive pads that can be used to install the bracket. It is highly recommended to use screws to fit the wall mount more securely.

# BATTERY CHARGING

## Whole Machine Charging

Unplug the power adapter once fully charged.



Plug power adapter into main unit.

## Charge Battery Separately

Remove battery and charge.

Unplug the power adapter once fully charged.



1. Press battery release button and pull battery out of main housing unit.



2. Plug power adapter into battery.

# TROUBLESHOOTING

PROBLEM	SOLUTION
Vacuum cleaner does not work.	<p>Make sure vacuum has power.</p> <p>Push charger securely into electrical outlet, try another outlet or check circuit breaker.</p> <p>Product suction may be blocked - empty dust collector.</p>
Charging indicator lights are not lit while charging.	<p>Make sure charger is securely inserted into electrical outlet.</p> <p>Make sure charging plug is securely inserted into the handle.</p> <p>Indicator lights stop blinking when unit is fully charged.</p>
Not enough suction power.	<p>Empty dust collector. Clean/change filters.</p> <p>Remove any clogs restricting airflow.</p> <p>Make sure cleaner is fully powered.</p>
Motor has strange sound when working.	<p>Empty dust collector. Clean/change filters.</p> <p>Remove any clogs restricting airflow.</p>
Brush roll will not turn/spin.	<p>Clean the roller brush from any hairs or strings.</p> <p>Make sure roller brush is clicked into place.</p>

# WARRANTY

## 90 DAY LIMITED WARRANTY

- This warranty is for the original purchaser of the FilterQueen® Cordless Stick Vacuum (FQSVBO) and is nontransferable. FilterQueen warrants that this appliance will have no defects in material and workmanship under normal household usage for 90 days from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.
- Up to 90 days from the date of purchase, FilterQueen will repair or replace, on its own accord, any FilterQueen® Cordless Stick Vacuum or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage higher than what's marked on the product, or for commercial purposes.
- If your FilterQueen® Cordless Stick Vacuum (FQSVBO) is found to be defective within the time period of this warranty, please contact the FilterQueen Warranty Department. If this product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Health-Mor, Inc.

1 American Road, Suite 1250, Brooklyn, OH 44144

440-846-7800 | [www.filterqueen.com](http://www.filterqueen.com)