


Auto Ignition System


Part #BC2500

used on BabyC and Winchester units

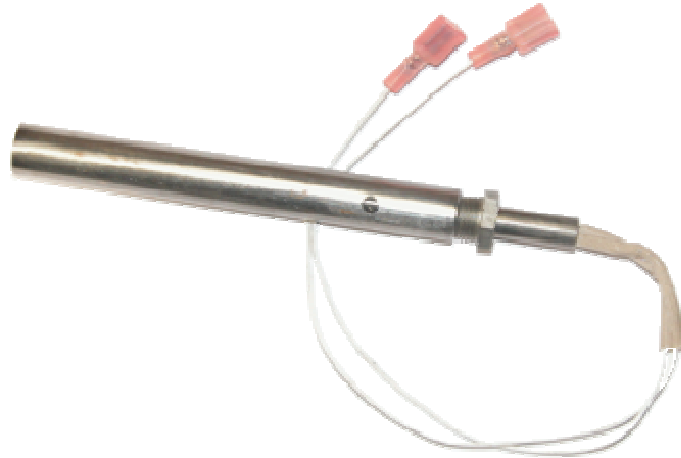

- Turn off power on control panel and unplug from the power supply.
- Open up left side panel and find the ½” collar, locate on the igniter plug.

- Locate wire harness leads for the igniter red lead and white lead.

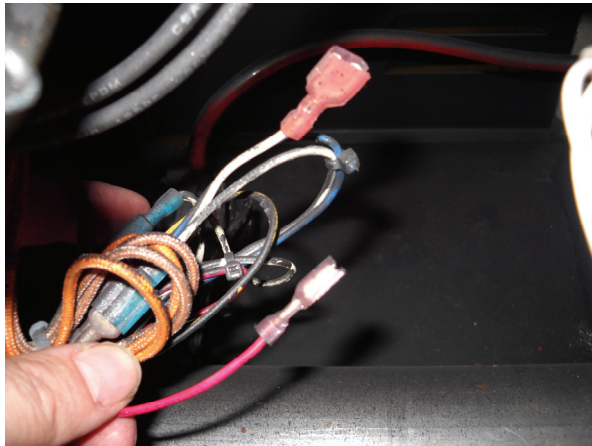


- Using 1/8” allen wrench loosen set screw from ½” collar located on the igniter plug.




- Remove igniter plug pull towards the back of the unit.

- Install igniter into collar where the igniter plug was.
- Position igniter so it slightly touches the firepot and the firepot can be removed.

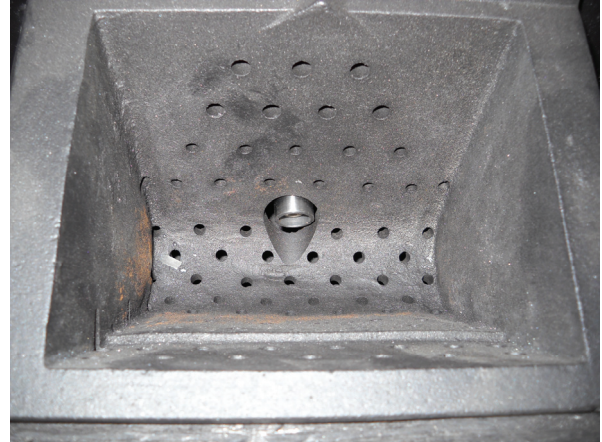

- Tighten set screw attached to the 1/2" collar.

- Connect igniter wires coming from the igniter to the wire harness using the white and red wires.

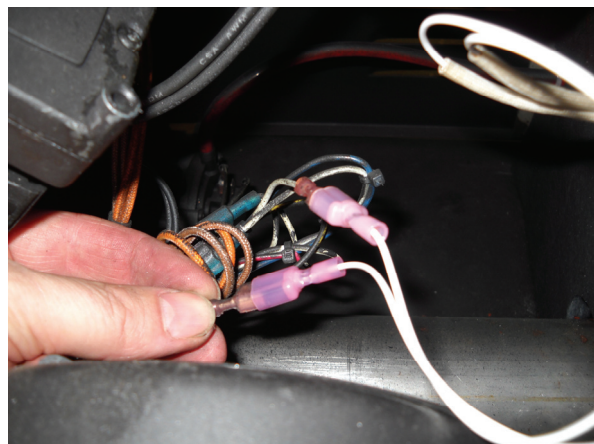

- Plug into power supply
- Turn power on control panel and restart.