



Firepot Wood Pellet

Part #BC2600

used on BabyC and Winchester units

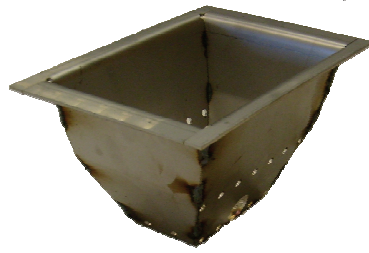

- Shut unit off.
- Open access door after unit has cooled down.
- Remove existing firepot.

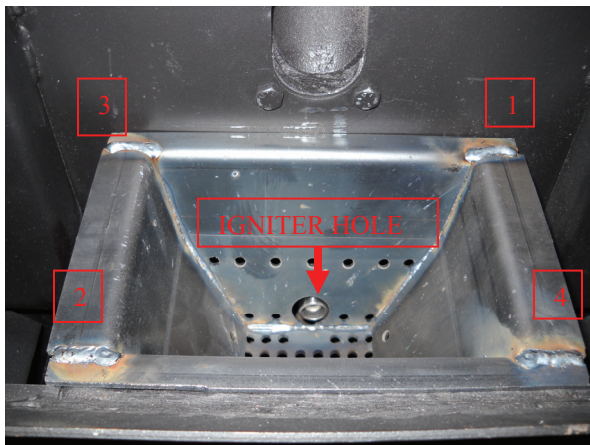

- Place firepot into firepot cradle making sure the igniter hole lines up to the igniter.
- Check to make sure the firepot is sitting flat on the cradle area. Use 2 fingers to press up and down at locations 1 and 2. Repeat process at locations 3 and 4. No rocking allowed in either directions.

- The igniter or igniter plug may need to be adjusted to do so open the left side panel and locate the 1/2" collar.
- Using a 1/8" allen wrench loosen the set screw on the collar.



- Adjust the igniter so it is slightly touches the firepot. Make sure the firepot can be removed.
- Then tighten the set screw.
- Close down and restart.