



## Daily Maintenance

Clean top heat exchangers, fill fuel hopper, clean firepot every 6-12 hours

Open intake air, run 5 minutes, Then reset to original position

## Weekly Maintenance

Clean fly ash behind clean out slides

Clean inside of firebox, ash pan, clean all heat exchanger areas

After glass cools wipe with damp cloth

## Monthly Maintenance

Remove firepot and check that the air holes are all open, vacuum underneath

Check all areas for plugging, clean air intake if needed

Clean exhaust venting pipes if needed, check connections – *We recommend Love-Less Ash vacs for ash removal. For more information, please visit [www.lovelessash.com](http://www.lovelessash.com).*

## Spring Cleaning – Yearly Maintenance

Empty hopper of all fuel, vacuum and oil lightly

Vacuum out back cabinet area, venting and tees

Vacuum all electrical motors of dust

Clean firepot area and lightly oil for summer

Clean firebox area and lightly oil for summer