




The Smooth Stage has the capability to softly move the vehicle from prestage to the staging beam when the Bump Button input (Tan wire) is pulled to >10 volts. The Smooth Stage will only move the vehicle forward when the Bump Button is depressed. Hold the button down to creep forward.

The Blue light is ON when power is applied to the box and the Green light is ON when the Smooth Stage is being activated. Finding the right combination of the Force and the Speed setting is the key to creating the staging speed that you prefer. Below you will find a description of the settings to help guide you to find the best setting for your vehicle.

Step 1: Start with the Force to the 9 o'clock position and Speed near the 2 o'clock position.

Step 1	Step 2	Step 3	Step 4
Set Speed to 2 o'clock and Force to 9 o'clock  Press and hold the Bump Button	If NO movement, Increase the Speed 3 clicks  Press and hold the Bump Button	If NO movement, Set Speed to 2 o'clock, increase Force 1 click  Press and hold the Bump Button	If NO movement after Step 3, repeat Step 2 and Step 3 until movement is present.  Use the Speed knob to fine tune the vehicle speed while staging

Speed = Vehicle creep speed

Force = Transbrake release power

### WIRING SCHEMATIC

