Connection Diagram Fuel Performance Kit (universal version)

Version 1.1





connect to tank/return fuel line connect to main fuel line (coming from tank/fuelpump/fuelfilter) connect to engine overflow line connect to engine fuel supply



Route of fuel







