

ATTENTION ! Your Rico home appliance has been manufactured with utmost care and under strict quality control. If, for any reason, you are not satisfied, please contact your local dealer or the Rico Department for immediate action on your query / problem at:

Customer Relations Department

Rico Appliances Pvt. Ltd.

 
Sapphire Building, 8th floor, S. V. Road,
Khar (W), Mumbai, Maharashtra - 400 052, India

Tel. : (91-22) 2600 2926

Website : www.rico.in, Email : service@rico.in

Please ensure that the Warranty Card is filled in by the Dealer at the time of Purchase. Detach the card below and mail it within 7 days of the purchase to Rico

POST CARD




To,

Rico Appliances Pvt. Ltd.

Sapphire Building, 8th floor, S. V. Road
Khar (W), Mumbai, Maharashtra - 400 052, India

**TABLE FAN WITH BUILT-IN
RECHARGEABLE BATTERY**

 MULTI-ANGLE OSCILLATING FAN

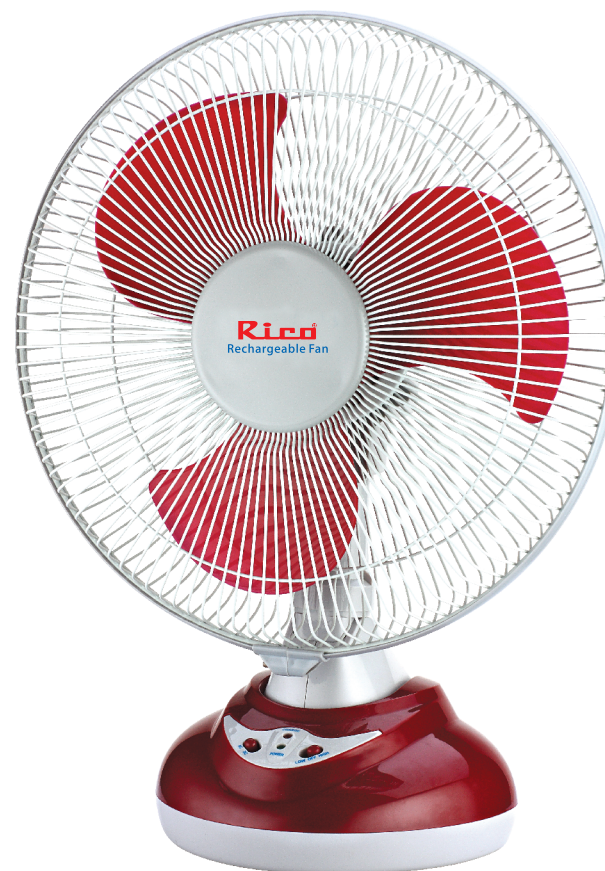

Rico®

INSTRUCTION MANUAL

RF806

Dear Customer,

Thank you for selecting Rico.

You have just bought yourself one of the finest products in the form of Rico table fan with rechargeable battery.

Your Rico fan has been manufactured for you under the most stringent quality control procedures.

You are assured of the best quality, performance and after sales service. If, however, for any reason, you feel some thing is lacking, we are always there at your service.

A list of Rico service centres is also given at the end of this instruction manual.

If you require any assistance, please do not hesitate to contact us, for immediately action on your problem at :

CUSTOMER RELATIONS DEPARTMENT

Rico Appliances Pvt. Ltd.,

Sapphire Building , 8th Floor, S V road,
Khar (W), Mumbai-400 052
Tel. No. : 91-22-26002926
Email : service@rico.in
Web site : www.rico.in

Thank you once again for buying Rico.

C. Thakur

Chairman,
Rico APPLIANCES PVT. LTD.

6 Months Warranty



HOME APPLIANCES WARRANTY CARD

(To be retained by the purchaser)

Important : Before mailing the warranty card, please read all the terms and conditions of the warranty

Product : **"RF806" RECHARGEABLE FAN** Serial No.: _____

Date of Purchase : _____

Dealer's Name & Address : _____

Please fill in the following post card, cut along the dotted line,
and mail to Rico within 7 days of purchase.

Product : **"RF806" RECHARGEABLE FAN** Serial No.: _____

Date of Purchase : _____

Dealer's Name & Address : _____

Customer Name : _____

Address : _____

City : _____ Pin Code : _____

State/Country : _____ E-mail : _____

Tel/Mobile : _____

 
(Please make sure your dealer completes this card at the time of purchase)

(This portion is to be mailed to Rico)

You can also register warranty card online at www.rico.in or You can also Register Warranty card by sending photo of original bill & Warranty card (Duly Filled Up) to

Whatsapp on : +91 88794 44877

6 Months Warranty

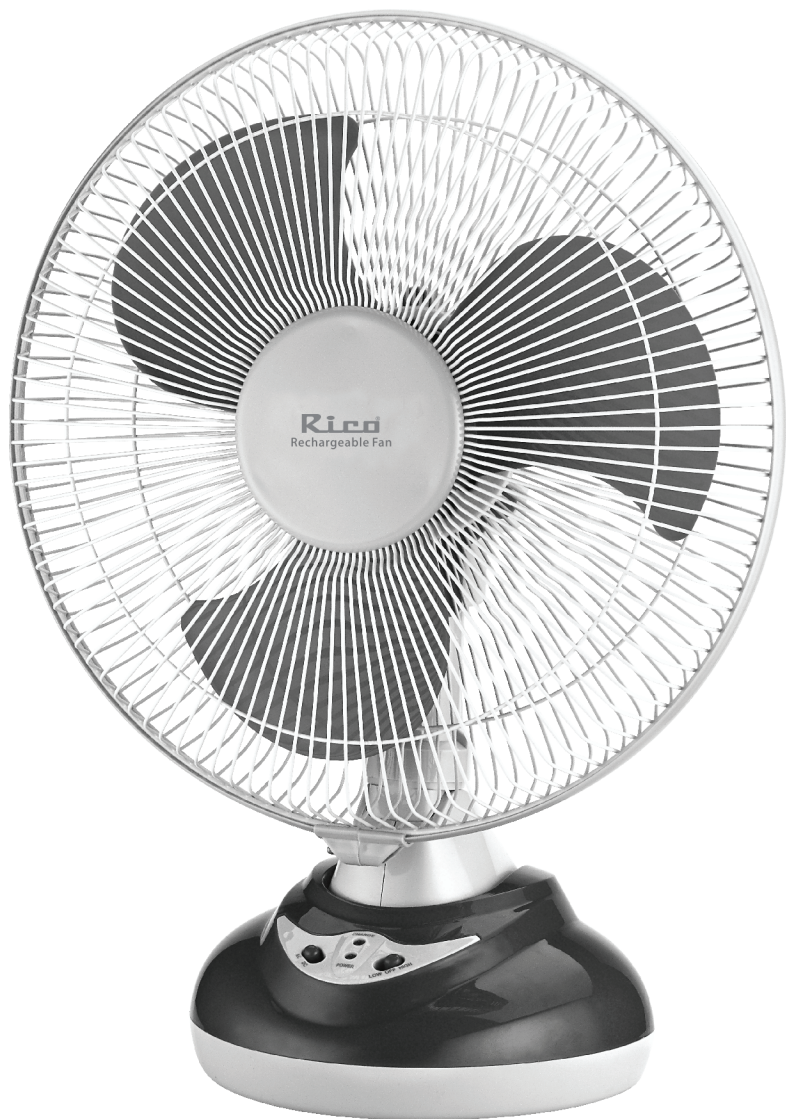



Index

Page No.

Part-list	2
Features	3
Precautions	4
How to Recharge	6
Multi-angle tilting oscillating fan	6
How to operate the fan	5
Warranty Conditions & Service Procedures	7

Part-list

  - 1) Front Louver
- 2) Louver Holder
- 3) Switch No. 1
- 4) Green Led Operating Indicator
- 5) Red Led Charging Indicator
- 6) Switch No. 2
- 7) Bottom
- 8) Body
- 9) Charging Door
- 10) Oscillation Control Knob
- 11) Gear Box
- 12) Handle
- 13) 12 inch, 3-blade Propeller
- 14) Protection Cover
- 15) Back louver

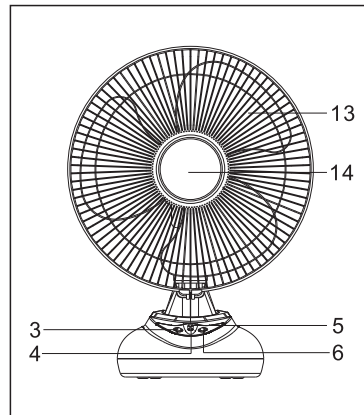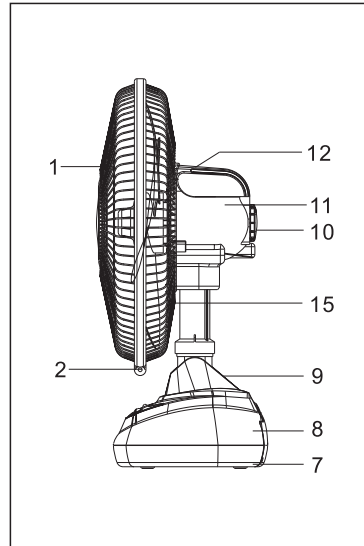

HOME APPLIANCES WARRANTY CARD WARRANTY CONDITIONS & SERVICE PROCEDURE

Please preserve this warranty card and the cash memo and ensure that it is duly stamped (with the date stamped) and signed by the dealer. A warranty card or cash memo which is not stamped and signed by the dealer will be treated as invalid.

Kindly ensure you post the half portion to Rico Head office or update your details on our website

www.rico.in

Conditions of the Warranty:-

Your Rico product is warranted against manufacturing defects for 6 months from the date of purchase. The product is warranted against manufacturing defects only. This product is designed for domestic use only.

This warranty does not apply to

- Normal Wear and tear of parts or surface coating
- Faults which may be due to wrong usage, faulty handling, damage in transit, usage of spurious parts, neglect or accident are not covered by this warranty
- Damages resulting from accidents, mishandling or negligence on the part of the customer and fluctuation in supply voltage.
- Surface Coating, body aesthetics, plastic parts, neon lamps, bakelite parts, rubber/nylon parts, push buttons & bulb.
- Damages resulting due to usage of power supply other than specified 220/230 Volts, AC, 50 Hz. eg: inverters generators etc.
- For humming noise generated due to usage of electronic fan regulators of any make.

Should your Rico product become un-operational during the warranty period, Kindly contact your nearest authorized Rico Dealer / Service Centre. (List is available on www.rico.in)

Subject to the above - The defective part will be repaired / replaced free of charge for labour or materials, at our discretion & option, provide that:

- The unit is returned at your cost to our Authorized Service Centre along with the stamped and signed Cash Memo and Warranty Card.
- The unit is installed, used and maintained strictly in accordance with the instructions provided.
- The unit is not opened or tampered with by anyone except our Authorized Service Centre or technician.

CONSEQUENTIAL DAMAGE

Liability for consequential loss or damages is neither accepted nor is it implied. The warranty extended herein is in lieu of all implied conditions and warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss. The warranty in no case shall extend to payment of any monetary consideration whatsoever or the replacement or return of the products as whole, liability for consequential loss or damage is neither accepted nor is implied.

SERVICE AND REPAIRS

Please get the product repaired only from our authorised service centre.

This warranty is confined to the repair or replacement of defective parts. Any expenses incurred on collecting and returning the product to the customer and/or on the service personnel who will visit the customer, such as to and fro conveyance, incidentals etc., shall be borne by the customer.

Please note that this warranty is issued subject to the jurisdiction of the competent courts in Mumbai INDIA only.

 
To avoid unnecessary repairs, please study the instruction manual carefully before operation.

Features

1. Works on AC Power (Electricity) as well as DC Power (Built-in rechargeable battery)
2. Has a built-in rechargeable battery - fan works upto 4 hrs. (low speed) on battery.
3. Excellent air throw.
4. With oscillation function - fan rotates on its axis automatically.
5. With a built-in handle - to carry the product easily.
6. Long life powerful motor.
7. Multi-angle tilting AC/DC powerful 2-speed oscillating fan.
8. Built-in 6V 4.5AH Sealed Lead Acid Rechargeable Battery.
9. Separate indicator LED to indicate when the battery is charging.
10. Built-in Power Cord / Plug.
11. Green LED Charging Indicator.
12. Red LED Operating Indicator.
13. Over-charge / Over discharge protection circuit protects the built-in rechargeable battery.
14. Battery will last for 300 charge and discharge cycles with diminishing capacity.

How To Recharge

1. Open the charging door.
2. Plug out the power cord/pulg.
3. Plug into the receptacle of ac power supply.
4. The red led charging indicator lights up showing that the battery is being charged.
5. Normal recharging time for maximum capacity is 20-24 hours approximately.

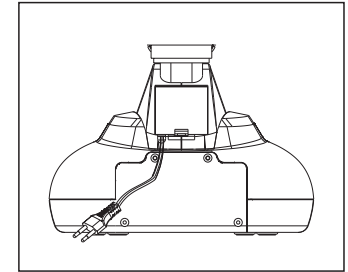


Care and maintenance

1. The unit should be cleaned by wiping with damp cloth mild detergent or water.
2. To clean the propeller, open the three louver holders to release the front louvre.
3. Never use strong or volatile chemicals to clean the unit as it may damage the plastic parts.

Multi-angle tilting oscillating fan

 1. Pull the fan in front or back to adjust the angle.
2. Turn the oscillation control knob to the left to start the oscillation.
3. Turn the oscillation control knob to the right to stop the oscillation.

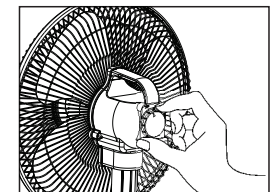

Precautions

1. Charge the unit for 24 hours continuously before using it for the first time. Read "how to recharge".
2. Before switching on, please make sure that the fan is connected to a 2 pin, 5 Amp - 230 Volts AC socket.
3. Always recharge the unit after using and make sure that all switches are "off" when the unit is not being used.
4. Charge the unit periodically when the unit is not being used for over 1 month, otherwise the battery will get completely discharged and cannot be used again.
5. Do not use wet hands while operating the fan. Do not immerse any part of the fan in any liquid.
6. Switch off the appliance and unplug the cord whenever handling any parts, before cleaning and when not in use.
7. Recharge the unit indoors only.
8. Operating efficiency may decrease if the unit is being used when temperature is below 30° F (0° C) or above 104° F (40° C)
9. Do get the Rico fan serviced from our authorised service centres at least once a year.
10. Keep the appliance away from children.

How to operate the fan

The unit can be operated on either AC mains or built in DC Rechargeable battery ...see the following chart for operating the functions.

Switch Position	When plugged into the AC Socket	When unplugged from the AC Socket or during the power failure / no power supply
Switch 1 "AC"	Operate any function of the unit	No Function
Switch 2 "DC"	Recharge the battery	Operate any function of the unit.
Switch 2 "OFF"	Recharge the battery turn off the functions, controlled by switch 2.	Turns OFF the function controlled by switch 2.
Switch 2 "HIGH"	Set the switch 1 to "AC" to activate the function of hi-speed fan	Set the switch 2 to "DC" to activate the function of hi-speed fan
Switch 2 "LOW"	Set the switch 1 to "AC" to activate the function of low-speed fan	Set the switch 2 to "DC" to activate the function of low-speed fan

