

AeGIS Heater Pad (AHP5) Installation and Specifications

Specifications: 12 VAC/12VDC 10 Watts
55.4 °F


Installation (Factory Pre-installed)

- Step 1:** Turn the system power OFF.
Step 2: Connect the AHP5 as shown below, polarity not important.
Step 3: Turn the power On.

Installation (Factory NOT Pre-Installed)

- Step 1:** Turn the system OFF.
Step 2: Drill two holes on the metal side of the heater (DO NOT DRILL ON THE PAD) to fit into the bottom LCD's studs.
Step 3: Install the heater pad with the metal side facing the back of the LCD. Provide 1/4" - 1/2" clearance from the back of the LCD.
Warning: Do not install the heater pad on top of the LCD without a clearance, It may damage the LCD.
Step 4: Install duct tape on the LCD's ribbon cable.
Step 5: Connect the AHP5 as shown below, polarity not important. You may use the same power transformer as the AeGIS Telephone Entry System. **You must check the following after the heater pad is connected:**
a. INPUT VOLTAGE MUST BE 12.5VAC-13.5VAC UNDER LOAD IF 12VAC 40VA TRANSFORMER IS USED.
b. INPUT VOLTAGE MUST BE 13.6VDC-14.5VDC UNDER LOAD IF 12VDC 3.0A TRANSFORMER IS USED.
Separate power must be used if the voltage is low.

- Step 6:** Turn the power On.

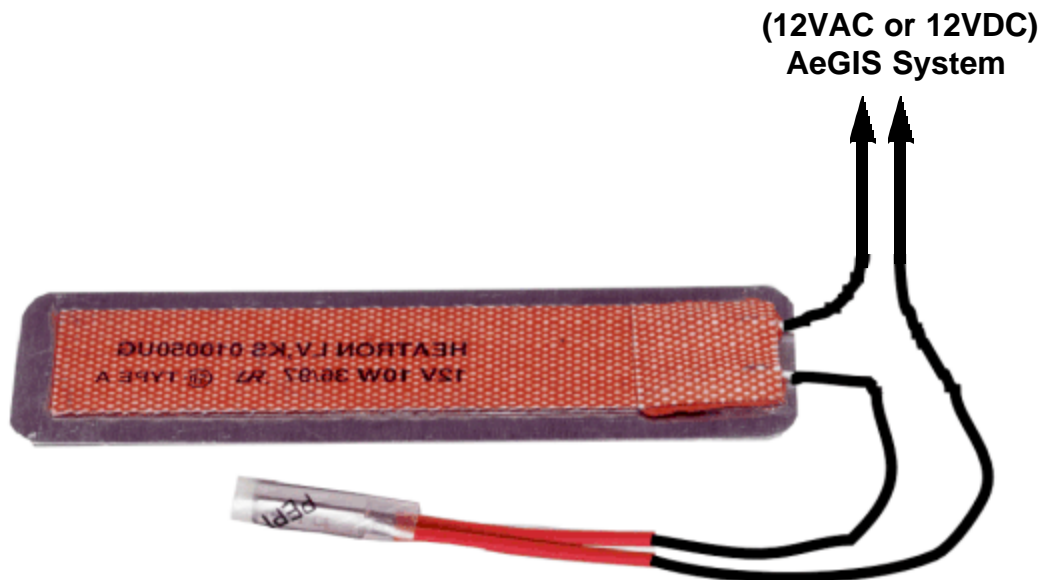

Pach & Company
www.pach-co.com

941 Calle Negocio
San Clemente, CA 92673

Phone: 1-888-678-7224
Fax: 949-498-6879