



ALARM LOCK

345 Bayview Avenue
Amityville, New York 11701

For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440

(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2011

Trilogy Networx™ Locks DL-Windows™ QUICK START

OI362A 1/11

For a minimum wireless system, you need:

- A laptop or desktop computer to run DL-Windows™
- A wired or wireless router (to allow connection to a computer network)
- An Alarm Lock Gateway module (the intermediary device between the network and the locks)
- A Networx™ series wireless lock, powered up

If you have never used DL-Windows before, see the DL-Windows User's Guide (OI237) for basic information such as how to install and open DL-Windows, how to create Accounts, how to add Profiles to Accounts, etc. To set up a Networx wireless system, see the DL-Windows for Trilogy Networx User's Guide (OI352).

The steps below reference pages in the DL-Windows for Trilogy Networx V4.0 User's Guide (OI352B).

1. Install the DL-Windows software.

Place DL-Windows CD into the CD-ROM drive. The DL-Windows *InstallShield* Wizard will automatically begin the installation process.

2. Connect your computer to a Network (page 11).

3. Connect the Gateway to the Network (page 11).

Be sure the Gateway is NOT powered during this step.

4. Fill out the Gateway ID Card (blue) with the location of the Gateway.

5. Mount and power the Gateway module (page 13).

Horizontal "flat" mounting of the Gateway enclosure should be avoided.

6. Reset the Gateway (page 14).

Before securing the Gateway housing cover, press the **RESET** button on the Gateway PC board to clear the Gateway memory. *Press and hold the "RESET" button and the red light turns on continuously; continue to hold the button and the red light will start to flicker. Release the button and the red light will continue to flicker.*

Secure the Gateway housing cover with the screws provided.

7. Start DL-Windows and add a new Account (page 15).

8. Create a new lock Profile (page 15).

9. Add Users to the new Profile (page 16).

10. Click the GW Config button and enter password if prompted (page 17).



11. Click the Discover New Gateway(s) And Auto Add to Account button (page 18).

12. In the Gateway Configuration screen, click to highlight and select the Gateway, then click the Discover Locks On Selected Gateway button (page 19).

13. Select lock(s) by serial number and click Use Selected Locks (Page 19).

14. Link lock to a Profile (page 20).

In the **Link/Unlink Lock Profile(s)** screen:

- In the **Available Lock Profiles** field: Click to highlight the **lock Profile**.
- In the **Available Lock(s) By Serial Number** field: Click to highlight the **lock serial number**. Click the **Link Lock** button to save.

15. "Download" Profile to lock (page 21).

Check "**Send/Receive All**" and click the **Start Communication** button.

The status bar at the bottom of the window will indicate the communication progress. When communication is complete, a popup will appear. Press **OK** to close the popup, then click **Close** to close the **DL-Windows Network Lock Comm Screen**.

Congratulations! Locks can now be put into use and controlled wirelessly!