

MAIN MENU

QUICK START menu

TEACH IN settings

Install	Walk Presence
Install Right	Walk Motion
Install Left	Walk All
Pull Cord	Background
Walk Safety	

> More menu

- ServiceMode
- FactoryReset
- Heating

Service Mode settings

- ON
- OFF

Factory Reset settings

- Partial
- Full

Heating settings

- AUTO
- ECO
- OFF

IN-OUT menu

Out1 Func settings

- Mot Pull Pres
- Mot Pull Safe
- Mot+ & Height
- Mot+ & Speed
- Pull Cord
- Safety
- Presence
- PresSafe
- Mot Pull
- Not Used

Out2 Func settings

- Mot Pull Pres
- Mot Pull Safe
- Mot+ & Height
- Pres & Height
- Pull Cord
- Safety
- Presence
- PresSafe
- Mot Pull
- Not Used

Relay Func settings

- Mot Pull Pres
- Mot Pull Safe
- Mot+ & Height
- Mot+ & Speed
- Pull Cord
- Safety
- Presence
- Motion
- Mot Pull
- Not Used

> More menu

- Out1 Logic
- Out1 Holdtime
- Out1 Test
- Out2 Logic
- Out2 Holdtime
- Out2 Test
- Relay Logic
- Relay Holdtime
- Relay Test

Out1 Logic settings

- NC
- NO

Out1 Holdtime settings

20 min	10 s
10 min	5 s
5 min	3 s
1 min	1 s
30 s	100 ms

Out1 Test settings

- ON
- OFF

Out2 Logic settings

- NC
- NO

Out2 Holdtime settings

20 min	10 s
10 min	5 s
5 min	3 s
1 min	1 s
30 s	100 ms

Out2 Test settings

- ON
- OFF

Relay Logic settings

- Active
- Passive

Relay Holdtime settings

20 min	10 s
10 min	5 s
5 min	3 s
1 min	1 s
30 s	100 ms

Relay Test settings

- ON
- OFF

MOTION menu

Field Width settings

- 0 – 999 [240.1]

Field Stop settings

- 0 – 999 [287.4]

Object Type settings

- Any
- Vehicle
- VehicleXL

> More menu

- Immunity
- Field Start
- Direction

Immunity settings

1	4
2	5
3	

Field Start settings

- 0 – 999 [0.0]

Direction settings

- Uni
- Uni 100%+
- Uni rev
- Uni 100%
- Any

PRESENCE menu

Field Width settings

- 0 – 999 [240.1]

Field Stop settings

- 0 – 999 [78.7]

Object Type settings

- Any
- Vehicle
- VehicleXL

> More menu

- Immunity
- Field Start
- PresTime

Immunity settings

1	4
2	5
3	

Field Start settings

- 0 – 999 [0.0]

PresTime settings

- Infinite
- 120 min
- 60 min
- 30 min
- 10 min
- 5 min
- 2 min
- 1 min
- 30 s

SAFETY menu

Field Width settings

- 0 – 999 [240.1]

Field Stop settings

- 0 – 999 [15.7]

> More menu

- Immunity
- PresTime
- UncovZone

Immunity settings

1	4
2	5
3	

PresTime settings

- Infinite
- 120 min
- 60 min
- 30 min
- 10 min
- 5 min
- 2 min
- 1 min
- 30 s

UncovZone settings

49.2	9.8"
39.4	5.9"
29.5	3.9"
19.7	2"
13.8	

OTHERS menu

ObjectType+ settings

- Any
- Vehicle
- VehicleXL
- VehicleDWH

PullMinTime settings

0	4	8
1	5	9
2	6	
3	7	

PullObjType settings

- Any
- Pedestrian
- Vehicle Depth
- VehicleXL
- Vehicle

HeightMin settings

157.5"	98.4"
137.3"	88.6"
127.9"	78.7"
118.1"	68.9"
108.3"	

SpeedMax settings

31 mph	15.5 mph
28 mph	12.4 mph
24.8 mph	9.3 mph
21.7 mph	6.2 mph
18.6 mph	3.1 mph

> DIAGNOSTIC menu

FieldDisplay

QR-code

ID #

Event Log

ResetLog

- Yes
- No

Power Supply

Sensor Temp

Operating Time

RC password

BT password

Language

- English
- Deutsch
- French

Display units

- Inch
- Meter

> Specific menu

- IntegObjMode
- DistFilter menu
- MinObjHeight menu
- TiltAngle
- ForceTilt menu
- LateralAngle
- ForceLateral menu
- MountHeight
- ForceHeight menu

IntegObjMode settings

- Standard
- Infinite

DistFilter settings

- Both
- TimeBased

MinObjHeight settings

49.2"	19.7"	5.9"
39.4"	13.8	3.9"
29.5"	9.8"	2"

ForceTilt/ForceLateral/ForceHeight settings

- Manual
- Auto

> Admin menu

Config PN

SoftPiN

LZR®-WIDESCAN MENU TREE

Config: 42.4443.04
Software: V4.2

