



# **ALL** **Security** Equipment

## **Long Range 2-Channel Universal Receiver Manual FAS-RC**

[www.AllSecurityEquipment.com](http://www.AllSecurityEquipment.com)

Phone: +1 (305) 437 9757   Email: [hello@allsecurityequipment.com](mailto:hello@allsecurityequipment.com)   Address: 6929 NW 52nd St, Miami, FL 33166 USA

# ASE Universal Receiver User Manual

## Parameters

Power supply: AC/DC 12V-24V

## Testing

When receiver is powered on, the three indicator lights flash together once (and enter the standby mode).

## Programming

Press and release the learning key of channel you want to program, and the channel indicator light will turn on. Press the key on the remote control, and the indicator light flashes several times after the controller receives it, and then goes out indication a successful programming.

**Note:** You need to press the key on the transmitter/remote within 8 seconds to program.

## Reset the channel

Press on the channel button you want to reset for 10 seconds, the indicator light flashes several times and then turns off. The wireless code of this channel is reset.

## Frequency Selection

Mode 1: dip switch 1-off, dip switch 2-off: triple frequency 310 MHz/315 MHz/390MHz with hopping rolling code compatible Security+ 2.0

Mode 2: dip switch 1-off, dip switch 2-on: receive the 315MHz rolling code.

Mode 3: dip switch 1-on, dip switch 2-off: receive the 390 MHz rolling code;

Mode 4: dip switch 1-on, dip switch 2-on: receive 390 billion code

**Note:** You can only change frequency when the receiver is powered off. The receiver can function with one frequency type at a time.