



# EXIT WAND

## Installation Manual




### WARNING




When an EXIT WAND is in use, the automatic gate opener could be activated by a child on a bicycle, tricycle or other metal play equipment. This product is not recommended for applications exposed to children.

### Parts Identification:

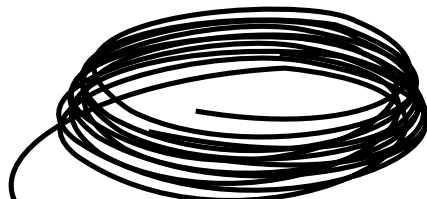


WAND with 50, 100 or 150 feet of Direct Burial Cable

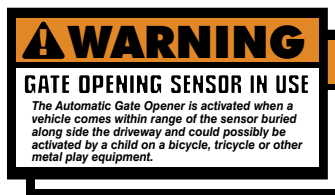

Warning Signs (2)



Wire Clamp

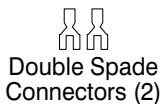

Double Spade Connectors (2)




Battery Connection Wires (2)



Ty-Wraps (4)



Wire Nuts (3)

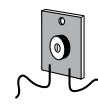

Range Adjustment Board

# Thank You ...

for purchasing the hands free EXIT WAND. This product requires no maintenance and will give you years of enjoyment by providing hands free operation of your gate. GTO, Inc., has been designing and manufacturing reliable, high quality products since 1987. Our corporate headquarters and state of the art manufacturing facility is located in Tallahassee, Florida. One of our highest priorities is to provide outstanding technical service to our customers. Therefore, if you have any questions or require any technical assistance, visit [www.gtopro.com](http://www.gtopro.com) or call our toll free line 800-543-1236 for technical support.

The EXIT WAND you have purchased is designed with some of the most advanced technology available. In layman's terms, the wand detects a change in the earth's magnetic field caused by a mass of metal in motion and automatically opens your gate. The range adjustment potentiometer (POT) that connects to the control box provides you with the ability to increase or decrease the wand's sensitivity range.

If a metal object is placed directly above the wand (with little motion) it may cause the wand to activate, thus opening your gate. For this reason we do not recommend the EXIT WAND in environments exposed to children.

Prior to installing your Wand please read the manual thoroughly. There are important safety recommendations of which you should be aware. This product, and any accessory you purchase, should only be installed on a gate opener that meets the current safety standard (UL325). If you have a gate opener that is not listed with the current standards, please contact the GTO sales department at 800-543-4283 or 850-575-0176 for consultation on a gate opener that can meet your specific needs.

*Joe Kelley, President of GTO, Inc.*

## Contents

---

<b>Before You Start</b> .....	page 1
Terms and Definitions: .....	page 1
How the EXIT WAND works: .....	page 1
How the EXIT WAND's RANGE ADJUSTMENT works: .....	page 1
Placement of the WAND: .....	page 2
Installation Overview: .....	page 2
<b>Installing the EXIT WAND</b> .....	page 3
Determining WAND Location: .....	page 3
Installing The WIRE CLAMP: .....	page 3
<b>Wiring the WAND to the GTO/PRO Opener:</b> .....	page 4
Accessory Terminal Connection .....	page 4
Connecting the Range Adjustment Control Board: .....	page 5
Power Supply Connection: .....	page 5
Powering up the WAND: .....	page 6
Adjusting the Range: .....	page 6
Safety Precautions: .....	page 6
<b>Installation on other Brand Gate Openers</b> .....	page 7
<b>Technical Specifications</b> .....	page 8
<b>Trouble Shooting</b> .....	page 8
<b>Other GTO Products</b> .....	page 9
<b>Metric Conversion Chart &amp; Warranty</b> .....	Inside Back Cover

## Conversion Chart

### *Converting Metric Units to English Equivalents*

<b>When You Know</b>	<b>Multiply By</b>	<b>To Find</b>	<b>Symbol</b>
centimeters	0.3937	inches	in. (or “)
meters	3.2808	feet	ft. (or ‘)
kilograms	2.2046	pounds	lb. (or #)

### *Converting English Units to Metric Equivalents*

<b>When You Know</b>	<b>Multiply By</b>	<b>To Find</b>	<b>Symbol</b>
inches	2.5400	centimeters	cm
feet	0.3048	meters	m
pounds	0.4535	kilograms	kg

### *Converting Temperature*

deg. Celsius	$(^{\circ}\text{C} \times 1.8) + 32$	deg. Fahrenheit	$^{\circ}\text{F}$
deg. Fahrenheit	$(^{\circ}\text{F} - 32) \div 1.8$	deg. Celsius	$^{\circ}\text{C}$



This product and any accessory you purchase should only be installed on a gate opener that meets the current safety standard, UL325, 4th Edition. If you have a gate opener that is not listed with the current standard please contact the GTO sales department for consultation on a gate opener that can meet your specific needs.

## **GTO Limited One Year Warranty:**

GTO, Inc., gate openers and accessories are warranted by the manufacturer against defects in materials and manufacturer workmanship for a period of one (1) year from date of purchase, *provided the recommended installation procedures have been followed.*

In the case of product failure due to defective material or manufacturer workmanship within the one (1) year warranty period, the product will be repaired or replaced (at the manufacturer's option) at no charge to the customer, if returned freight prepaid to GTO, Inc., 3121 Hartsfield Road, Tallahassee, Florida, USA 32303. **IMPORTANT: Call (800) 543-1236 for a Return Goods Authorization (RGA) number before returning accessory to factory.** Products received at the factory without an RGA number will not be accepted. Replacement or repaired parts are covered by this warranty for the *remainder* of the one (1) year warranty period or six (6) months, whichever is greater. GTO, Inc. will pay the shipping charges (equal to United Parcel Service GROUND rate) for return to the owner of items repaired under warranty.

The manufacturer will not be responsible for any charges or damages incurred in the removal of the defective parts for repair, or for the reinstallation of those parts after repair. This warranty shall be considered void if damage to the product(s) was due to improper installation or use, connection to an improper power source, or if damage was caused by lightning, wind, fire, flood, insects or other natural agent.

After the one (1) year warranty period, GTO, Inc. will make any necessary repairs for a nominal fee. Call GTO at (800) 543-1236 for more information. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty is in lieu of all other warranties, expressed or implied. **NOTE: Verification of the warranty period requires copies of receipts or other proof of purchase. Please retain these records.**

# Before You Start ...

**Please read the instructions completely before you begin the installation.**

## Terms and Definitions:

- METAL OBJECT: anything that is made of iron-based metal, from a child's toy to a car or truck.
- WAND: the magnetic device inside the waterproof tube that detects METAL OBJECTS in motion.
- MAGNETIC FIELD: an area around the WAND where metal in motion can be detected.
- MAGNETIC DISTURBANCE: a change in the MAGNETIC FIELD which lets the WAND know that it needs to send a signal to the gate opener to open the gate.
- RANGE: the distance from the WAND in which a MAGNETIC DISTURBANCE can be detected in the MAGNETIC FIELD.
- RANGE ADJUSTMENT: the RANGE is adjustable from a 3 to 12 foot\* radius by tuning the ADJUSTMENT POTENTIOMETER (POT) on the RANGE ADJUSTMENT CONTROL BOARD (shown on page 5). Within this RANGE, the closer you get to the WAND, the less metal and motion an object needs to cause a DISTURBANCE in the MAGNETIC FIELD.

**CAUTION** This principle explains why a child's tricycle, bicycle and other metal objects moving close to the WAND may have the same DISTURBANCE as a car or truck at a greater distance, and can cause the gate to open.

- WIRE CLAMP: a device which provides a secure and weatherproof opening for the cable from the WAND to be brought into a control box (see Parts Identification on cover).
- DOUBLE SPADE CONNECTOR: a wire connector which allows the connection of two wires to be connected to a single terminal (see Parts Identification on cover).

## How the EXIT WAND works:

- When a metal object such as a car, truck or motorcycle in motion disturbs the MAGNETIC FIELD around the WAND, a signal is sent to the automatic gate opener's control board, signaling it to open the gate.
- The metal object must be in motion to disturb the MAGNETIC FIELD, thus activating the gate opener.


## How the EXIT WAND's RANGE ADJUSTMENT works:

- The RANGE distance can be adjusted from a 3 to 12 foot\* radius from the WAND.
- The potentiometer varies the sensitivity range of the WAND to avoid unwanted moving metal objects from activating the gate opener, such as: other moving gates; metal play equipment; garage doors; other vehicular traffic; etc.
- With the RANGE adjusted to the maximum of 12 feet\*, a large metal object moving slowly will be detected 12 feet\* from the WAND, while a small metal object moving slowly might not be detected at the same distance. As you move closer toward the WAND, the small moving metal object will at some point cause a DISTURBANCE in the MAGNETIC FIELD and activate the gate opener.

## Placement of the WAND:

\* Range distance is approximate and will vary due to outside interference, type of soil, vehicle mass, speed, etc.

- The WAND comes with 50, 100 or 150 feet of cable. A typical installation will require about 5 feet of cable to come from the ground up and into the control box for connection to the power supply and control board. Check your specific installation for exact dimensions.
- From the point on the ground where you will run the Wand cable into the control box, lay the cable out on a path as far as you can from the control box. The WAND should be no more than 2 feet from the edge of the driveway and no closer than 25 feet from the end of the open gate.
- The WAND's RANGE can be adjusted to a maximum of 12 feet\*. The movement of a gate in the open position could cause a DISTURBANCE in the MAGNETIC FIELD of the WAND if it comes within the RANGE of the WAND. Make sure the end of the open gate is a minimum of 25 feet from the WAND. If you have a situation where the WAND has to be buried closer than 25 feet you will need to adjust the RANGE of the WAND to compensate for the closeness.
- The WAND must be buried 12" in soil to prevent direct sunlight from causing overheating. This also prevents large animals from activating the wand due to physical vibrations.

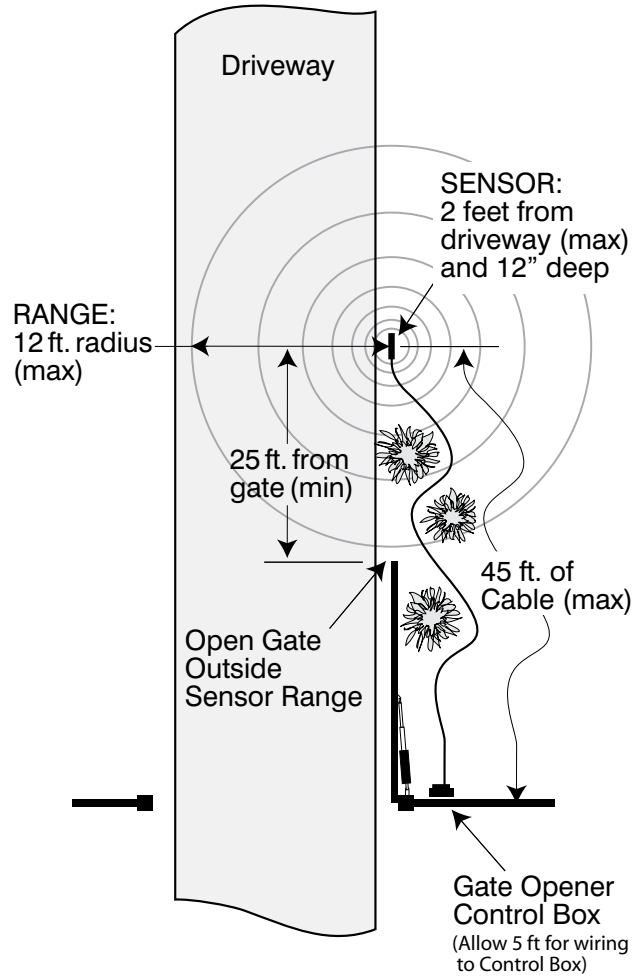

## Installation Overview:

- Once the best location for the WAND is determined, you are ready to bury the WAND and run the cable underground to the control box. Connect the WAND wires and the RANGE ADJUSTMENT CONTROL BOARD to the gate opener control board and power supply. Adjust the RANGE if necessary. Finally, place the WARNING signs on the gate. That's it!

### For Optimum Performance:

- Locate the WAND as far as possible away from power transformers, power lines, underground gas line, and telephone lines.
- Locate the WAND away from general moving traffic to prevent unwanted activation. Remember that the WAND detects MAGNETIC DISTURBANCES caused by a vehicle's mass and velocity.
- It is recommended that you run the Wand cable inside PVC conduit.
- Do not run Wand cable in conduit with other wires such as AC power or other control wires.
- The Wand cable **CANNOT** be spliced. If you need more wire, contact the GTO Sales Department at 1-800-543-GATE (4283).

\* Range distance is approximate and will vary due to outside interference, type of soil, vehicle mass, speed, etc.

# Installing the Exit Wand...


## Determining WAND Location:

**IMPORTANT:** Clear an area 20 feet in all directions of metal tools, toys and automobiles, to prevent magnetic disturbance during testing and installation.

**Step 1:** Determine the optimum location for the EXIT WAND using the information found in "Placement of the WAND" on page 2. Then dig a hole approximately 12 inches deep and 24 inches long within 2 feet and parallel to the edge of the driveway. Next, dig a trench approximately 12 inches deep from this hole to a spot under the gate opener control box to run the cable from the WAND to the control board.

Keep the WAND and the cable uncovered at this time, but out of direct sunlight.


We recommend that the cable be run in PVC conduit to the control box to prevent damage to the cable from lawn mowers, weed eaters and grazing animals.

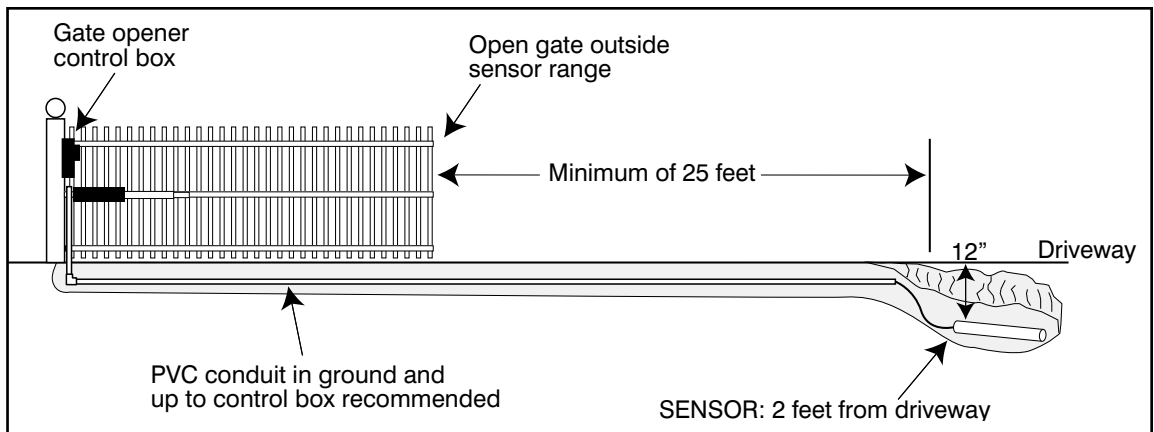

**Installing The WIRE CLAMP:** The WIRE CLAMP (included) is used to secure the wand cable where it enters the control box to prevent it from being accidentally pulled out.


**Step 2:** If you are installing the WAND on a PRO-SW1000/2000 or PRO-SL1000/2000 gate opener, use a screwdriver or steel punch to carefully remove the thin plastic knockout disk (see illustrations at right) at the bottom of the control box. If you have a dual gate opener system, drill a 7/8" diameter hole at the bottom of the control box and install the WIRE CLAMP.

PRO-SW1000/2000 & PRO-SL1000/2000 Control Box

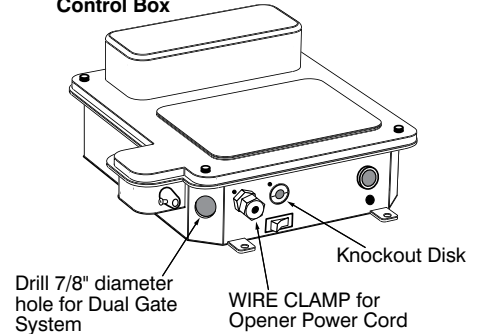


**Step 3:** Use a sharp knife or deburring tool to clean the rough edges from the hole.

PRO-SW3000 & PRO-SW4000  
PRO-SW2000XL & PRO-SW2002XL Control Box

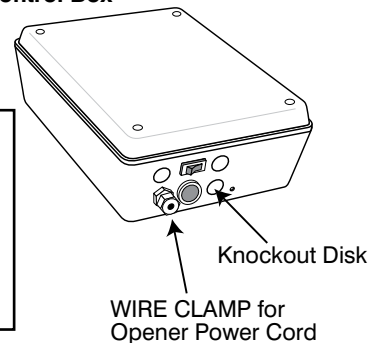

**Be careful with tools to avoid contact or damage to the control board!**

**Step 4:** Unscrew and remove the lock nut from the WIRE CLAMP hub (included with hardware). From the outside of the control box, insert the WIRE CLAMP hub and sealing nut (see illustration right) into the new WIRE CLAMP hole. Finger tighten the lock nut onto the threaded end of the WIRE CLAMP hub from inside the box.

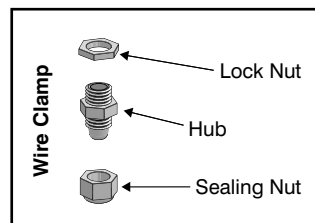


# Wiring the WAND to GTO/PRO Gate Openers:







**IMPORTANT:** TURN OFF the power and disconnect the battery wires before you begin to connect the WAND wires to any gate opener.

**Step 5:** Run the cable from the WAND through a WIRE CLAMP into the control box. Pull about 8 - 10 inches of cable into the control box to reach the ACCESSORY TERMINAL BLOCK and BATTERY TERMINALS in the control box. Now tighten the WIRE CLAMP nut to secure the cable in the WIRE CLAMP.

**Step 6:** Strip about 3/8 of an inch of insulation from the YELLOW, BLACK, RED and BLUE wires in the WAND CABLE.

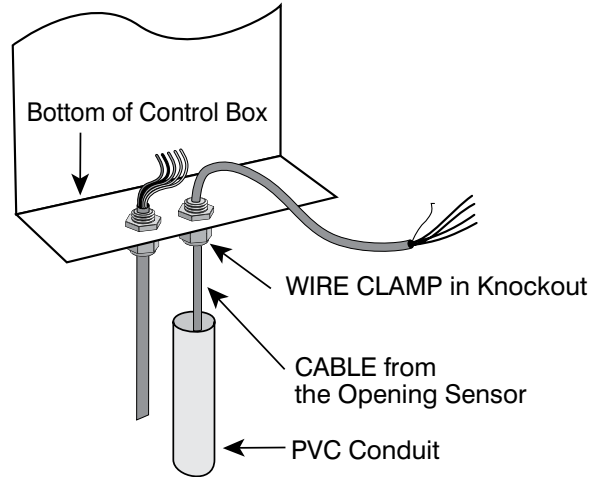

**NOTE:** The SHIELD is the braided metal wire wrapped around the insulated leads inside the WAND CABLE.

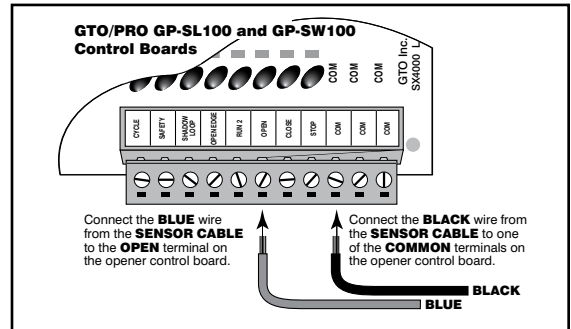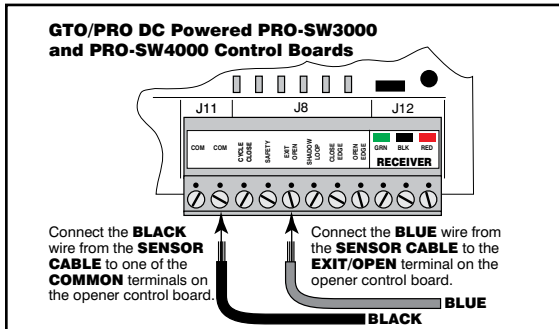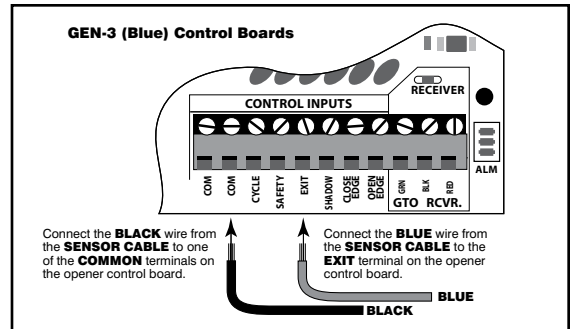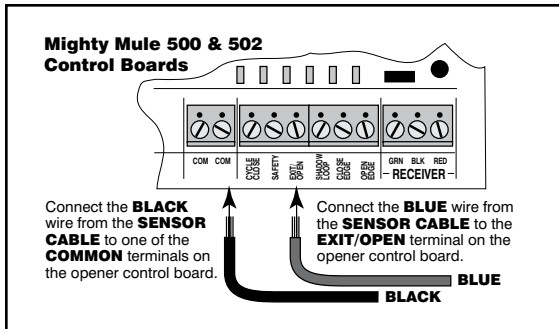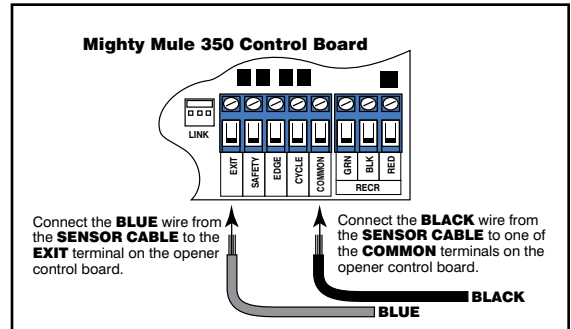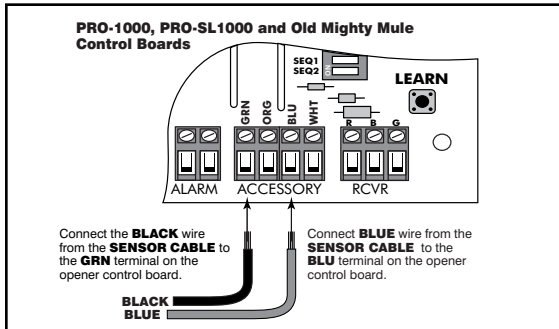




## Connecting the Range Adjustment Control Board:

**Step 9:** Connect the YELLOW wire from the WAND CABLE to the YELLOW wire from the Range Adjustment control board using one of the WIRE NUTS provided.


**Step 10:** Connect the BLACK wire from the Range Adjustment control board to the BLACK BATTERY CONNECTOR wire (provided), along with the SHIELD wire from the WAND CABLE (see Step 13 below).

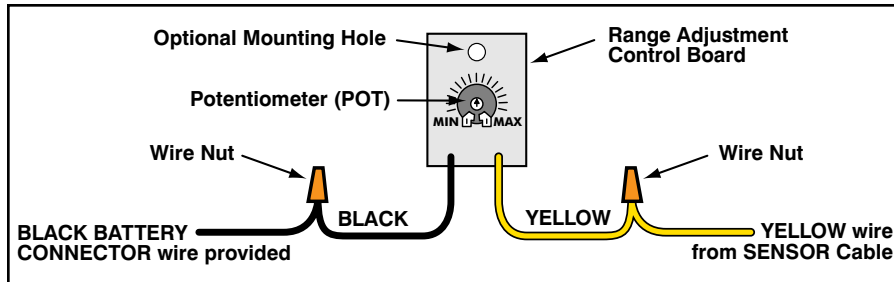

**Step 11:** Secure the RANGE ADJUSTMENT CONTROL BOARD inside the gate opener control box. The control box has slots on both sides of the top battery compartment for extra control boards, or you can use the optional mounting hole.


**IMPORTANT:** DO NOT let exposed wiring or components on the control board make contact with other exposed wiring or components.

The Range Adjustment Control Board can be mounted in slots on either side of top battery compartment **OR** the mounting hole beneath battery compartment.

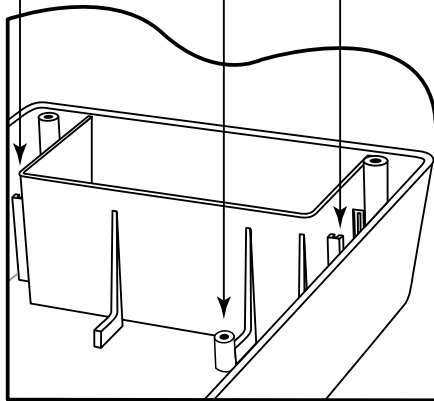

PRO-SW3000/3200XL, PRO-SW4000/4200XL  
& PRO-SW2000/2002XL Control Box

The Range Adjustment Control Board can be mounted in the slot at the bottom **OR** the slot at the bottom right. Both are located beneath the circuit board.

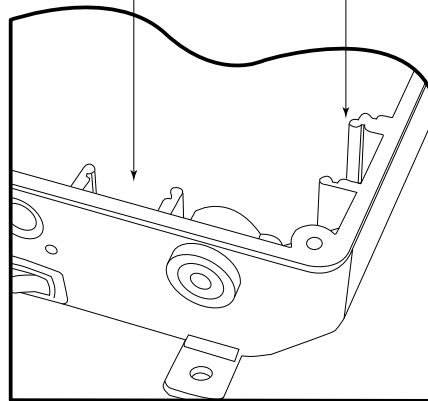

PRO-SW1000/2000 & PRO-SL1000/2000  
Control Box

## Power supply connection:

**Step 12:** Connect the RED and BLACK control board wires from the opener to the DOUBLE SPADE CONNECTORS (provided) as shown on the next page.

**Step 13:** Using a WIRE NUT, connect the SHIELD wire from the WAND CABLE (along with the BLACK wire from the Range Adjustment board) to the BLACK BATTERY CONNECTION wire provided. Using the remaining WIRE NUT connect the RED wire from the WAND CABLE to the RED BATTERY CONNECTION wire provided.

**Step 14:** Connect these wires to the DOUBLE SPADE CONNECTORS as shown.

**IMPORTANT:** Be sure to connect both RED leads to the **same** DOUBLE SPADE CONNECTOR and both BLACK leads to the **other** DOUBLE SPADE CONNECTOR. **You will connect the DOUBLE SPADE CONNECTORS to the battery in the next step.**





## Powering Up the WAND:

**IMPORTANT:** When the WAND is first powered up it must be undisturbed for 60 seconds to perform the self test and calibrations. Before powering the WAND make sure there are no moving metal objects or moving vehicles within range of the WAND.

**Step 15:** Connect the DOUBLE SPADE CONNECTORS to the battery terminals (RED WIRES to POSITIVE (+) battery terminal and BLACK WIRES to NEGATIVE (-) battery terminal). Wait 60 seconds. Turn the opener on and test the WAND.

**NOTE:** If you have other accessories connected to your battery with double spade connectors you may need to connect a double spade connector to a double spade connector in order to connect all the accessories.

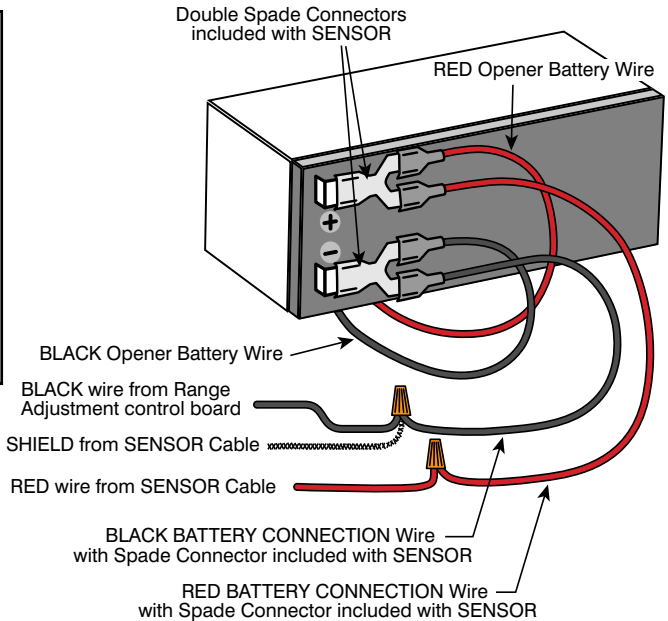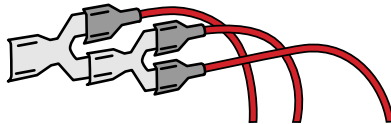


## Adjusting the Range:

**Step 16:** Test the WAND to see if it is working properly and if the RANGE needs adjusting for optimum performance.

- Turn the potentiometer (POT) clockwise to increase range.
- Turn the potentiometer (POT) counter-clockwise to decrease range.

Replace the control box cover and cover the WAND and cable.

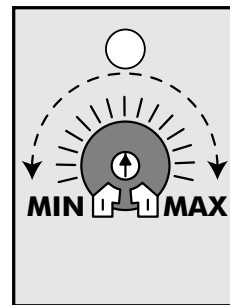

## Safety Precautions:

**Step 17:** Place the WARNING SIGNS on both sides of the gate using Ty-wraps included.



## For Installation on Other Brand Gate Openers ...

If you are using the EXIT WAND on any other automatic gate opener brand, use the information below for wiring the system. If you do not understand the instructions below, please call GTO's Technical Support at 1-800-543-1236.

### Typical Gate Wiring Connection:

- **Reference Leads:**

- RED => Input Voltage (+)
- SHIELD => Ground/Common (-)
- BLACK => Relay's Common
- BLUE => Relay's Normally Open
- YELLOW => Remote WAND [Range adjustment potentiometer (POT)]

- **Terminology Definitions:**

- 'FREE EXIT/ENTRY' is defined as input terminals (2) that upon activation (momentarily connected together) will cause the gate to run in the open direction only. Note: In most gate openers, one of the two terminals is the 'COMMON/GND'.

- **Power supply connection:**


- DC power supply: (11-36 Vdc)
  - Connect the positive (+) lead of the power supply to the RED wire.
  - Connect the negative (-) lead of the power supply to the SHIELD wire.
- AC power supply: (8-26 Vac)
  - Connect the power supply to the RED & SHIELD wires. There is no polarity for AC power supply.

- **Relay output connection:**

- Connect the BLUE wire from the WAND to the 'FREE EXIT/ENTRY' of the gate opener.
- Connect the BLACK wire from the WAND to the 'COMMON/GND' of the gate opener.

- **Range (POT) board connection:**

- Connect the YELLOW wire from the WAND to the YELLOW wire from the Range Adjustment Board.
- Connect the BLACK wire from the Range Adjustment Board to a negative input voltage.
- Turn the POT clockwise to increase range.
- Turn the POT counter-clockwise to decrease range.

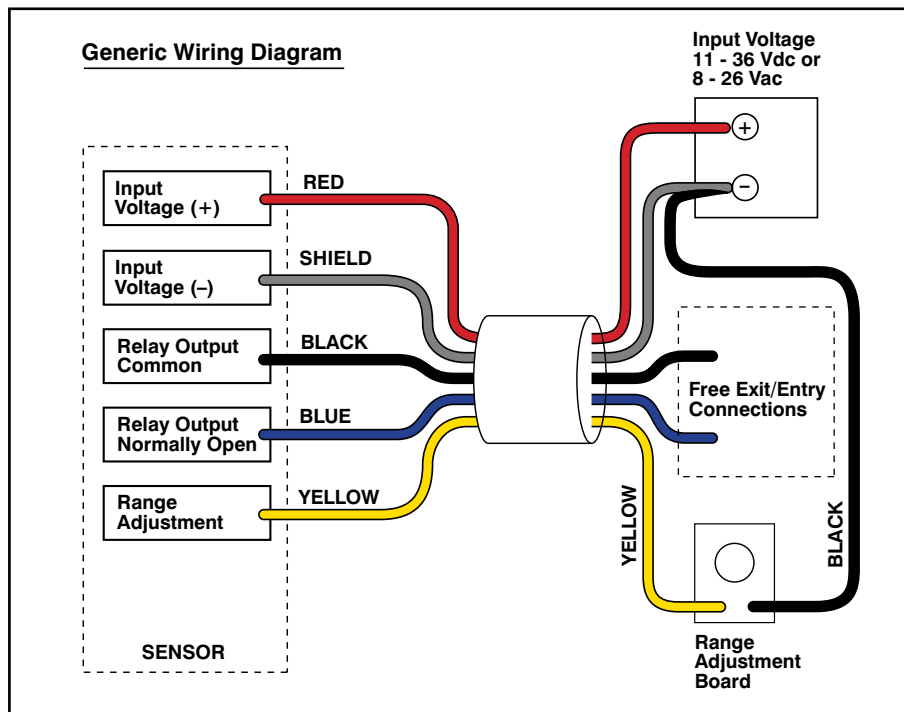

## TECHNICAL SPECIFICATIONS:

- Power supply: 8-26 Vac/dc.
- Current consumption: 1.5 mA typical.
- Relay rating: Latching relay.

Nominal switching capacity (resistive load)	1 Amp 30 Vdc, 0.5 Amp 125 Vac
Max. switching power (resistive load)	30 Watt, 62.5 V A
Max. switching voltage	110 Vdc, 125 Vac
Max. switching current	1 Amp


- Relay Trip Time: 2 seconds.
- Operating Temperature: -25°F (-14°C) to 125°F (69°C).
- Dimensions: 1-3/4" (44.5 mm) diameter x 16.5" (42 cm) long.
- Adjustable range: 3 -12 feet typical installation.
- Very low power consumption, ideal for battery application.

## Troubleshooting: Make sure all connections are correct.

If the WAND is not working:


1. Make sure the Range Adjustment is set at maximum range.
2. Disconnect the power (battery) to the WAND.
3. Reconnect the power to the WAND and make sure that no metal object or vehicle is moving around the WAND for 60 seconds while it is calibrating.
4. Test the WAND to verify that it is working properly.
5. Check that push/pull DIP switches on Control Board are set correctly.

## Other GTO Products for Your Safety and Convenience:

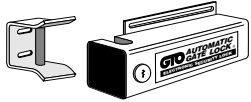

### Automatic Gate Lock (FM144)

A MUST for securing the gate against forced entry or exit. Solenoid driven, plated steel bolt lock with a zinc plated steel housing. Used with GTO/PRO systems for maximum stability and security. Comes with a keyed manual release. Recommended for gates over 8 ft. (2.4m) long. Ideal for animal enclosures or high wind areas.

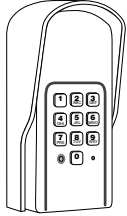


### GTO Digital Keypad (F310)

This specially designed digital keypad can be easily installed as a wireless or wired keypad. It can be programmed to use up to 25 different personal identification number (PIN) codes. This used in combination with the GTO/PRO automatic gate lock (*see automatic gate lock*) adds an additional layer of security for your property.




### Residential Wireless Intercom / Keypad (F3100MBC)

This versatile digital intercom with keypad system is ideal for any residential application, alerting you of visitors and allowing gate operator activation from the safety of inside your home. The intercom provides superior range with crystal clear two-way communication up to 500 ft (152.4m) wireless or 1,000 ft (304.8m) wired and can support up to three additional base stations to allow access from multiple rooms.

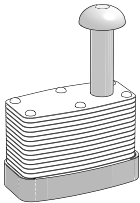

### Pin Lock (FM345)

The pin lock substitutes for the clevis pin at the front of the opener. Helps prevent theft of the opener from the gate, while allowing quick release of the opener.

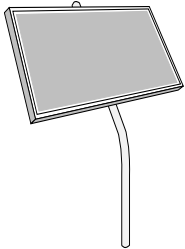

### 5 Watt Solar Panel (FM122)

If your gate application is far away from an AC power outlet, or greater than 1,000 ft (304.8m), you can choose to power your GTO/PRO gate operator system with these high output GTO/PRO solar panels. Each solar panel comes with tubular steel support, mounting clips, wire connectors, and 8 ft of Low Voltage Wire (RB509).



### Entry Transmitter (RB741)

The GTO/PRO entry transmitter includes a visor clip and has adjustable code settings. This is the standard transmitter included in every GTO/PRO gate opener kit. (*battery included*)



### Key Chain Two Button Transmitter (RB742)

The Key Chain Mini Transmitter is a miniature version of the GTO/PRO entry transmitter and has the same adjustable code settings. Used for remote control of multiple separate gate operators, and/or garage door operator(s). (*battery included*)



### Push Button (Doorbell) Control (RB101)

Unlit doorbell button for remote entry or exit control. Connects directly to the control board and uses 16 gauge, multi-stranded low voltage wire (*not included*).

**For your nearest dealer, please call 1-800-543-GATE (4283)  
or visit [www.gtopro.com](http://www.gtopro.com)**