

INSTRUCTIONS FOR DUAL & TRIPLE BUTTON TRANSMITTERS

The two button transmitter is used for the remote control of two gate openers or a gate opener and a garage door opener.

1. Remove the Transmitter Cover

Open the transmitter by removing the two screws on each side of the spring clip on the back of the transmitter. This will expose the battery and the dip switches. The code can now be changed using a small screwdriver.

IMPORTANT: If you already have a transmitter that operates your gate and are simply adding an additional transmitter, set the DIP switches in the new transmitter to match your old one and you are done.

2. Setting New Code

There are eight (8) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zeros. **WARNING:** No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, reassemble the transmitter.

3. Commit New Code to Memory in... MM500/502/250/350, PRO-SW3000/4000/2000XL/3000XL/4000XL and SL1000/2000 Gate Operators.

On the gate opener control board locate the **LEARN TRANSMITTER** button.

- Press and hold the transmitter button.
- Press and hold the **LEARN TRANSMITTER** button on the control board for 5 seconds or until the buzzer sounds.
- Release the transmitter button.
- Release the **LEARN TRANSMITTER** button on the control board. The new code is learned.

Commit New Code to Memory in... FM700/702/1000/2000

 
 
 
On the gate opener control board locate the **LEARN** button.

- Turn control box power switch OFF.
- Press and hold the **LEARN** button on the control board, and turn the power switch ON. Release **LEARN** button. Wait 15 seconds for the receiver to charge.
- Press and hold transmitter button until the red **STATUS LED** comes ON.
- Release transmitter button. The new code is stored in control board memory.

4. Using your transmitter

The transmitter can either be hand held or mounted on the sun visor of your vehicle. To activate your gate operator, simply depress your transmitter button until the gate begins to move.

NOTE: If you have more than one gate operator, repeat #3, Commit the Code to Memory in Control Board as needed. Be sure to select a different transmitter button to use with each operator.

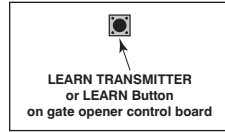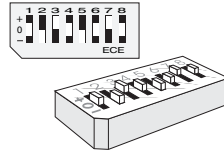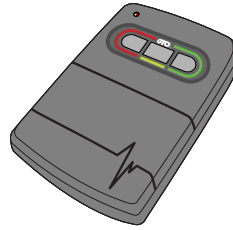

Instructions for Gate Operator Radio Controls: Single Entry Transmitter

Read the following instructions thoroughly before using transmitter.

CAUTION: Each transmitter is set to a factory preset code. It must be changed to safeguard against unauthorized or unwanted operation.

INSTRUCTIONS FOR SINGLE BUTTON TRANSMITTER

1. Remove the Transmitter Cover

Open the transmitter by removing the two screws on each side of the spring clip on the back of the transmitter. This will expose the battery and the dip switches. The code can now be changed using a small screwdriver.

IMPORTANT: If you already have a transmitter that operates your gate and are simply adding an additional transmitter, set the DIP switches in the new transmitter to match your old one and you are done.

2. Setting New Code

There are nine (9) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zeros. **WARNING:** No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, reassemble the transmitter.

3. Commit New Code to Memory in... MM500/502/250/350, PRO-SW3000/4000/2000XL/3000XL/4000XL and SL1000/2000 Gate Operators

On the gate opener control board locate the **LEARN TRANSMITTER** button.

- Press and hold the transmitter button.
- Press and hold the **LEARN TRANSMITTER** button on the control board for 5 seconds or until the buzzer sounds.
- Release the transmitter button.
- Release the **LEARN TRANSMITTER** button on the control board. The new code is learned.

Commit New Code to Memory in... FM700/702/1000/2000

 
 
 
On the gate opener control board locate the **LEARN** button.

- Turn control box power switch OFF.
- Press and hold the **LEARN** button on the control board, and turn the power switch ON. Release **LEARN** button. Wait 15 seconds for the receiver to charge.
- Press and hold transmitter button until the red **STATUS LED** comes ON.
- Release transmitter button. The new code is stored in control board memory.

4. Using your transmitter

The transmitter can either be hand held or mounted on the sun visor of your vehicle. To activate your gate operator, simply depress your transmitter button until the gate begins to move.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a A23S 12 Volt battery.

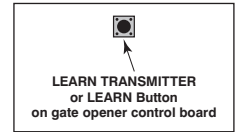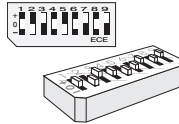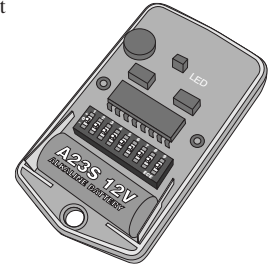

ONE YEAR LIMITED WARRANTY

Your GTO® Accessory is warranted by the manufacturer against defects in materials and manufacturer workmanship for a period of one (1) year from date of purchase, provided the recommended installation procedures have been followed.

GTO® sells its products through authorized retail and on-line channels to ensure that consumers obtain quality pre-sale and after sale support and service. The warranty on GTO® products is NOT VALID if the products have been purchased from an unauthorized, on-line E-tailer (e.g., E-bay® sellers who are not authorized GTO® resellers), or if a product's serial number has been altered, removed, or replaced in any way. To verify that you are buying from an authorized, on-line GTO® e-tailer, visit www.gtoinc.com, or call 1-800-543-GATE.

In the case of product failure due to defective material or manufacturer workmanship within the one (1) year warranty period, the opener will be repaired or replaced (at the manufacturer's option) at no charge to the customer; if returned freight prepaid to GTO, Inc., 3121 Hartsfield Road, Tallahassee, Florida, USA 32303. **IMPORTANT:** Call (850) 575-4144 or Fax (850) 575-8950 for a Return Goods Authorization (RGA) number before returning item(s) to the factory. Products shipped to the factory without an RGA number will not be accepted. Replacement or repaired parts are covered by this warranty for the remainder of the one (1) year warranty period or six (6) months, whichever is greater. GTO® will pay shipping costs (equal to United Parcel Service ground rate) for return to owner of item(s) repaired under warranty.

The manufacturer will not be responsible for any charges or damages incurred in the removal of the defective parts for repair, or the reinstallation of these parts after repair. Use of any components that are not GTO® specified (e.g. battery or transformer) will void the warranty. This warranty shall be considered void if damage to the product(s) was due to improper installation or use, use of non-GTO® specified or approved components or replacement parts, connection to an improper power source, or if damage was caused by lightning, wind, fire, flood, insects, or other natural agents.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty is in lieu of all other warranties, either expressed or implied.

After the one (1) year warranty period expires, GTO® (or one of its authorized service centers) will perform necessary repairs for a nominal fee. Call GTO® at (800) 543-1236 or (850) 575-4144 for more information.

If you have any questions or concerns, please contact our Technical Service Department
Monday thru Friday 8:00 am to 7:00 pm (ET) at 1-800-543-1236 or 850-575-4144.
GTO, Inc. • 3121 Hartsfield Road • Tallahassee, Florida 32303
Telephone (850) 575-0176 • Fax (850) 575-8912 • www.gtoinc.com

FCC Regulation: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INSTRUCTIONS FOR DUAL & TRIPLE BUTTON TRANSMITTERS

The two button transmitter is used for the remote control of two gate openers or a gate opener and a garage door opener.

1. Remove the Transmitter Cover

Open the transmitter by removing the two screws on each side of the spring clip on the back of the transmitter. This will expose the battery and the dip switches. The code can now be changed using a small screwdriver.

IMPORTANT: If you already have a transmitter that operates your gate and are simply adding an additional transmitter, set the DIP switches in the new transmitter to match your old one and you are done.

2. Setting New Code

There are eight (8) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zeros. **WARNING:** No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, reassemble the transmitter.

3. Commit New Code to Memory in... MM500/502/250/350, PRO-SW3000/4000/2000XL/3000XL/4000XL and SL1000/2000 Gate Operators.

On the gate opener control board locate the **LEARN TRANSMITTER** button.

- Press and hold the transmitter button.
- Press and hold the **LEARN TRANSMITTER** button on the control board for 5 seconds or until the buzzer sounds.
- Release the transmitter button.
- Release the **LEARN TRANSMITTER** button on the control board. The new code is learned.

Commit New Code to Memory in... FM700/702/1000/2000

 
 
 
On the gate opener control board locate the **LEARN** button.

- Turn control box power switch OFF.
- Press and hold the **LEARN** button on the control board, and turn the power switch ON. Release **LEARN** button. Wait 15 seconds for the receiver to charge.
- Press and hold transmitter button until the red **STATUS LED** comes ON.
- Release transmitter button. The new code is stored in control board memory.

4. Using your transmitter

The transmitter can either be hand held or mounted on the sun visor of your vehicle. To activate your gate operator, simply depress your transmitter button until the gate begins to move.

NOTE: If you have more than one gate operator, repeat #3, Commit the Code to Memory in Control Board as needed. Be sure to select a different transmitter button to use with each operator.

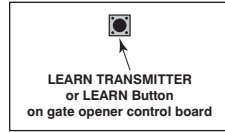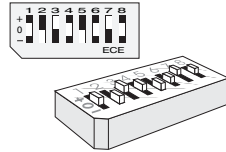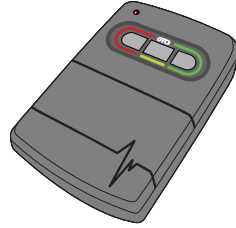

Instructions for Gate Operator Radio Controls: Single Entry Transmitter

Read the following instructions thoroughly before using transmitter.

CAUTION: Each transmitter is set to a factory preset code. It must be changed to safeguard against unauthorized or unwanted operation.

INSTRUCTIONS FOR SINGLE BUTTON TRANSMITTER

1. Remove the Transmitter Cover

Open the transmitter by removing the two screws on each side of the spring clip on the back of the transmitter. This will expose the battery and the dip switches. The code can now be changed using a small screwdriver.

IMPORTANT: If you already have a transmitter that operates your gate and are simply adding an additional transmitter, set the DIP switches in the new transmitter to match your old one and you are done.

2. Setting New Code

There are nine (9) dip switches, each of which can be placed in three different positions (+,0,-). DO NOT set all switches in the same position, such as all +, all -, or all zeros. **WARNING:** No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, reassemble the transmitter.

3. Commit New Code to Memory in... MM500/502/250/350, PRO-SW3000/4000/2000XL/3000XL/4000XL and SL1000/2000 Gate Operators

On the gate opener control board locate the **LEARN TRANSMITTER** button.

- Press and hold the transmitter button.
- Press and hold the **LEARN TRANSMITTER** button on the control board for 5 seconds or until the buzzer sounds.
- Release the transmitter button.
- Release the **LEARN TRANSMITTER** button on the control board. The new code is learned.

Commit New Code to Memory in... FM700/702/1000/2000

 
 
 
On the gate opener control board locate the **LEARN** button.

- Turn control box power switch OFF.
- Press and hold the **LEARN** button on the control board, and turn the power switch ON. Release **LEARN** button. Wait 15 seconds for the receiver to charge.
- Press and hold transmitter button until the red **STATUS LED** comes ON.
- Release transmitter button. The new code is stored in control board memory.

4. Using your transmitter

The transmitter can either be hand held or mounted on the sun visor of your vehicle. To activate your gate operator, simply depress your transmitter button until the gate begins to move.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a A23S 12 Volt battery.

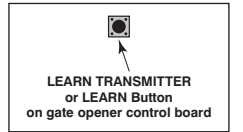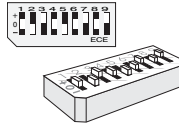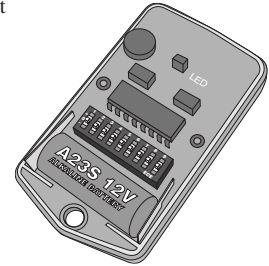

ONE YEAR LIMITED WARRANTY

Your GTO® Accessory is warranted by the manufacturer against defects in materials and manufacturer workmanship for a period of one (1) year from date of purchase, provided the recommended installation procedures have been followed.

GTO® sells its products through authorized retail and on-line channels to ensure that consumers obtain quality pre-sale and after sale support and service. The warranty on GTO® products is NOT VALID if the products have been purchased from an unauthorized, on-line E-tailer (e.g., E-bay® sellers who are not authorized GTO® resellers), or if a product's serial number has been altered, removed, or replaced in any way. To verify that you are buying from an authorized, on-line GTO® e-tailer, visit www.gtoinc.com, or call 1-800-543-GATE.

In the case of product failure due to defective material or manufacturer workmanship within the one (1) year warranty period, the opener will be repaired or replaced (at the manufacturer's option) at no charge to the customer; if returned freight prepaid to GTO, Inc., 3121 Hartsfield Road, Tallahassee, Florida, USA 32303. **IMPORTANT:** Call (850) 575-4144 or Fax (850) 575-8950 for a Return Goods Authorization (RGA) number before returning item(s) to the factory. Products shipped to the factory without an RGA number will not be accepted. Replacement or repaired parts are covered by this warranty for the remainder of the one (1) year warranty period or six (6) months, whichever is greater. GTO® will pay shipping costs (equal to United Parcel Service ground rate) for return to owner of item(s) repaired under warranty.

The manufacturer will not be responsible for any charges or damages incurred in the removal of the defective parts for repair, or the reinstallation of these parts after repair. Use of any components that are not GTO® specified (e.g. battery or transformer) will void the warranty. This warranty shall be considered void if damage to the product(s) was due to improper installation or use, use of non-GTO® specified or approved components or replacement parts, connection to an improper power source, or if damage was caused by lightning, wind, fire, flood, insects, or other natural agents.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty is in lieu of all other warranties, either expressed or implied.

After the one (1) year warranty period expires, GTO® (or one of its authorized service centers) will perform necessary repairs for a nominal fee. Call GTO® at (800) 543-1236 or (850) 575-4144 for more information.

If you have any questions or concerns, please contact our Technical Service Department
Monday thru Friday 8:00 am to 7:00 pm (ET) at 1-800-543-1236 or 850-575-4144.
GTO, Inc. • 3121 Hartsfield Road • Tallahassee, Florida 32303
Telephone (850) 575-0176 • Fax (850) 575-8912 • www.gtoinc.com

FCC Regulation: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.