


SINGLE PHASE WIRING DIAGRAM

NOT FOR RESIDENTIAL USE

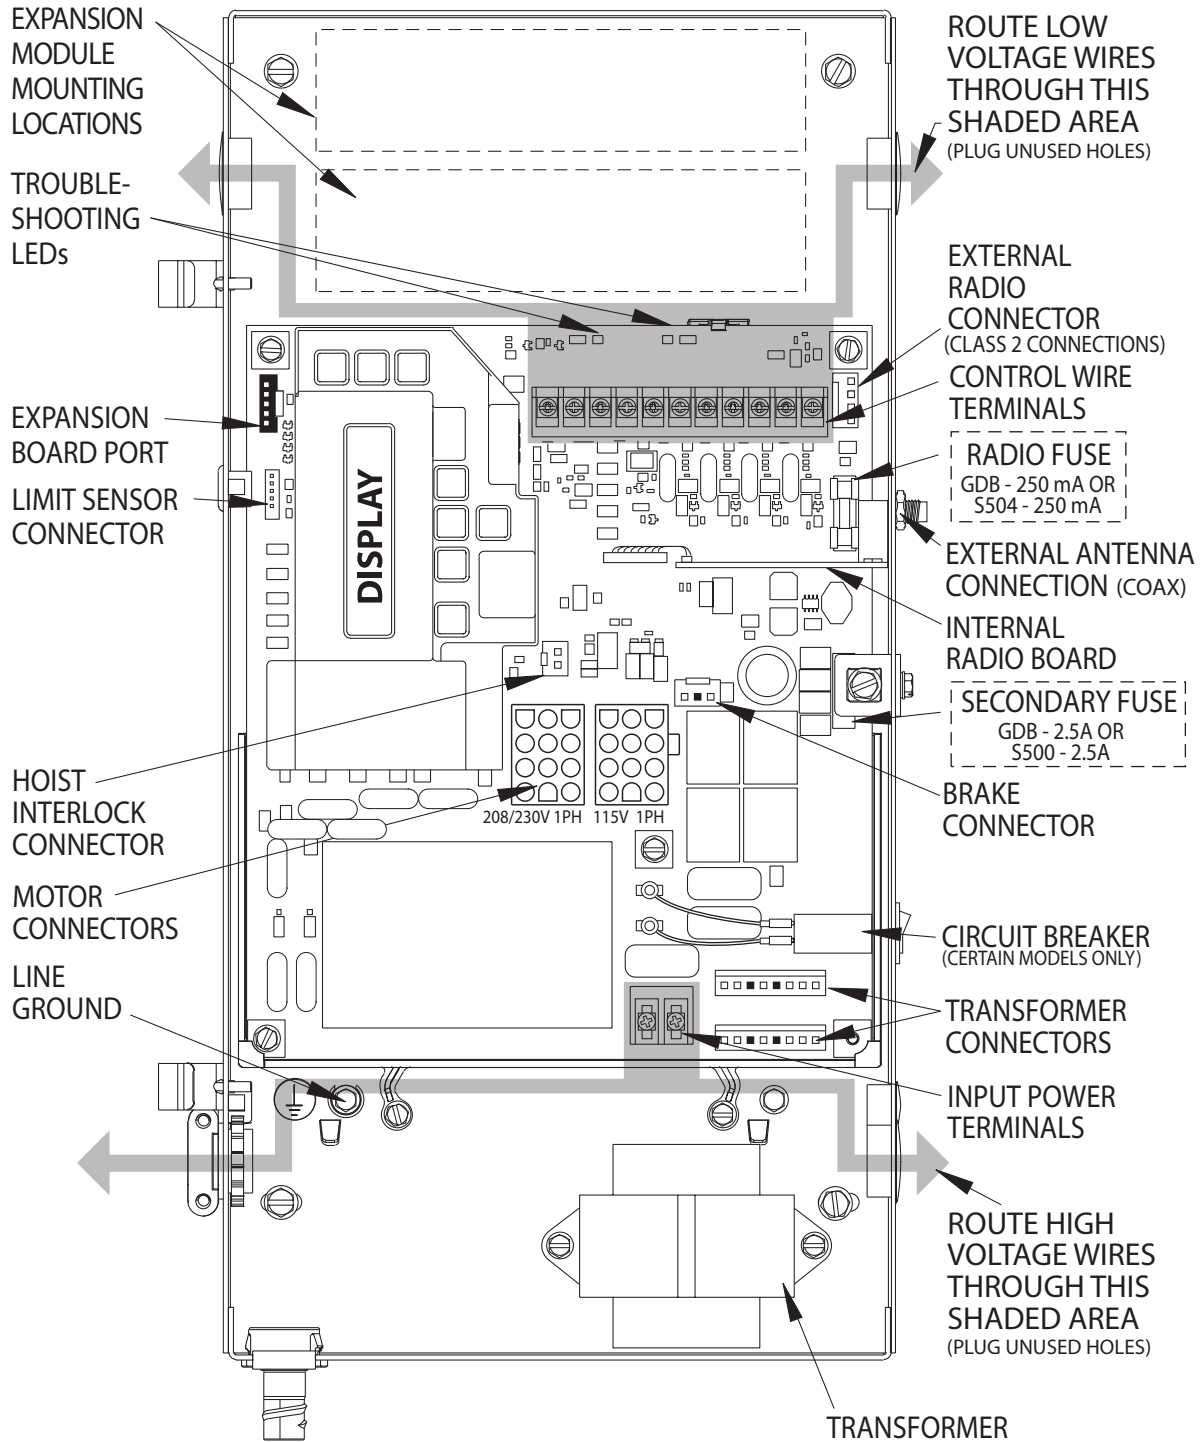


WARNING: FOR CONTINUED PROTECTION AGAINST FIRE, REPLACE FUSES ONLY WITH THE SAME TYPE AND RATING




SINGLE PHASE WIRING DIAGRAM

TROUBLESHOOTING LED's

STB ENABLE	ON = STB ENABLED	OFF = STB DISABLED
+ 24 VOLTS DC	ON = POWER AVAILABLE	OFF = CHECK AC POWER SUPPLY. CHECK FUSES

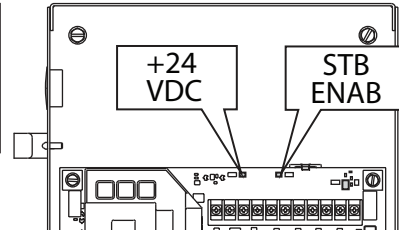


EXTERNAL WIRING DIAGRAM

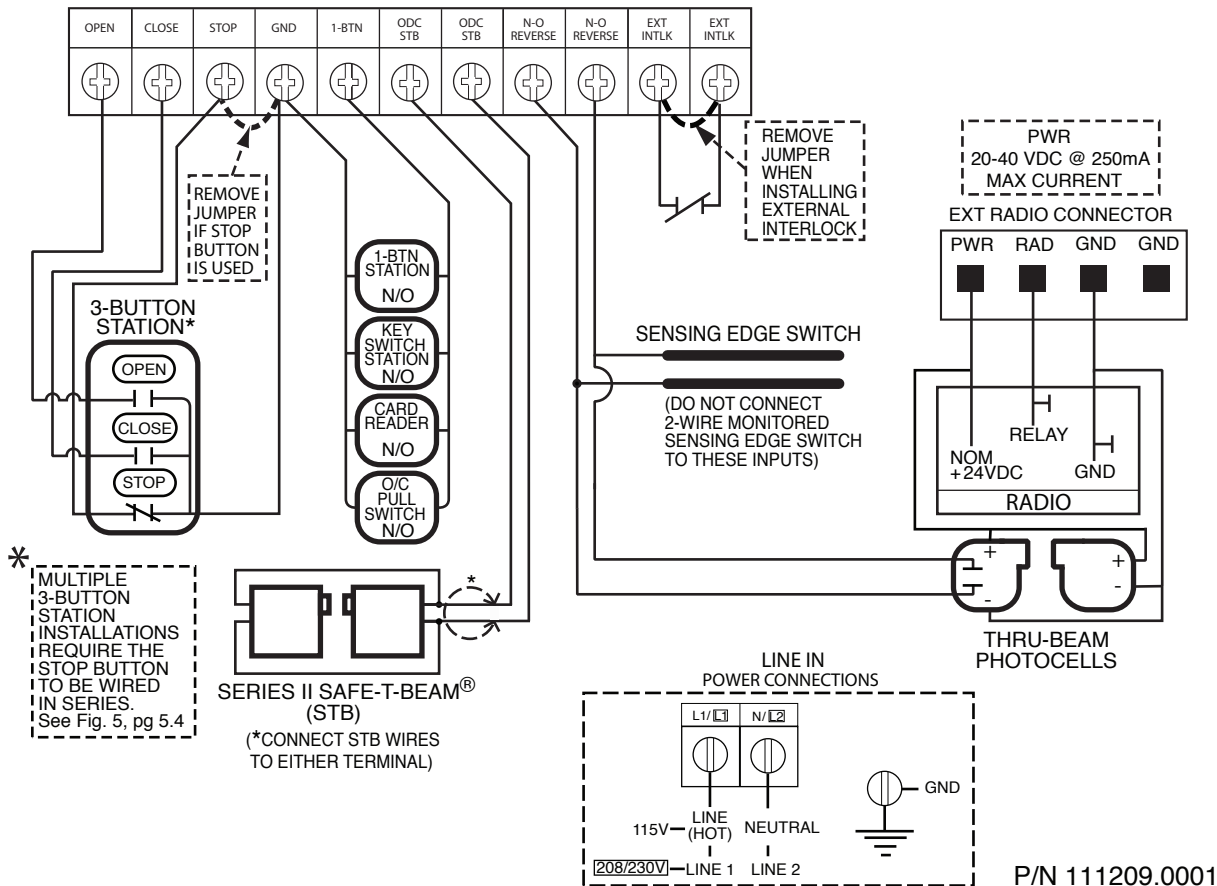

THREE PHASE WIRING DIAGRAM

NOT FOR RESIDENTIAL USE

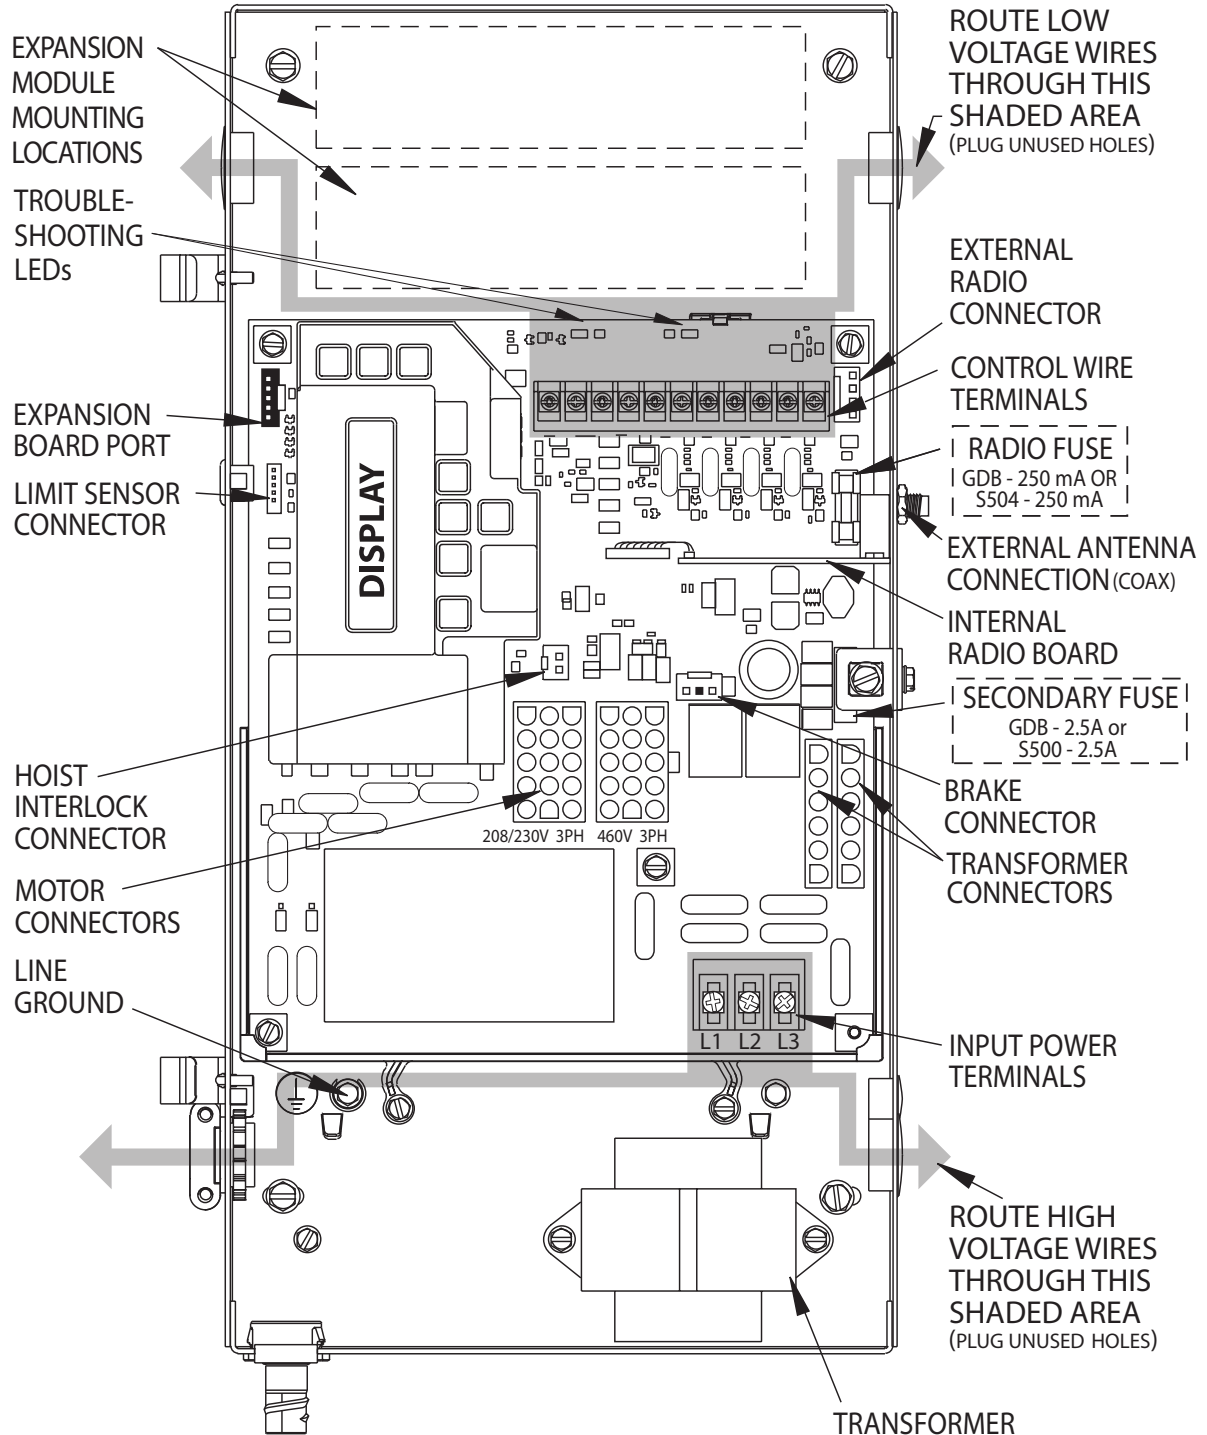


WARNING: FOR CONTINUED PROTECTION AGAINST FIRE, REPLACE FUSES ONLY WITH THE SAME TYPE AND RATING




THREE PHASE WIRING DIAGRAM

TROUBLESHOOTING LED's

STB ENABLE	ON = STB ENABLED	OFF = STB DISABLED
+ 24 VOLTS DC	ON = POWER AVAILABLE	OFF = CHECK AC POWER SUPPLY. CHECK FUSES

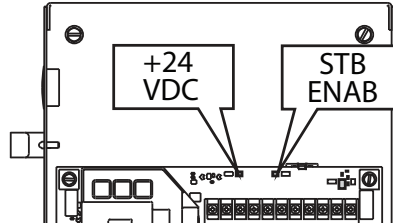


EXTERNAL WIRING DIAGRAM

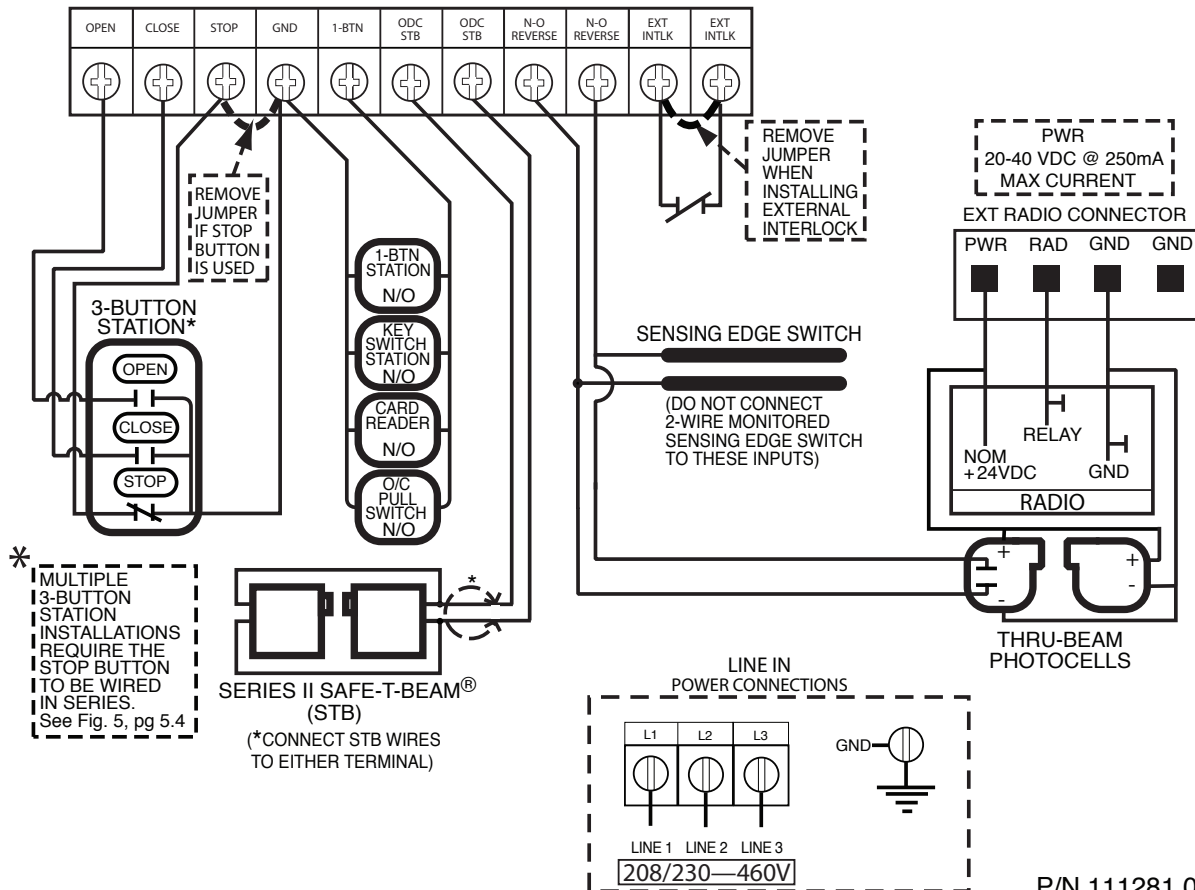

P/N 111281.0001



575 VOLT PHASE WIRING DIAGRAM

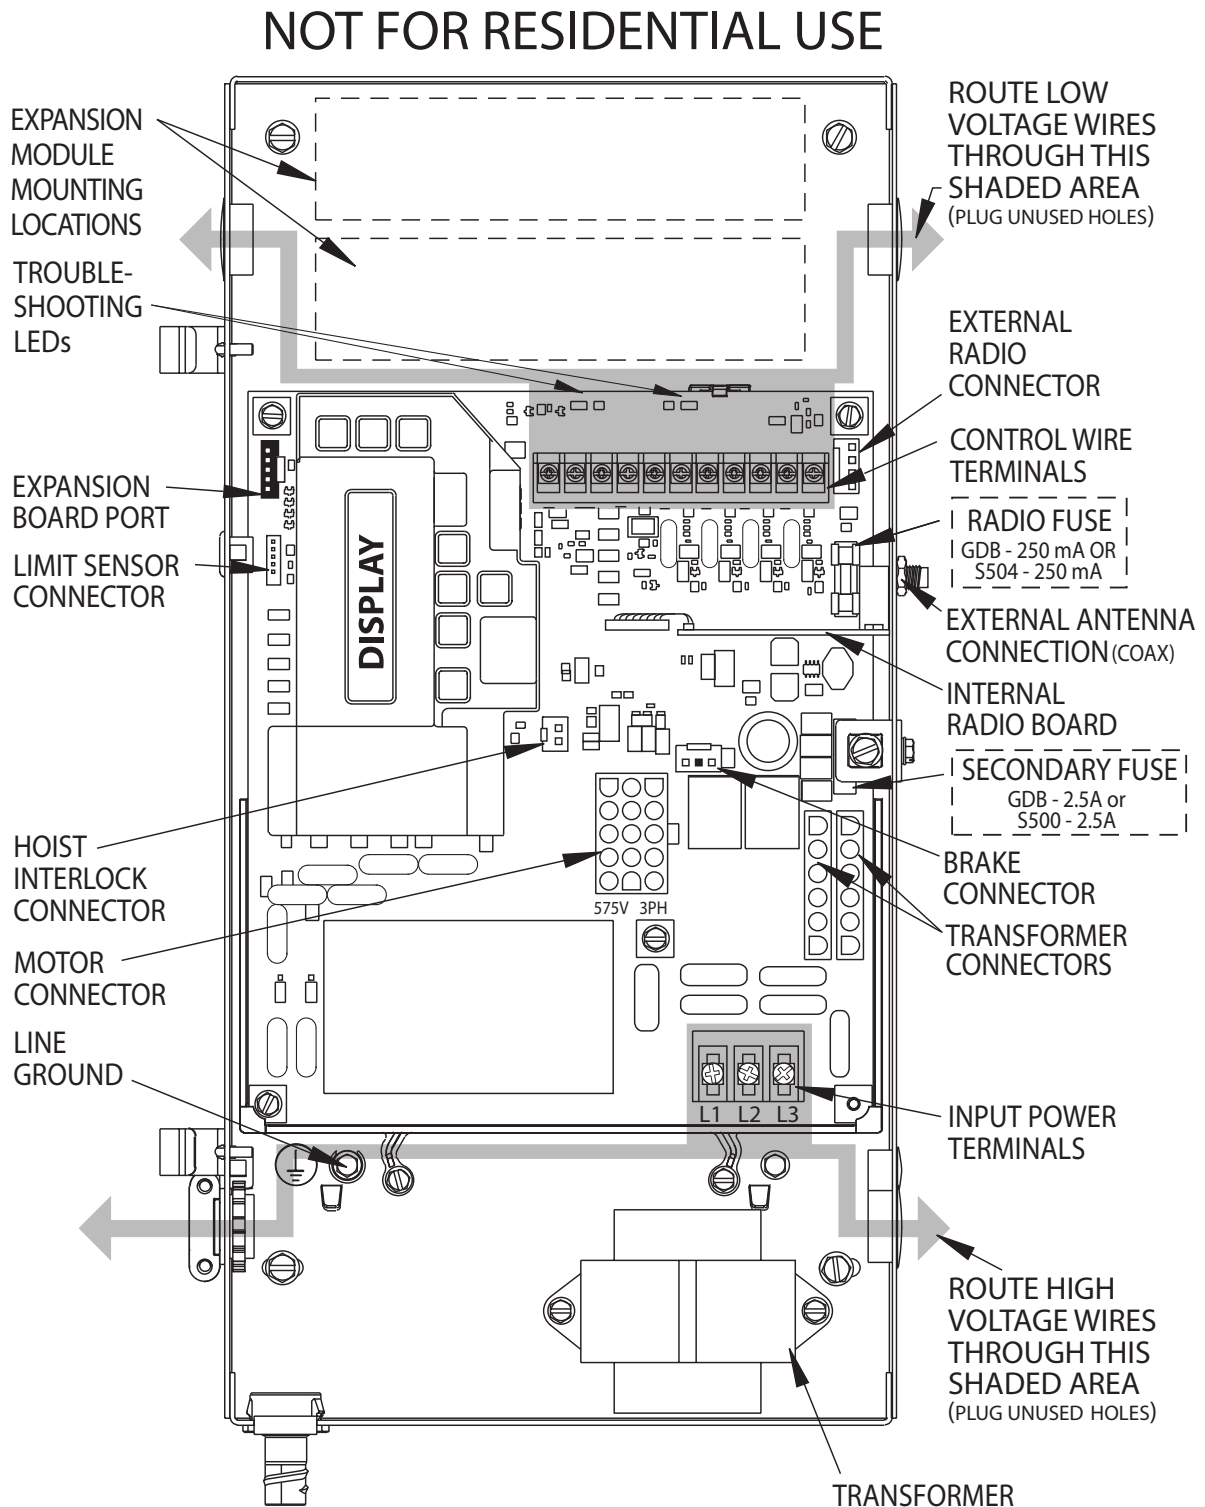


WARNING: FOR CONTINUED PROTECTION AGAINST FIRE, REPLACE FUSES ONLY WITH THE SAME TYPE AND RATING




575 VOLT PHASE WIRING DIAGRAM

TROUBLESHOOTING LED's

STB ENABLE	ON = STB ENABLED	OFF = STB DISABLED
+ 24 VOLTS DC	ON = POWER AVAILABLE	OFF = CHECK AC POWER SUPPLY. CHECK FUSES

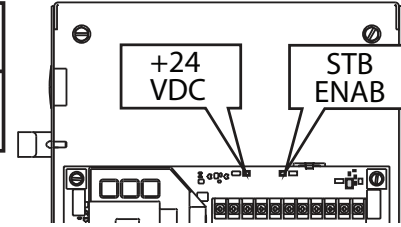

EXTERNAL WIRING DIAGRAM

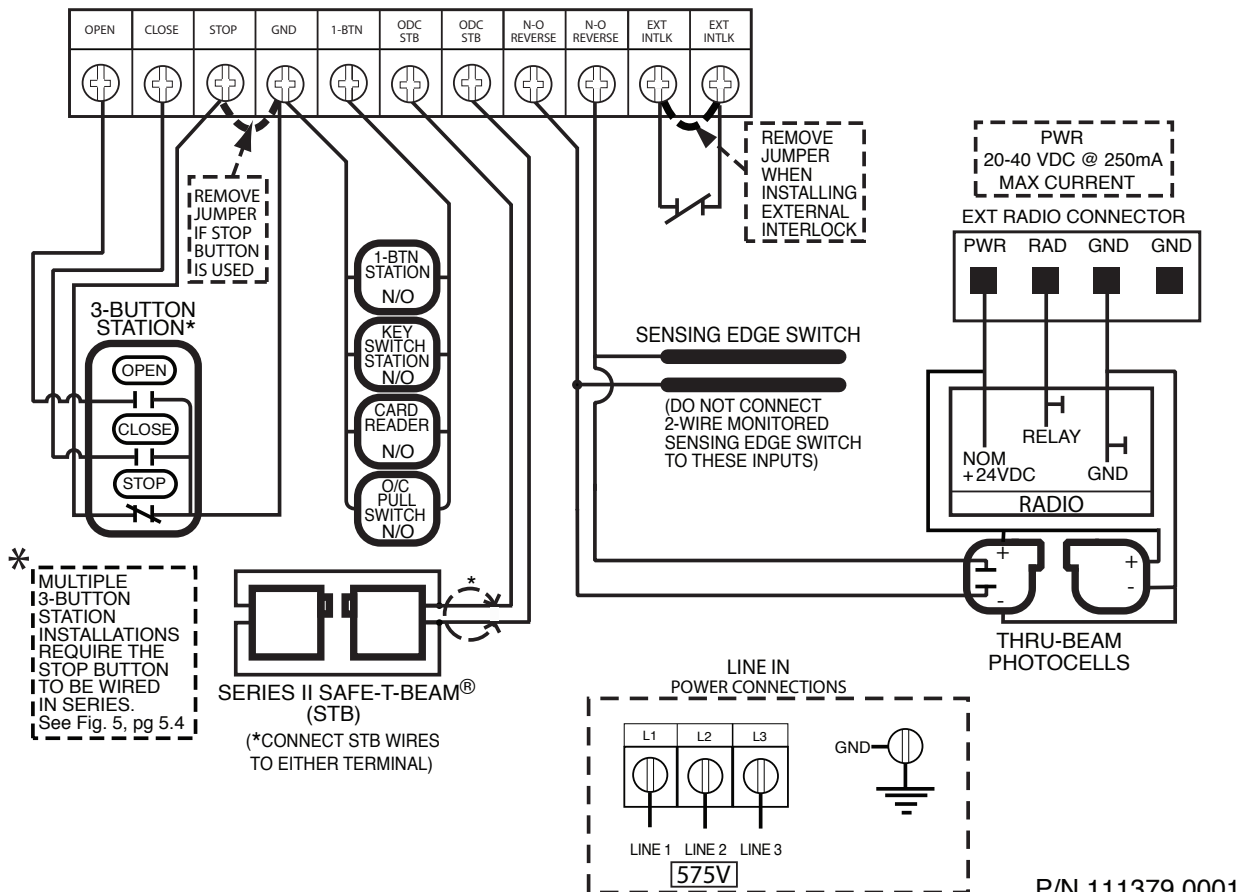

P/N 111379.0001

