



**1** Unpack box and make sure you have all items shown here.

Ascent Unit      12-V AC/DC Adapter (PS-12DC1)      Carriage Bolt (4x)      Hex Nut (4x)      L Key      Screwdriver

**2** Remove security screws with L Key, and open unit faceplate for mounting, wiring, and setup.

**IMPORTANT**

This Ascent unit **WILL NOT WORK** until the activation process is **COMPLETE!**

See the included **Activation Guide** to get this unit activated.

If you need help or have any questions, please contact **Summit Control** at **(972) 474-6422**.

**WARNING**

**AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!**

**ALWAYS CHECK THAT THE GATE PATH IS CLEAR BEFORE OPERATING!**

**REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!**

**3** Mount unit to pedestal using included mounting hardware. (This step may be completed later.)

**IMPORTANT**

We recommend mounting the unit on a gooseneck pedestal using the included mounting hardware.

If using alternate mounting, the **4G LTE Antenna Extension Kit (Model 16-ANTX-1)** should be purchased and installed.

**Failure to do so may result in NO SIGNAL!**

**CAUTION**

Use all four carriage bolts when mounting the unit to a pedestal.

Leave the "hockey puck" antenna in place even if using an antenna extension.

Seal all openings created in the enclosure.

**Failure to follow these instructions can damage the unit!**

**STOP**

This is a cellular accessory for a gate or door. An uninterrupted cellular connection **CANNOT BE GUARANTEED!**

An emergency egress or primary entry mechanism **SHOULD ALWAYS BE USED!** (transmitter, fire box, mechanical release)

Consult with your dealer, distributor, and/or system designer for more information.

Continued on next page...

**Using a Third-Party Power Source (Optional)**

**IMPORTANT**

Verify your power source is compatible with the unit's electrical specifications below.

**This product is OK for solar applications.**

<b>Input</b>	12-24 VAC/DC no more than 10% beyond this range
<b>Current Draw</b>	less than 190 mA @ 12 VDC less than 160 mA @ 24 VDC

**P1** Connect wires to unit as shown in Step 4.

**P2** Connect wires to your power source, making sure you connect positive to positive and negative to negative.

**What's what?**  
All important components labeled

Unit shown with faceplate fully open. Internal wiring not shown for clarity.

- Cellular Antenna Jacks**  
Cellular antenna extension kits connect here
- Relay Terminals**  
For wiring to gate operator or door opener. See Page 2.
- Power Terminals**  
For wiring to power. See Page 2.
- Digital Input Terminals**  
For connecting accessory devices. Scan QR code on next page for wiring instructions.
- Power and Relay Status LEDs**  
Active when lit
- SIM Card**  
Press in gently to eject.

**NEED HELP**

Call **(972) 474-6422**  
Email [support@summitcontrol.com](mailto:support@summitcontrol.com)  
We are available **Mon-Fri / 8am-5pm Central**

