## **LENTON®** Position Coupler



M	11111	Ø		+
inlb.	Metric	Canada	Nm	ftlb.
#3	10		40	30
#4	12	10M	40	30
	14		80	60
#5	16	15M	120	90
	18		150	110
#6	20	20M	180	130
#7	22		220	160
	24		270	200
#8	25	25M	270	200
	26	26M	270	200
#9	28	30M	270	200
	30		300	200*
#10	32		300	200*
	34		300	200*
#11	36	35M	300	200*
	38		350	200*
	40		350	200*
#14	43	45M	350	200*
	50		350	200*
#18	57	55M	350	200*

<sup>+</sup>Metric and imperial table values are not a direct conversion.

## WARNINGS:

- ERICO products shall be installed and used only as indicated in ERICO product instruction sheets and training materials.
   Instruction sheets are available at www.erico.com and from your ERICO customer service representative.
- ERICO products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
- 3. All instructions must be completely followed to ensure proper and safe installation and performance.
- Improper installation, misuse, misapplication or other failure to completely follow ERICO's instructions and warnings
  may cause product malfunction, property damage, serious bodily injury and death.


## The customer is responsible for:


- a. Conformance to all governing codes.
- b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
- c. Using appropriate industry standard hardware as noted above.

## SAFETY INSTRUCTIONS:

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

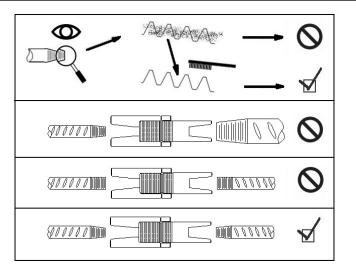

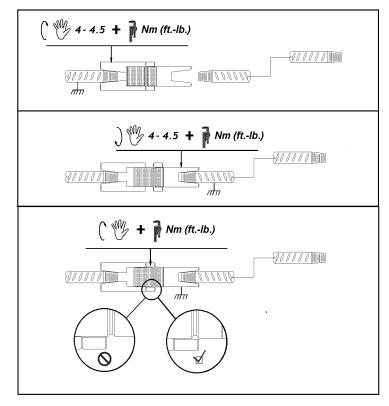





**ERICO**®

<sup>\*</sup>Americas only