
Universal Clamp and Conduit Clip

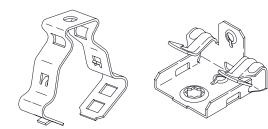

Can be independently mounted to any surface.

When using the following conduit: 3/8", 3/4", and 1" EMT or 3/8", 3/4" and 1" RIGID:


- Fit conduit into clip.
- 2) By hand or with channel lock pliers, snap locking tab into first hole.
- 3) Clip is now secure.

When using the following conduit: 1/2" RIGID or 1/2", 1-1/4", 1-1/2" and 2" EMT:

- Fit conduit into clip.
- 2) By hand or with channel lock pliers, snap locking tab into first
- 3) Reposition channel lock pliers and snap locking tab into second hole.
- 4) Clip is now secure.

Note: a) Always use second conduit hole with above conduit; (b) if desired, break tab off 812M fastener when using 1/2" EMT

Universal Clamp

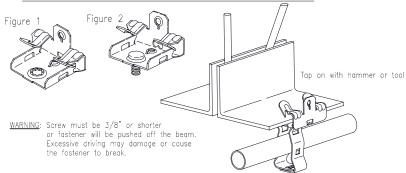

Part Number	Article Number	Figure	Flange Thickness (in [mm])
M24	110111001	1	1/8" [3] - 1/4" [6]
M58	N/A		5/16" [8] - 1/2" [13]
M912			9/16" [14] - 3/4" [19]
M1318			13/16" [21] - 1-1/8" [28]
EM1318	1 <i>7</i> 0075		
M24S	N/A	2	1/8" [3] - 1/4" [6]
M58S			5/16" [8] - 1/2" [13]
M912S			9/16" [14] - 3/4" [19]
M1318S			 13/16" [21] - 1-1/8" [28]
EM1318SM	171855		10/10 [21] - 1-1/0 [20]


Universal clamp supplied with $1/4"-20 \times 3/8"$ stud.

Conduit Clip

- Select appropriate latching hole from sizing chart.
- Fit conduit into clip.
- 3) Snap locking tab into desired hole using fingers (as shown) or

Latching Hole

PENTAIR

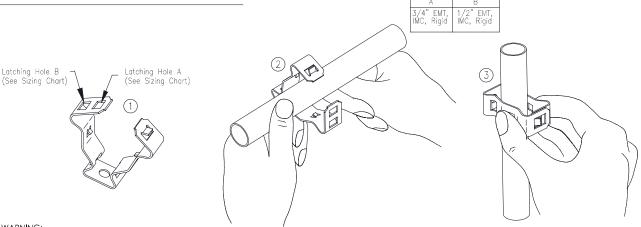

- RNING:
 Pentair products shall be installed and used only as indicated in Pentair product instruction sheets and training materials. Instruction sheets are available at www.erico.pentair.com and from your Pentair customer service representative.
 PENTAIR products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
 All instructions must be completely followed to ensure proper and safe installation and performance.
 Improper installation, misuse, misapplication or other failure to completely follow Pantair's instructions and warnings may cause product malfunction, properly damage, serious bodily injury and/or death, and void your warranty.
 Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.
 All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratinas are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

a. Conformance to all governing codes.
b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified engineer.
c. Using appropriate industry standard hardware as noted above.

All governing codes and regulations and those required by the job site must be observed.


Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.



INSTRUCTION SHEET

	Figure 1 Part	Article	Figure 2 Part	Article	Description			
	Number	Number	Number	Number	Description			
	8P24	172150	8P24SM	175180	1/2" [13] conduit to 1/8" [3] - 1/4" [6] flange			
	8P58	172160	8P58SM	175190	1/2" [13] conduit to 5/16" [8] - 1/2" [13] flange			
	8P912	175100	8P912SM	175200	1/2" [13] conduit to 9/16" [14] - 3/4" [19] flange			
	12P24	175110	12P24SM	175220	3/4" [19] conduit to 1/8" [3] - 1/4" [6] flange			
	12P58	175120	12P58SM	175230	3/4" [19] conduit to 5/16" [8] - 1/2" [13] flange			
	12P912	175130	12P912SM	175240	3/4" [19] conduit to 9/16" [14] - 3/4" [19] flange			
	16P24	175140	16P24SM	175260	1" [25] conduit to 1/8" [3] - 1/4" [6] flange			
	16P58	175150	16P58SM	175270	1" [25] conduit to 5/16" [8] - 1/2" [13] flange			
	16P912	175160	16P912SM	175280	1" [25] conduit to 9/16" [14] - 3/4" [19] flange			

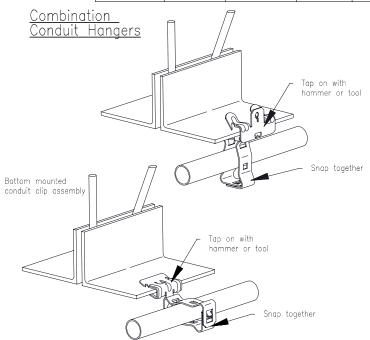


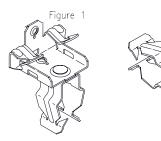


Figure 2

Applications and Load Diagram





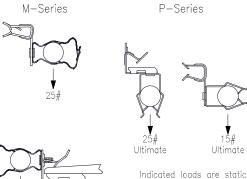

Indicated loads are static load limits and should not be combined.

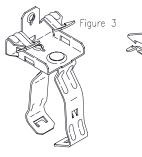




Figure 3 Part	Article	Figure 4 Part	Article	Description
Number	Number	Number	Number	Description
6M24		6M24SM	173640	3/8" [10] conduit to 1/8" [3] - 1/4" [6] flange
6M58		6M58SM	171980	3/4" [19] conduit to 5/16" [8] - 1/2" [13] flange
6M912		6M912SM	173650	3/8" [10] conduit to 9/16" [14] - 3/4" [19] flange
16M24	N/A	16M24SM	173720	1" [25] conduit to 1/8" [3] - 1/4" [6] flanges
16M58		16M58SM	173730	1" [25] conduit to 5/16" [8] - 1/2" [13] flange
16M912		16M912SM	173740	1" [25] conduit to 9/16" [14] - 3/4" [19] flange
16M1318		N/A	N/A	1" [25] conduit to 13/16" [21] - 1-1/8" [28] flange
16EM1318	173745	N/A	N/A	
20M24	N/A	20M24SM	171720	1-1/4" [32] conduit to 5/16" [8] - 1/4" [6] flange
20M58		20M58SM	173770	1-1/4" [32] conduit to 5/16" [8] - 1/2" [13] flange
20M912		20M912SM	173780	1-1/4" [32] conduit to 9/16" [14] - 3/4" [19] flange
24M24		24M24SM	176690	1-1/2" [38] conduit to 5/16" [8] - 1/4" [6] flange
24M58		24M58SM	173800	1-1/2" [38] conduit to 5/16" [8] - 1/2" [13] flange
24M912		24M912SM	173710	1-1/2" [38] conduit to 9/16" [14] - 3/4" [19] flange
32M24		32M24SM	173830	2" [51] conduit to 5/16" [8] - 1/4" [6] flange
32M58		32M58SM	173840	2" [51] conduit to 5/16" [8] - 1/2" [13] flange
32M912		32M912SM	173850	2" [51] conduit to 9/16" [14] - 3/4" [19] flange

Pentair, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

