 
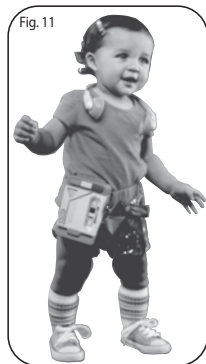 


D. PRETEND PLAY:

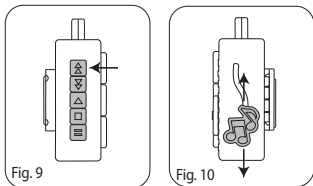

★ Push the playback control buttons on the left side of the music player (Fig. 9), or slide the musical notes on the right side up and down (Fig. 10), for tactile play.

★ NOTE: Playback control buttons, headphones, and musical notes slider are for pretend play only and do not activate any lights or sounds.

🎵 Clip the music player to your pants while wearing the headphones to rock out and dance on the go!

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B) / NMB-3 (B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. **U.S.A and Canada:** For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. **Outside U.S.A and Canada:** Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



Let's care for the environment!

The wheelie bin symbol indicates that the product and its batteries must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information. Illustrations are for reference only. Styles may vary from actual contents.

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and OLD SCHOOL™ are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China

- US/CA** - Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
Phone: 1-800-321-0183
E-mail: service@littletikescare.com
- UK** - MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK.
Little Tikes Consumer Services
P.O. Box 2040 Hockley, Essex, S55 4BF
Phone: 0 800 521 558
E-mail: support@littletikesstore.co.uk
- EU** - MGA Entertainment (Netherlands) B.V. **Baronie 68-70, 2404XG, Alphen a/d Rijn, The Netherlands**
Tel: +31-172-758-010
Email: klantenservice@mgae.com
- AU/NZ** - Imported by MGA Entertainment Australia Pty Ltd.
Suite 5.05, 32 Delhi Road,
Macquarie Park NSW 2113. AU.
Tel: 1 300 059 676
Email: au-sales@mgae.com

MGA
ENTERTAINMENT™
0623-0-E/INT

little tikes

www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

little tikes
OLD SCHOOL
Toys That Take You Back!

**RAINBOW/REMIX
MUSIC PLAYER™**
**COOL COUNTIN'
FLIP PHONE™**
**GROOVY GRIPPIN'
KEYS™**

18+
mos

SKU: 488283W

 
BATTERY INSTALLATION REQUIRED

CONTENTS

- 1 Rainbow Remix Music Player™
- 1 Cool Countin' Flip Phone™
- 1 Groovy Grippin' Keys™


RAINBOW REMIX MUSIC PLAYER™ CONTENTS

- A. 1 Rainbow Remix Music Player™
- B. 1 Set of Pretend Headphones

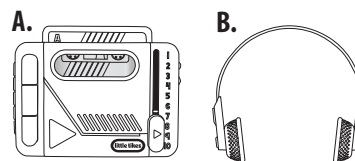


COOL COUNTIN' FLIP PHONE™ CONTENTS

 - A. 1 Cool Countin' Flip Phone™

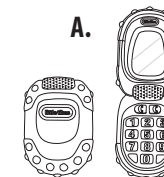

GROOVY GRIPPIN' KEYS™ CONTENTS

 - A. 1 Groovy Grippin' Keys™

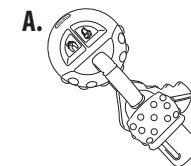

⚠ WARNING:

- This toy produces flashes that may be a trigger for individuals with photosensitive epilepsy.



- This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

IMPORTANT NOTES ABOUT BUTTON BATTERIES

- WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.

IMPORTANT INFORMATION

- This toy can be cleaned with a damp (not wet) cloth. Please ensure that no moisture enters the electronics or battery compartment.

BATTERY SAFETY INFORMATION

- Use only size "AAA" (LR03) alkaline batteries (4 required).
- Use only size "AG13" (LR44) alkaline batteries (2 required).
- Insert batteries with the correct polarity (+ and -).
- Charging of rechargeable batteries should only be done under adult supervision.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Do not short-circuit the supply terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.

 
BATTERY INSTALLATION

BATTERY ACTIVATION AND REPLACEMENT MUST BE COMPLETED BY AN ADULT

The batteries included in the unit are for in-store demonstration. Before playing, an adult must install fresh alkaline batteries (not included) in the unit. Here's how:


Rainbow Remix Music Player™ AND Cool Countin' Flip Phone™:

1. Turn the music player and flip phone over and locate the battery door.
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover.
3. Install two (2) 1.5V AAA (LR03) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated on the battery door and the inside of the battery compartment.
4. Replace the compartment cover and securely tighten the screw to ensure the compartment is closed.

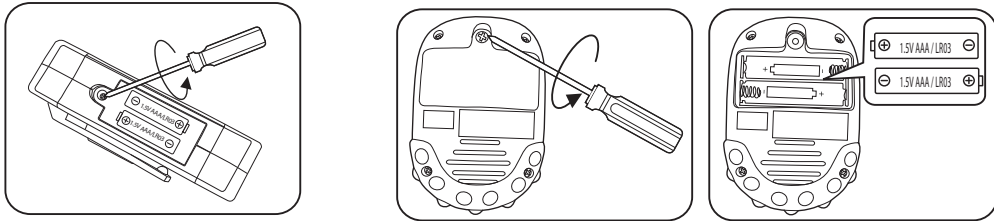

Groovy Grippin' Keys™:

 
1. Turn the keys over and locate the battery door.
2. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover.
3. Install two (2) AG13 (LR44) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated on the battery door and the inside of the battery compartment.
4. Replace the compartment cover and securely tighten the screw to ensure the compartment is closed.

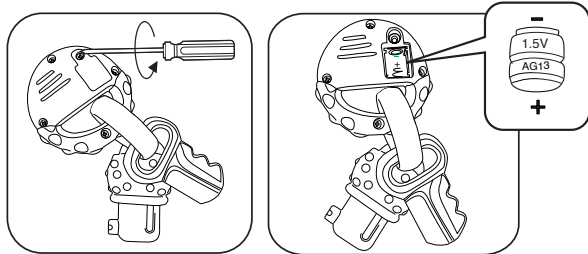


NOTE: If sound becomes weak or unit stops working remove and reinstall batteries. If problem persists, install new batteries.

Rainbow Remix Music Player™ Quick Start:

 
- Move the switch from the TRY ME [X] position (Fig. 2) to the Low Volume [L] or High Volume [H] positions.
- Always turn the playset OFF [O] to conserve battery power.
- **Language Select:** To switch between English and French languages, insert a pointed object into the small hole on the back of the music player (Fig. 3). Hold in place for 2 seconds until you hear "English" or "Français" to indicate which language mode has been activated.

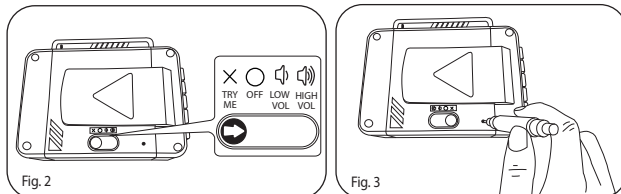

Cool Countin' Flip Phone™ Quick Start:

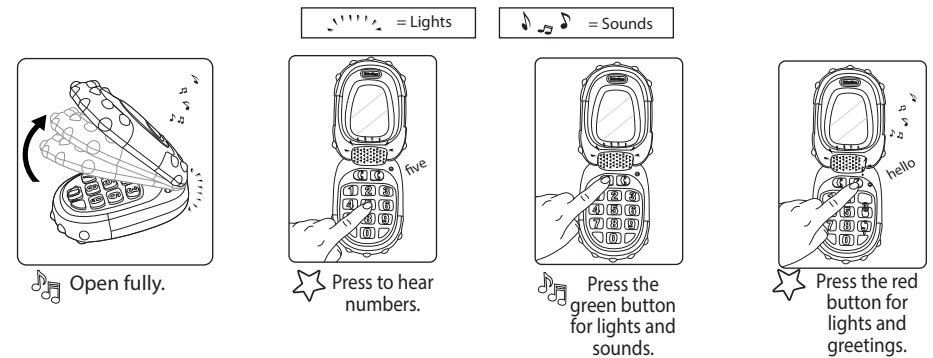 

Groovy Grippin' Keys™ Quick Start:

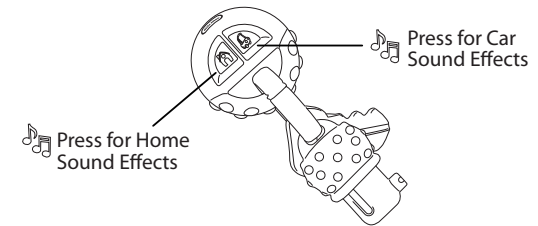 

Rainbow Remix Music Player™ Ways to Play:

A. PLAY MUSIC:

- Push the cassette down to play music and activate a cool rainbow light show (Fig. 4). Push it again to release the cassette. The cassette will pop up, but will remain in the music player (Fig. 5). Repeat these steps to hear another song!
- Get down and get funky when the music plays!

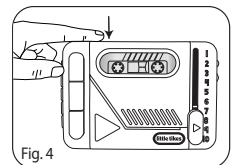 


Fig. 4

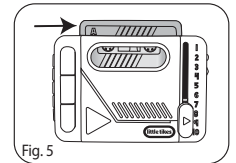 


Fig. 5

B. LEARN ABOUT COLORS:

- Press one of the three primary color buttons to hear callouts, phrases, and songs; along with light up effects (Fig. 6)!
- Press any two primary color buttons together to 'remix' the colors and learn which secondary color is revealed (Fig. 7)!

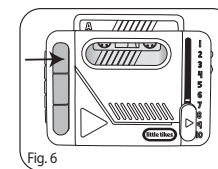 


Fig. 6

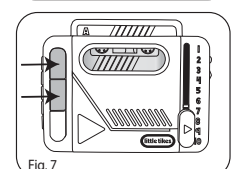 


Fig. 7

C. DISCOVER NUMBERS:

- Move the number slider up and down to playback lots of interactive prompts and questions about numbers and counting.

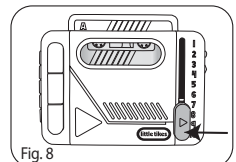 


Fig. 8