

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only size “AAA” (LR03) alkaline batteries (7 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer’s instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).



‘Let’s care for the environment!’

The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404XG Alphen a/d Rijn
The Netherlands
Tel: +31 (0) 172 758038

**Imported by MGA Entertainment
Australia Pty Ltd**
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

 


SKU: 656767

AGES 4+ YEARS
ADULT SUPERVISION REQUIRED
ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

- A. 1 T-Rex
- B. 1 Remote Control

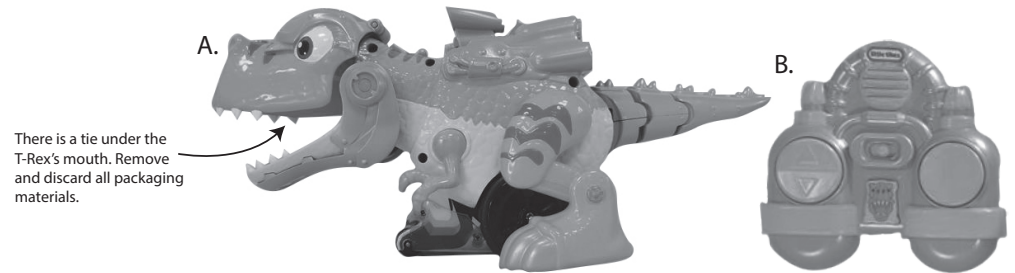


There is a tie under the T-Rex’s mouth. Remove and discard all packaging materials.

Illustrations are for reference only. Styles may vary from actual contents. Please remove all packaging including tags, ties and tacking stitches before giving this product to a child.

BATTERY INSTALLATION


Before beginning, an adult must install fresh alkaline batteries. Here’s how:

 1. Using a Phillips screwdriver (not included), remove the screws and battery compartment covers located on top of the T-Rex and on the back of the remote.
2. Install four (4) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the T-Rex, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Install three (3) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the remote, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment covers and tighten the screws.

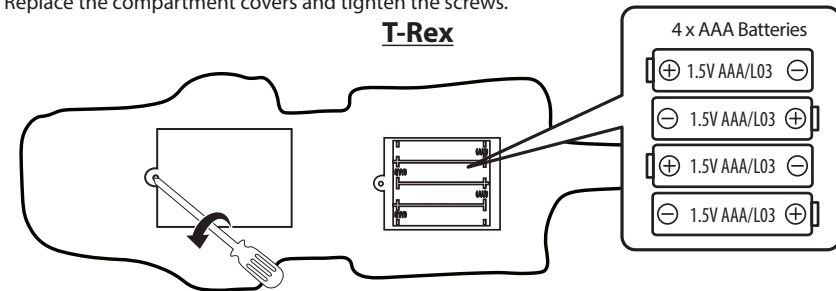

T-Rex

 REMOTE CONTROL

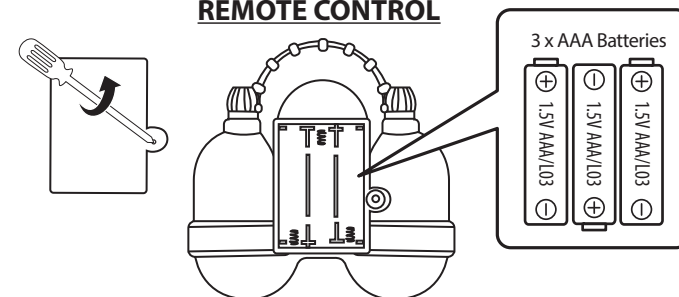

QUICK START

1. Turn the remote control on by moving the switch on the remote to volume (🔊) or mute (🔇)(Fig. 1).

The T-Rex sounds will come from the speaker on the remote control.

NOTE: While in mute, the T-Rex will function as normal but the sounds will be off.

2. Move the switch behind the T-Rex's back armor to the ON position (Fig. 2).

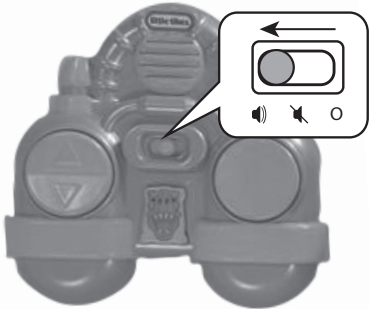 


FIG. 1

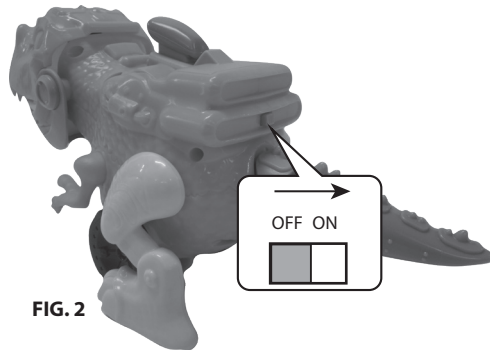 


FIG. 2

LET'S PLAY

1. Place the T-Rex on a flat surface.

2. Follow the remote guide below to move your T-Rex. Your T-Rex's tail swings side-to-side when it moves.

3. Run into small objects to watch your T-Rex chop down on them. There is a button on the T-Rex's bottom mouth (Fig. 3). Once an object hits the button, its mouth will close. Press the up button on the remote control to move the T-Rex forward and the mouth will open up again.



Press the up button to make your T-Rex move forward. (Press the down button and it will go in reverse.)



Press the left button and the T-Rex will turn to the left. Press the right button and it will turn to the right. Press and hold the button and your T-Rex will spin in that direction.



Press the T-Rex button in the middle to see your T-Rex 1) Rotate in a circle or 2) Move from left to right while making chomping sounds. Note:

2 Move remote switch to the volume on position to hear sounds (🔊).

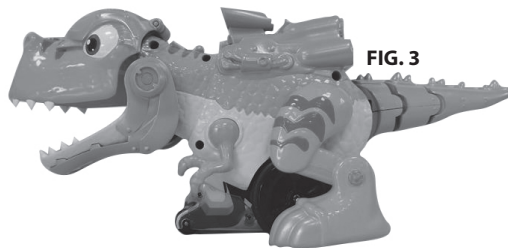 


FIG. 3

Run into objects and the mouth will close. Press the up button on the remote control to open its mouth again.

IMPORTANT INFORMATION

- Do not play with T-Rex Strike RC in the street or where there is vehicular traffic or in heavily traveled areas with pedestrians.
- Do not stand on, sit on or throw T-Rex Strike RC, as doing so can result in injury to the person and irreversible damage to the unit.
- Do not run T-Rex into furniture, walls, pets, people etc., as doing so may cause injury to the person and pets and irreparable damage to the unit.
- Do not allow long hair or loose apparel such as shoestrings near the turning wheels of the T-Rex.
- Keep hands and fingers away from the T-Rex's mouth.
- Do not drive T-Rex through water, mud, etc.
- Keep the remote control in range to operate the T-Rex correctly.
- If the T-Rex stops working properly or doesn't work as it should, turn off remote and T-Rex and then turn it back on. If there is still a problem, replace the batteries.
- Turn off the remote control and the T-Rex after use to conserve battery power.
- Frequency band range is 2.400GHz - 2.483GHz.
- Maximum radio-frequency power is 3dBm.
- For best results, use on flat, hard surface.