

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

TOBITM 2

Interactive Karaoke Machine

6+

SKU: 657566

ADULT BATTERY INSTALLATION REQUIRED

CONTENTS

 


Illustrations are for reference only. Styles may vary from actual contents. Please remove all packaging including tags, ties, tacking stitches, and the temporary battery box before giving this product to a child.

BEFORE YOU BEGIN

Before beginning, an adult must install fresh alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screw and battery compartment cover located under the unit.
2. Install four (4) fresh 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

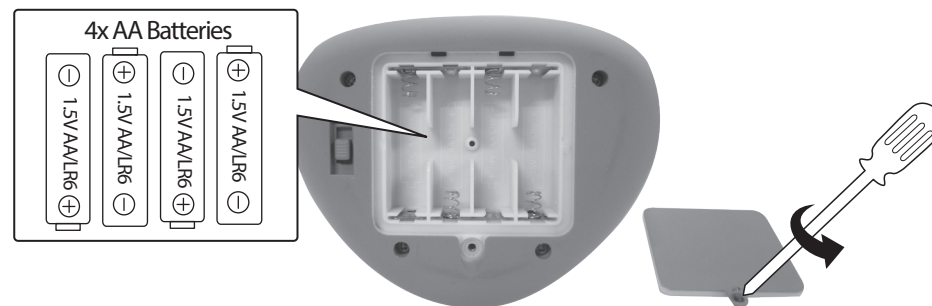

Please keep this manual as it contains important information.



Printed in China
0621-1-E/INT

© 2021 MGA Entertainment, Inc. TOBITM is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MGA Entertainment, Inc. is under license. Other trademarks and trade names are those of their respective owners.

Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236
U.S.A. 1-800-321-0183

MGA Entertainment, Inc.
9220 Winnetka Ave, Chatsworth, CA 91311
U.S.A. 800-222-4685

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn,
The Netherlands
Tel: +31 (0) 172 758038

 


www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au


Imported by MGA Entertainment Australia Pty Ltd.
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676

BEFORE PLAYING

Before playing, move the switch on the karaoke machine and microphone to the ON position.

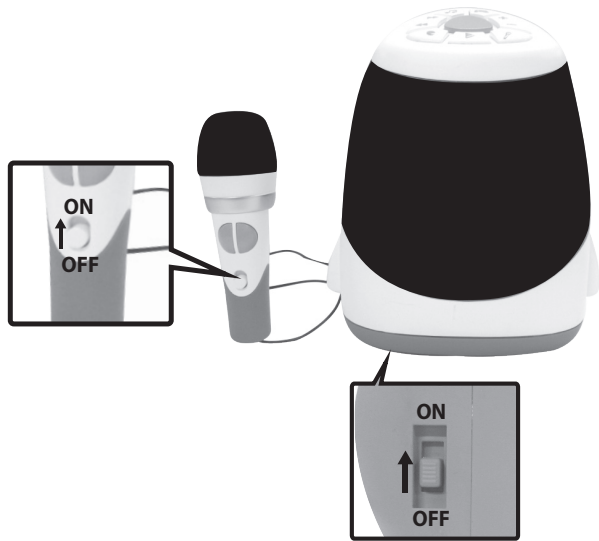

FEATURES

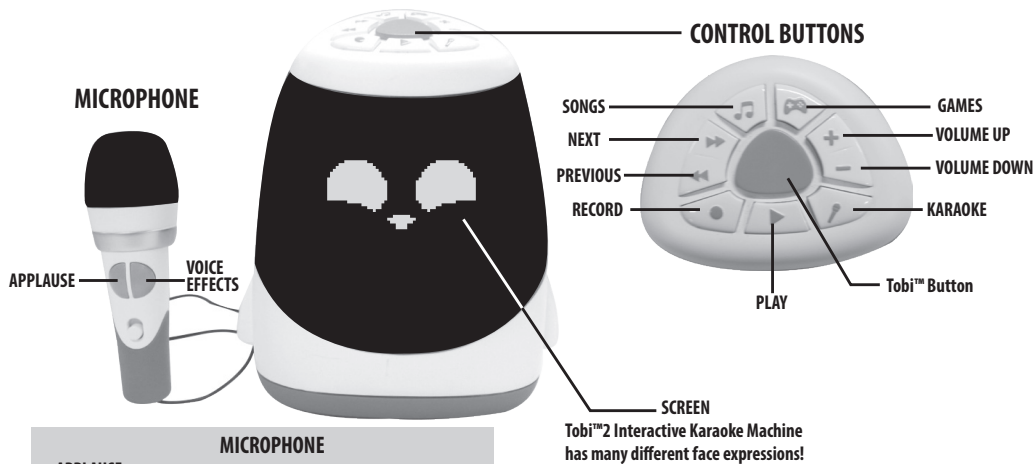 

APPLAUSE:

Press the button to activate the applause sound.

VOICE EFFECTS:

The karaoke machine has four voice effects. Three voice effects will change the sound of your voice. Continue pressing to cycle through all the voice effects.

1. Pitch Correction
2. High Pitch
3. Robot Voice
4. Regular Voice

MICROPHONE

Tobii™2 Interactive Karaoke Machine has many different face expressions!

Connect to Tobii™2 Robot Smartwatch (SOLD SEPARATELY)

Follow the below steps to connect Tobii™2 Robot Smartwatch to the karaoke machine.

1. Open the Menu Mode on the smartwatch and select the wireless connectivity icon in SETTINGS (making sure it is toggled to the ON [Blue] position).
2. Play, skip or return to the previous song by using the buttons on the watch.

IMPORTANT: The watch can not be connected to the karaoke machine if the karaoke machine is connected to Bluetooth®.

IMPORTANT INFORMATION

- After approximately one minute of inactivity, the unit will enter sleep mode. Wake it up by pressing any of the buttons on the unit or the microphone.
- Ensure the switch under your unit is moved to the OFF position after use to conserve battery power.
- Wipe clean with a damp cloth and dry thoroughly.
- Keep moisture away from the battery compartment.
- Store the unit indoors after playing.
- Do not drop or throw your unit, as it may irreparably damage the unit.
- Frequency band range : 2402-2480MHz
- Maximum radio frequency power is -1.16 dBm.

BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (4 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user's authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

 
The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Recording

Record and save up to nine sounds!


1. Press the Record button (●).
2. Once you are in the Record Menu, press the next or previous buttons to go through the memory slots.
3. Press the Record button to begin recording. The time on the bottom-left corner will count your recording time.
4. Press the Record button again to stop recording. The time on the bottom-right corner will display the recorded time.
5. Press the Play button (▶) to playback your audio.
6. To return to the menu, press the Tobi™ button.

NOTE: To overwrite a recorded audio, choose a memory slot and press the record button.

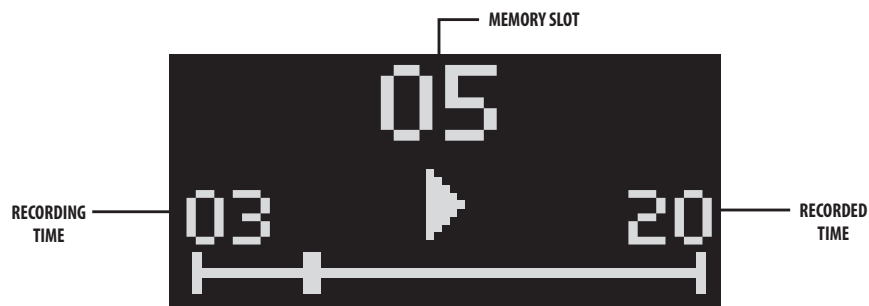

STORAGE

 1. To conserve battery power, always turn off the microphone and the karaoke machine after playing.
2. Slide the microphone into the slot on the back of the karaoke machine.

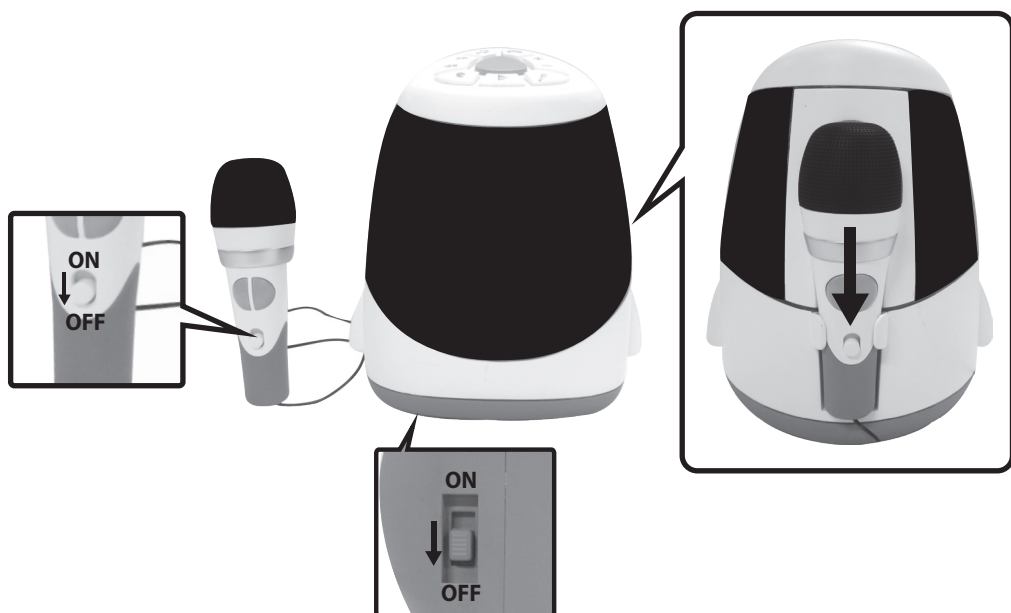

SING-ALONG

Groove along to up to eight preloaded songs!

1. Press the Songs button (🎵) on the karaoke machine.
2. Press the next or previous button to cycle through the songs.
3. Press the Tobi™ button to start the song. Pressing it again will return to the menu.
4. To sing-along without vocals, press the Karaoke button (🎤).

1. Shake Your Hips, Feel the Beat

Repeat after me...
One, two, three, let's go!

Shake your hips
(Shake your hips)
Stomp your feet
(Stomp your feet)
Shake your hands
(Shake your hands)
Feel the beat
(Feel the beat)

Everybody sing along with me
(Everybody sing along with me)
Everybody come and dance with me
(Everybody come and dance with me)
Everybody get on your feet... and shake your hips!

2. Robo Dance

Robo dance! (Robo dance!)
Robo dance! (Robo dance!)
Robo dance! (Robo dance!)
Robo-rob-rob-rob,
(Robo-rob-rob-rob)

Dance like a robot, you've got motors in your feet
My body runs on batteries that feel the robo beat
My brain is a computer...
I come from the future!

Robo dance! (Robo dance!)
Robo dance! (Robo dance!)
Robo dance! (Robo dance!)
Robo-rob-rob-rob, (Robo-rob-rob-rob)
Robo dance!

3. Dancing Makes Me Happy

Dancing makes me happy
Dancing makes me free
I can dance any way I want to
Do you wanna dance with me?

Dance with me!
(Dance with me!)
Dance with me!
(Dance with me!)

Dancing in the bedroom
Dancing on the street
I can dance any way I want to
Do you wanna dance with, do you
wanna dance with
Do you wanna dance with me!

4. Shake Your Hair

Turn in a circle
(Turn! Turn!)
Now jump in the air!
(Jump in the air!)
Touch your toes!
(Touch! Touch!)
Then shake your hair!
(Shake your hair!)

[Repeat verse]

5. Tobi™ Groove

It's time to do the Tobi Groove!
(Time to do the Tobi Groove!)
Time to shake! Time to move!
(Time to shake! Time to move!)

Throw your hands up in the air!
(Up! Up! Up! In the air!)
Shake 'em like you just don't care!
(Shake 'em, shake 'em everywhere!)

6. One Good Song

Last night, I had a dream
Everybody was on the same team
Everyone came together and sang this song
Everyone learned how to get along

All it takes is one good song
(All it takes is one good song)
For everyone to dance and sing and get along
All it takes is one good song.
(All it takes is one good song)
When you and me sing together we're both
twice as strong

SING-ALONG CONTINUED

7. Dance All Day

C'mon, step to the left!
(Step to the left!)
Now step to the right!
(Step to the right!)
Dance all day!
(Dance all day!)
Dance all night!
(And dance all night!)
Feel the beat...
(Feel the beat!)
Of my song!
(Of my song!)
Move those feet!
(Move your feet!)
And sing along!
(Sing along!)

 
8. Pretend with Me

Jump! Jump! Jump!
(Like a kangaroo!)
I love to jump to the beat!
(Don't you?)
C'mon and show me what you can do
When you Jump Jump Jump!
(Like a kangaroo!)
Buzz! Buzz! Buzz!
(Like a flying bee!)
I love to fly!
(I feel so free!)
C'mon along and pretend with me
When we buzz, buzz, buzz!
(Like a flying bee!)

GAMES

Your karaoke machine has seven fun games to choose from!


1. Press the Games (🎮) button on the karaoke machine.
2. Press the next or previous button to cycle through the games.
3. Press the Tobi™ button to start the game. Pressing it again will return to the menu.

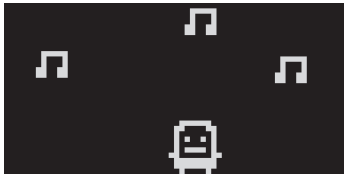

1. Rocket & Roll

Tobi™ will move left to right on the screen. Speak clearly into the microphone and say "jump" to make Tobi™ jump. Catch as many notes as possible before the time runs out.

 NOTE: The microphone will register any noise. Make sure the room is quiet while you play.

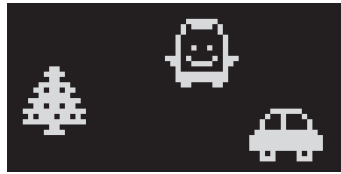


2. Find Tobi™

The unit will cycle through three images at a time. If Tobi™ appeared in one of the images, shout out "Tobi" at the end of the sequence. There are three rounds. A check mark will appear for every correct answer. An X will appear for wrong answers.

NOTES:

 - The microphone will register any noise. Make sure the room is quiet while you play.
- It is important to shout out "Tobi" after it has cycled through the images.

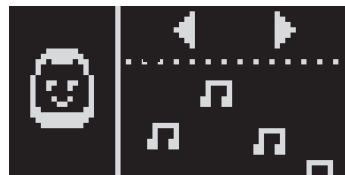

3. Note Buster

 
Notes will appear on the screen under the left or right arrows. Press the applause (left) or voice effects (right) buttons whenever the notes touch the dotted line. Press both buttons if two notes touch the line.



4. Freeze Dance

Dance while the light is green. When the light turns red, freeze!

GAMES CONTINUED

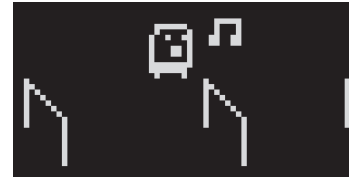

5. Tobi™ Jump

Say "jump" into the microphone to make Tobi™ jump over the hurdles and catch the notes before the time runs out.

NOTE: The mic will register any noise. Make sure the room is quiet while you play.



7. Rap n' Record

Compose your own music! Sing into the microphone and add your lyrics to the music. Press the record button to record your voice. Press play to playback the sound.



6. Laugh Attack

Make funny noises into the microphone to make Tobi™ laugh and explode.



Play your favorite songs by connecting your external device!

1. Press and hold the Tobi™ button.
 2. The Bluetooth® icon will appear on the screen.
 3. Open the settings menu on your external device.
 4. Select Bluetooth® on your external device and make sure it is on.
 5. Your external device will search for the karaoke machine.
 6. Select the name "Tobi 2 Karaoke & Speaker" to connect your external device.
 7. Choose a song and press play on the external device to sing along to your favorite song.
 8. Pressing the next or previous buttons on the karaoke machine will skip or return to the previous song on your external device.
 9. To disconnect Bluetooth® connection, turn the karaoke machine off.
 10. Press the Karaoke button to reduce the lyrics on your favorite song.
- NOTE: Vocal reduction varies by songs depending on how the original song was recorded. For best results, it is recommended to play studio recorded songs rather than mono songs.**

