

FEATURES



TIME/CALENDAR DISPLAY: Hour, minute, second, month, date, and day.

STOPWATCH: 1/100 sec. for 30 min. / 1 sec. up to 24 hours

12/24 Hour Indications: Choose between 12 and 24 hour cycle.

NOTE: Press A to select the desired mode.

NORMAL MODE



TIME: Hour, minute, and second are displayed.



CALENDAR: MONTH/DATE

Keep pressing B. Month, date and day are displayed



12/24 Hour Indication: Select 12 or 24 hour cycle option when setting normal time, hour by advancing figure "A" / "P" for 12 hour mode or "H" for 24 hour mode.



ALARM:

Keep pressing C to read the alarm time. (Illustration shows the alarm is set to 7:30am.)

ALARM ON/OFF:



Hold down B and C at the same time.

STOPWATCH MODE

Press A to activate this mode.

B: Start/Stop C: Split/Split release/ Reset

Press C to reset the stopwatch to "0:00 00" before using the stopwatch.

Net time measurement: B---B---B---B---C



Split time measurement: B---C---C---B---C



1st - 2nd place times: B---C---B---C---C



The first runner finishes.

The second runner finishes. Record the time of the first runner.

 
Record the time of the second runner.

Press A to return to the normal mode.

TIME/CALENDAR SETTING MODE

Press A three time to activate this mode.

Press C to select the digits to be adjusted. (Flashing)



Press B to reset the second to "00" or to set the other digits.

Hold down B to advance the digits quickly.

Notes: When the second count any number from "30" to "59" and C is pressed one minute is added.

Press A to return to the normal mode.

ALARM SETTING MODE



HOUR

Press A twice to activate this mode.
Press B to advance the hour.



MINUTE

Press C to activate this mode.
Press B to advance the minute.
Press A to return to the normal time mode.

IMPORTANT INFORMATION

- Keep moisture away from the battery compartment. Do not submerge the unit in water.
- Do not wear it in boiling, freezing or strong electric field, static or high cycle environment.
- Avoid aggressively shaking the unit. While the unit can bear normal shake, any rough use or hard shocks to the unit may cause damage.
- Keep harsh chemicals away from the unit.
- Store in a dry environment when not in use.
- Includes one 1.5V AG13 (LR44) alkaline battery (non-replaceable).



WARNING: This product contains a button cell battery. A button cell battery can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



BATTERY DISPOSAL

BATTERY REMOVAL INSTRUCTIONS

This toy contains a battery that is non-replaceable. Do not attempt to open the device unless you are permanently disposing the device. Opening the device for any other reason could void the warranty. Battery removal is permanent, and the device will no longer work after removing the battery.

CAUTION: An ADULT must remove the battery for proper disposal. Always wear protective safety goggles in case of battery leakage.

1. Use a small Phillip's screwdriver (not included) to remove the five screws on the back of stopwatch.
2. Remove the panel to reveal the battery.
3. Lift out the battery and properly dispose it.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



'Let's care for the environment!'

The wheeled bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Printed in China
0322-0-E/INT

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and PARTY PACK EXPERIENCE™ are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70,
2404 XG Alphen a/d Rijn
The Netherlands
Tel: +31 (0) 172 758038

Imported by MGA Entertainment Australia Pty Ltd
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676