 


### Flipping the Work Table


To flip the Work Table, pull out the knob on the side and slightly rotate it so it is out of the way while the table turns. Flip the table to the other side, making sure it is flat and aligned with the leg's wall. Then, slightly rotate the knob to release it and push it back in to secure the table.





### **Add Chop Saw**

Find the lever inside the large opening on the right side of the Work Table and push it toward the table front. Insert the base of the Chop Saw into the opening, release the lever, and press down on the saw until it snaps into place.

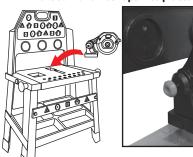

#### **USING THE CHOP SAW:**

- 1. Release the head of the Chop Saw by pushing the button near the back of the saw on the left side and lifting the saw head.
- 2. Press the grip on the saw handle as you bring the saw head downward and it will make realistic chop saw noises.
- 3. Once you've finished using the saw, lock it in place until you want to use it once more. To do so, push the saw head down until you hear a click.

NOTE: When replacing the battery, remove the chop saw from the table by pressing the workbench lever behind the tool. Lift the tool out and then release the lever.

### **FEATURES**

#### **DRILL:**

- 1. Add a drill bit to the drill by placing the end of the bit into the hole in the front of the drill and pressing it firmly into place (Fig. 1). To remove it, tug on the bit firmly.
- 2. Line the drill up on the job you're working on by using the LED laser quide.
- 3. Press the trigger and the drill will make realistic sounds. The drill bit even changes direction by pressing inward the button on the side of the drill (Fig. 2).

FIG.4





**AUTO SHOP:** Flip to the auto shop side before beginning.

GEARS: Install the gears into the left side of the engine using the screwdriver or drill (Fig. 3).

ENGINE INTAKE: Set the engine intake atop the engine with the air flaps pointing toward the left side and install it using two bolts (Fig. 4).

VALVE COVER: Remove the two bolts holding the valve cover by using the drill and the appropriate bit (Fig. 5).

SPARK PLUGS: Install the spark plugs onto the engine by matching the shape of the plug base to the shape on the engine. They will snap in place (Fig. 6). Once you've built your engine, it is time to take it for a run! Attach the Phillips bit to the drill. Place the end of the bit over the top bolt on the engine and then press the trigger on the drill. It will rev up the engine (Fig. 7).



FIG.3





8





FIG.6

FIG.7

# 2-in-1 Buildin' to Learn Motor/Wood Shop

SKU: 660931C3

ADULT ASSEMBLY REQUIRED ADULT BATTERY INSTALLATION REQUIRED

### **ASSEMBLY INSTRUCTIONS**





### Look for video of assembly on You Tube

www.youtube.com/littletikes

or our website at www.littletikes.com/videoinstructions

Thank you for choosing the Little Tikes® 2-in-1 Buildin' to Learn Motor/Wood Shop™.

We strive to provide a durable, easy-to-assemble toy that is made to last, giving your child years of imaginative, engaging fun!

#### IMPORTANT INFORMATION YOU SHOULD KNOW!

- Read through all the instructions first.
- Clear a flat surface to lay out all the materials so that everything is close at hand.
- Illustrations are for reference only. Styles may vary from actual contents.
- Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.
- Clean the unit with a slightly damp cloth (cold water) and mild soap if necessary.
- Real tools are not recommended for use with this unit or accessories.
- DISPOSAL: Disassemble and dispose of equipment in such a manner that no hazardous conditions such as, but not limited to, small parts and sharp edges exist at the time the equipment is discarded.
- Make sure you have all contents before assembling. If anything is missing or if you have questions, we're here to help. Give our consumer service team a call at 1-800-321-0183.

### Let's be careful!

### **⚠ WARNING!**

- ADULT ASSEMBLY REQUIRED.
- Prior to assembly, this package contains small parts: hardware which is a choking hazard and may contain sharp edges and sharp points. Keep away from children until assembled.
- Please keep this manual as it contains important information.
- This product is intended for indoor use only.
- •This product is intended for use by children ages 3 years and up.
- Place on flat, level surfaces free of objects that could cause the toy to tip over. Also, place out of the way of household traffic.
- Never use near staircase, steps, pools, hot surfaces, or areas that may be hazardous to a child.
- Do not use if damaged or broken.
- Follow the instruction step by step to assemble the product correctly, potential hazards may resulting from incorrect assembly.
- Keep long hair and loose apparel away from the rotating drill and chop saw.
- Do not allow children to sit, stand, play or climb on the top surface. Failure to do so may cause the product to become unstable
- Electronic devices to be installed and removed by an adult only.

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES° is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China 0522-0-C3

#### **CONSUMER SERVICE**

Little Tikes Consumer Service www.littletikes.com 2180 Barlow Road Hudson, Ohio 44236 U.S.A. MGA Entertainment UK Ltd. www.littletikes.co.uk 50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK support@LittleTikesStore.co.uk Tel: +0 800 521 558 MGA Entertainment (Netherlands) B.V. Baronie 68-70

2404 XG Alphen a/d Rijn <u>The Netherlands</u> <u>Tel:</u> +31 (0) 172 758038 Imported by MGA Entertainment Australia Pty Ltd

www.littletikes.com.au Suite 2.02, 32 Delhi Road Macquarie Park NSW 2113 1300 059 676



#### I IMITED WADDANT

1-800-321-0183


The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year \* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is wall only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, acident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. \*The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Dome replacement parts may be available for purchase after warranty for the date.

Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.


# 6 Attach the Caps

Place the Caps (H) to the sides of the legs to secure the legs to the Work Table. Then, secure with two Screws on each side.

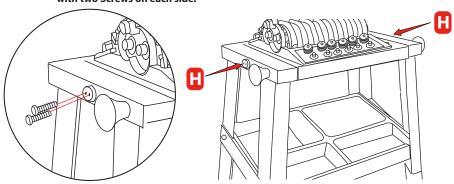

# **Snap the Front Bar**

Snap the Front Bar (D) to the front of the legs.

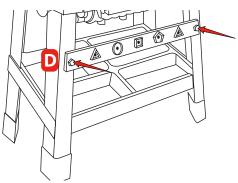


### Top it Off

Place the Backboard (A) to legs on top. Then, attach the side hangers to the sides of the Backboard. To add the hooks, match the shapes to the shapes on the Backboard.





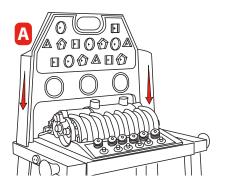


2

# 3


### Add the Work Table to the Left Leg

Insert one O-Ring (I) into the side post on the Work Table (E) first. Then, insert the side post into the opening on the Left Leg (B).

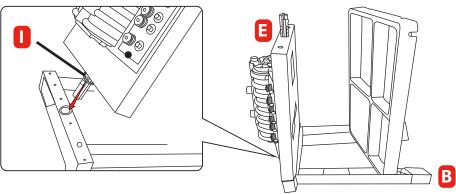


### Add the Right Leg

Attach the Right Leg (C). Insert the second O-Ring (I) into the post on the Work Table (E) and then insert the post into the opening on the Right Leg. Lastly, slide the Storage Table's (F) slots into both round posts inside the Right Leg.

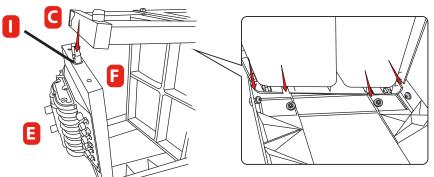

### Secure the Legs

Stand up the workbench to secure the legs to the Storage Table. Insert two Screws into each side, making sure it goes through the Storage Table Inserts.

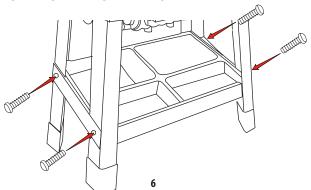

### **Battery Safety Information. This is serious!**



- Keep these instructions for future reference.
- Requires 3 "AG13" (LR44) alkaline batteries (included) and 6 "AAA" (LR03) alkaline batteries (not included). (Rechargeable batteries may be substituted.)
- The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and longer play time.
- Install batteries with the correct polarity (+ and -).
- To avoid battery leakage:
- 1. Follow the toy and battery manufacturer's installation instructions.
- 2. Do not mix old and new batteries.
- 3. Do not mix standard (carbon-zinc), alkaline or rechargeable batteries. Do not mix different brands of batteries. Only batteries of the same or equivalent type as recommended are to be used.
- 4. When toy is not used for an extended period of time, remove batteries to prevent possible leakage and damage to the unit.
- 5. Remove dead or exhausted batteries from product.
- 6. Dispose of dead batteries properly; do not bury. Do not dispose of batteries in fire as they may leak or explode.
- · Make sure cover is properly installed on unit at all times.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before recharging.
- Charging of rechargeable batteries should be done by an adult.
- The supply terminals are not to be short circuited.

**NOTE:** If the unit stops working or doesn't work as it should, remove the batteries for a few minutes and then re-insert them. If there is still a problem, install new batteries.



#### **WARNING:**

This product contains a button cell battery. A button cell battery can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### **IMPORTANT NOTES ABOUT BUTTON BATTERIES**

- WARNING KEEP BATTERIES OUT OF REACH OF CHILDREN
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.

### **FCC COMPLIANCE**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'


The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

2

#### A Few Things Before You Start!

BEFORE you begin assembly, make sure you have all the parts listed below. Questions? We're here to help. Little Tikes Consumer Service: 1-800-321-0183

### **Workbench Parts**

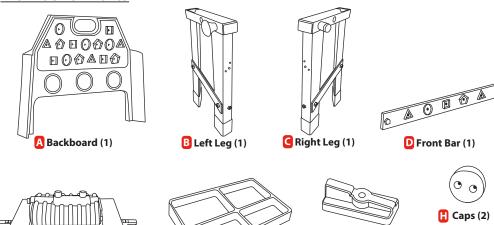



C Storage Table

Inserts (4)



[] Caps (2)

O-Rings (2)

Front Bar (1)

### Accessories



**B** Work Table (1)

Chop Saw (1)



Drill (1)



Storage Table (1)

Work Light (1)



Engine Intake (1)



Small and Large Gear (2)

Valve Cover (1)



Round, Square, Triangle Spark Plugs (3)



Pliers (1)

Pentagon, Square, Round, Triangle, Hooks (4)



Side Hangers (2)



Penta Washers (2)



Penta Head Bolts (10)



Square Head Bolts (8)

 



Triangle Head Bolts (8)

#### **BATTERY INSTALLATION**

Before beginning, an adult must install fresh alkaline batteries into the drill and chop saw. Here's how:

- 1. Using a Phillips screwdriver (not included), remove the screws and battery compartment covers from under drill and chop saw.
- 2. Install three (3) fresh 1.5V AAA (LR03) alkaline batteries (not included) into each tool, making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartments.
- 3. Replace the compartment covers and tighten the screws.



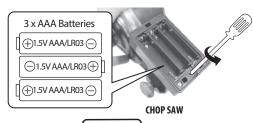

(ENG)

#### **BATTERY REPLACEMENT**

An adult must install fresh alkaline batteries in the work light should the batteries need replacing. Here's how:

- 1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the side of the work light's handle.
- 2. Install three (3) 1.5V AG13 (LR44) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
- 3. Replace the compartment cover and tighten the screw.


Before playing with the work light, make sure to remove the pull tab.

# 3 X AG13 WORK LIGHT

### **ASSEMBLY**

## Prep the Storage Table

Turn over the Storage Table (F) and insert the Storage Table Inserts (G) into the corners.

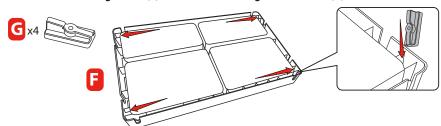

### Add the Storage Table to the Left Leg

Lay down the Left Leg (B) and slide the Storage Table's (F) slots into both round posts inside the Left Leg.

