

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.
CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. **Outside U.S.A. and Canada:** Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



'Let's care for the environment!'

The wheelie bin symbol indicates that the product and its batteries must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and OLD SCHOOL™ are trademarks of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China

US/CA - Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
Phone: 1-800-321-0183
E-mail: service@littletikescare.com

UK - MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes,
MK8 0ES, Bucks, UK.
Little Tikes Consumer Services
P.O. Box 2040 Hockley, Essex, SS5 4BF
Phone: 0 800 521 558
E-mail: support@littletikesstore.co.uk

EU - MGA Entertainment (Netherlands) B.V. Baronie 68-70,
2404 XG, Alphen a/d Rijn, The Netherlands
Tel: +31-172-758-010
Email: klantenservice@mgae.com

AU/NZ - Imported by MGA Entertainment Australia Pty Ltd.
Suite 5.05, 32 Delhi Road, Macquarie Park NSW 2113. AU.
Tel: 1 300 059 676
Email: au-sales@mgae.com

little tikes

www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au



0223-0-E/INT



MY FIRST PINBALL
ACTIVITY TABLE

12+
mos

SKU: 663482

BATTERY INSTALLATION REQUIRED

 
CONTENTS

- A. 1 My First Pinball Activity Table™ B. 2 Asteroid Balls C. 4 Table Legs D. 1 Sheet of Stickers

A.




B.



C.



 D.

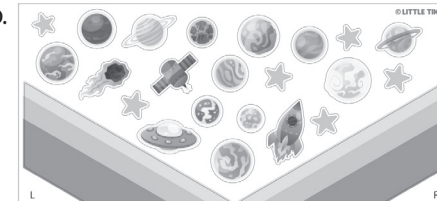


Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.

BATTERY REPLACEMENT

The batteries included in the unit are for in-store demonstration. Before beginning, an adult must install fresh alkaline batteries. Here's how:

 1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from under the device.
2. Install three (3) 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

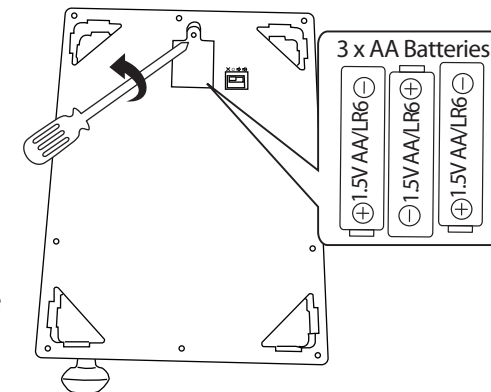

IMPORTANT INFORMATION

 
- Only use asteroid balls included in this playset. Other items may get stuck or cause irreparable damage to playset.
- Do not expose the unit to moisture of any kind. Wipe the unit with a damp cloth to clean.
- Do not use the product if it is damaged or broken.
- Use only on flat, level surfaces free of objects.
- Never use near steps, pools, hot surfaces, or areas that may be hazardous to a child.
- If the unit stops working properly or doesn't work as it should, turn off and turn it back on. If there is still a problem, replace the batteries.
- Do not apply stickers anywhere other than the activity table. Stickers may not be completely removed.

BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (3 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Do not short circuit the supply terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.


QUICK START

- ★ Slide the power switch from the TRY ME [X] position to the low volume [🔊] or the high volume [🔊] positions.
- Always turn the playset OFF [O] to conserve battery power.
- **Language Select:** To switch between English and French languages, insert a pointed object into the small hole on the back of the activity table [Fig. 1]. Hold in place for 2 seconds until you hear "English" or "Français" to indicate which language mode has been activated.
- ★ Attach the table legs by inserting the flat top into each opening on the underside of the table.

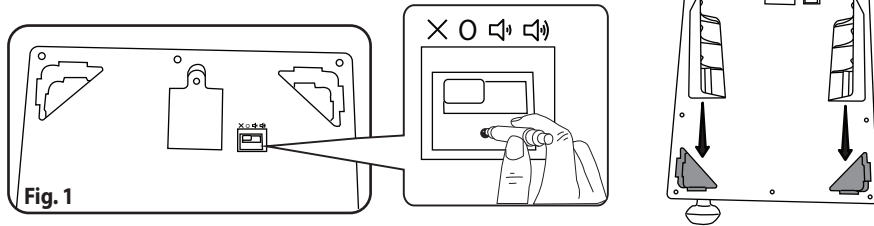

HOW TO PLAY PINBALL

 - ★ Press the coin slot [Fig. 2] to play sounds like a real pinball machine.
- ★ Drop an asteroid ball into the ball launcher. [Fig. 3]
- Pull the ball launcher [Fig.3] to launch the asteroid ball.
- ★ Press the flippers to keep the game going. [Fig. 4]

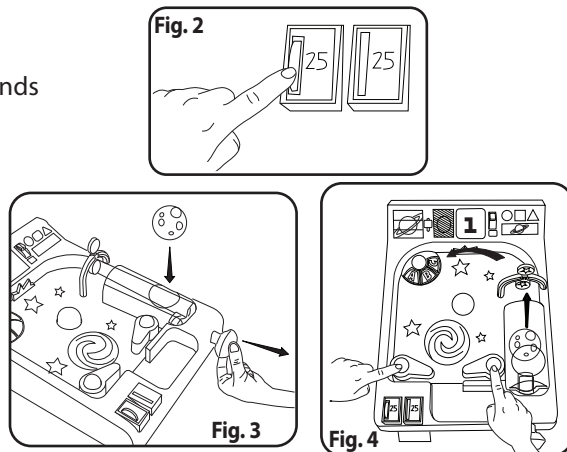


2

BONUS PLAY

Discover outta-this-world bonus play with each button!


A. PLANETS

 - 🎵 Move the slider to learn about planets & listen to stellar music. [Fig. 4]

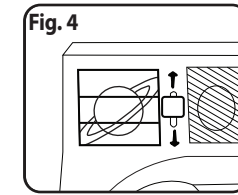


B. LETTERS & COLORS

 - 🎵 Learn planetary letters, colors & music by pressing the letter buttons. [Fig. 5]

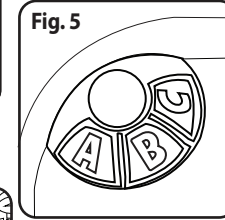


C. NUMBERS

 - ★ Count down to blast off when you press the planet [Fig. 6] in the middle of the activity table.

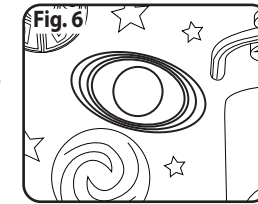


D. UP & DOWN

 - ★ Flip the switch to master opposites. [Fig. 7]

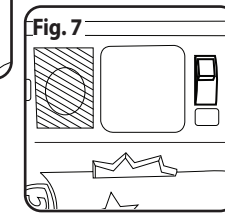


E. SHAPES & COLORS

 - ★ Push the ●■▲ buttons to discover intergalactic shapes and colors. [Fig. 8]

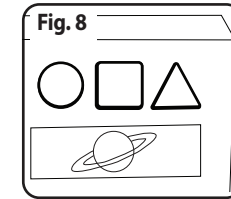


F. PLAY PINBALL

 - 🎵 Explore the interstellar lights, sounds and music throughout the activity table! [Fig. 9]

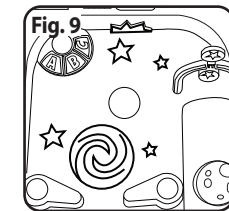

STICKER SHEET

 From the sticker sheet, place the L striped sticker on the left side of the pinball activity table and the R striped sticker on the right side.

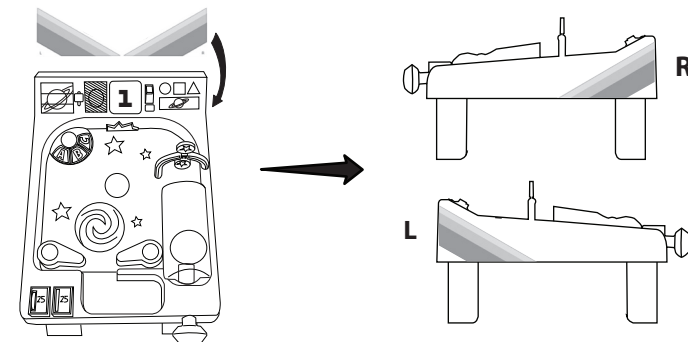

3