

100 WORDS SPELL & SPIN PENCIL

SKU: 664403
ADULT BATTERY
INSTALLATION REQUIRED

CONTENTS

- A. Spell & Spin Pencil
- B. 100 Words Notebook




- ★ Learn to spell 100+ words! Pick a word from the 100 Words Notebook and spell it on the Spell & Spin Pencil. Press the tip of the pencil to learn how to pronounce the word.


BATTERY REPLACEMENT

The batteries included in the pencil are for in-store demonstration. Before playing, an adult must install fresh alkaline batteries (not included) in the unit. Here's how:


1. Using a Phillips screwdriver (not included) remove the screws and battery compartment cover from under the pencil.
2. Install two (2) 1.5V AA (LR6) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screws to ensure the compartment is closed.

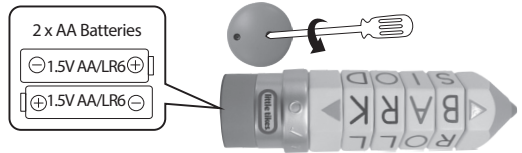

QUICK START

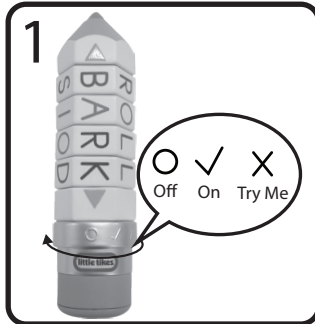

- ★ Turn the switch from Try Me (X) to the ON position (✓). When moving the dial switch, make sure the bottom arrow is pointed to the desired position.

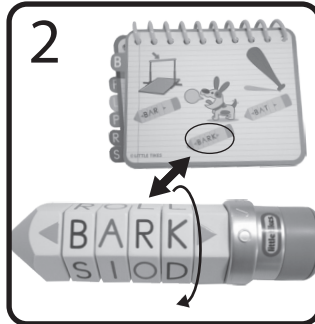

- ★ Pick a word to spell from the 100 Words Notebook. Spin the letter blocks until the word has been correctly spelled between the two blue arrows.



- ★ Press the pencil tip button to hear the word spelled and pronounced.
- ★ Note: The pencil will pronounce the words shown in the book. For words not shown in the book or misspelled, the pencil will prompt the child to try to pronounce it.

IMPORTANT INFORMATION

- Illustrations are for reference only. Styles may vary from actual contents.
- Please remove all packaging including tags, ties & tacking stitches before giving this product to a child.
- Play is limited in Try Me mode. Before playing, move the switch to the ON position.
- To conserve battery power, always turn it off (O) after playing.
- Do not use the pencil on fragile surfaces.
- Do not hit or throw the pencil at people or pets, as doing so may cause injury to the person and irreparable damage to the unit.
- This toy can be cleaned with a damp (not wet) cloth. Please ensure that no moisture enters the electronics or battery compartment.
- Do not place under direct or excessive heat.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

BATTERY SAFETY INFORMATION

- Use only size "AA" (LR6) alkaline batteries (2 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Do not short-circuit the supply terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.
CAN ICES-3 (B)/NMB-3(B).



'Let's care for the environment!'

The wheelie bin symbol indicates that the product and its batteries must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Please keep this manual as it contains important information.
Illustrations are for reference only. Styles may vary from actual contents.

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® and OLD SCHOOL™ is trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China

- US/CA** - Little Tikes Consumer Service
2180 Barlow Road, Hudson, Ohio 44236 U.S.A.
Phone: 1-800-321-0183 E-mail: service@littletikescare.com
- UK** - MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton Keynes, MK8 0ES, Bucks, UK.
Little Tikes Consumer Services
P.O. Box 2040 Hockley, Essex, S55 4BF
Phone: 0 800 521 558 E-mail: support@littletikesstore.co.uk
- EU** - MGA Entertainment (Netherlands) B.V. Baronie 68-70,
2404 XG, Alphen a/d Rijn, The Netherlands
Tel: +31-172-758-010 Email: klantenservice@mgae.com
- AU/NZ** - Imported by MGA Entertainment Australia Pty Ltd.
Suite 5.05, 32 Delhi Road, Macquarie Park NSW 2113. AU.
Tel: 1 300 059 676 Email: au-sales@mgae.com



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au



0223-0-E/INT