



115563 Desk Crosby

Attention!

Place the item on a padded area to prevent damage to the item.

Care instructions:

Dust regularly and clean with a soft dry cloth. Remove spills immediately as moisture can cause the veneer to peel off the surface.

