

C102-422-201 THE OXFORD DINING TABLE

1 of 2

THE OXFORD

ASSEMBLY INSTRUCTIONS

TWO (2) PEOPLE AND PHILIP WRENCH REQUIRED


UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTONING!!

- 1) Turn the Top / Apron Assembly (1) face down on a smooth, clean surface.
- 2) Attach the leg (3) to the Top / Apron Assembly (1) using flat washers (C), lock washers (B) and nut (E) tighten with wrench provided (D) as shown in (Drawing A) .
- 3) Connect the center leg (4) with the mounting plate using Flat washer (C), Lock washer (B), and the nut (E), tighten with the wrench provided (D) as shown in (Drawing B) .
- 4) Use bolt (F), lock washer (G), and flat washer (H) to assemble the assembled mid-leg (4) and mounting plate (5) with top panel, and tighten with wrench (I) as shown in (Drawing C).
- 5) Using two people carefully return the table to the upright position. Then place the numbered leaves in the table as shown in (Drawing D).
- 6) After assembly, carefully place the table to the upright position (note: please adjust the floor glide on the center leg if necessary)

Note: Touch-up pen is provided for repair of minor issues resulting from transit, handling and normal use.


*** NOTE KEEP THIS SHEET!!! ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

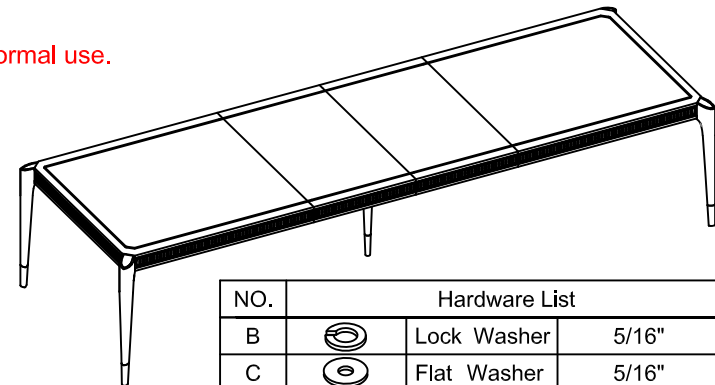


C102-422-201		
THE OXFORD DINING TABLE		
Part Description		QTY
Top/Apron Assembly(1)	C102-422-201-40123	1
Dining Table Leaf (2)	C102-422-201-4060	2
Dining Table Lock	C102-422-202-40150	6sets
Legs (3)	C102-422-201-4018	4
Center Leg(4)	C102-422-201-40349	1
Mounting Plate (5)	C102-422-201-40151	1
RTA Hardware	C102-422-201-4001	1
Adjustable Floor Glide	C102-422-202-4075	1
Nail-in Floor Glide	C102-422-201-4086	4



NO.	Hardware List			Q'ty
B		Lock Washer	5/16"	9
C		Flat Washer	5/16"	9
D		Wrench	5/16"	1
E		Nut	5/16"	9
F		Bolt	1/4"X3 ⁷ / ₃₂ "	4
G		Lock Washer	1/4"	4
H		Flat Washer	1/4"	4
I		Wrench	5/32"	1

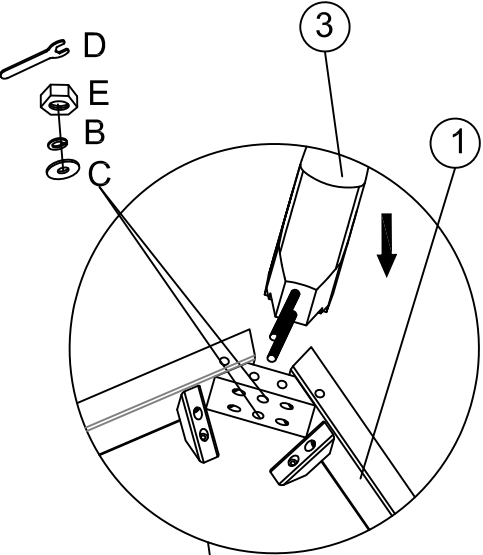



Drawing A

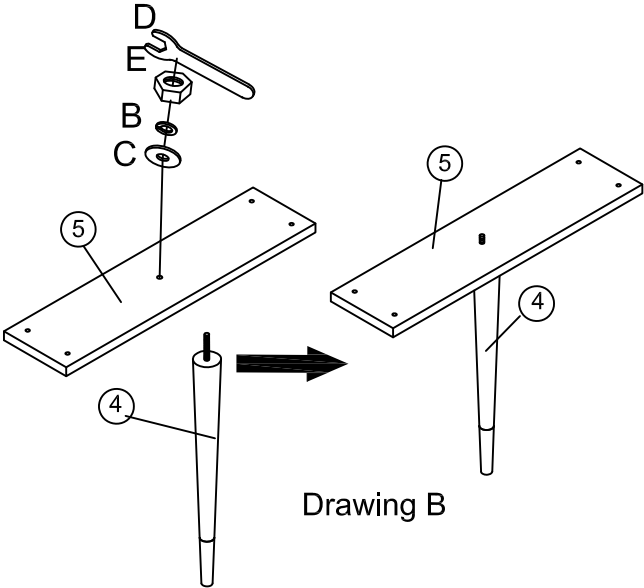

Drawing B

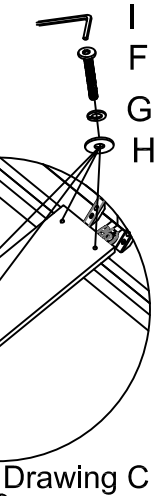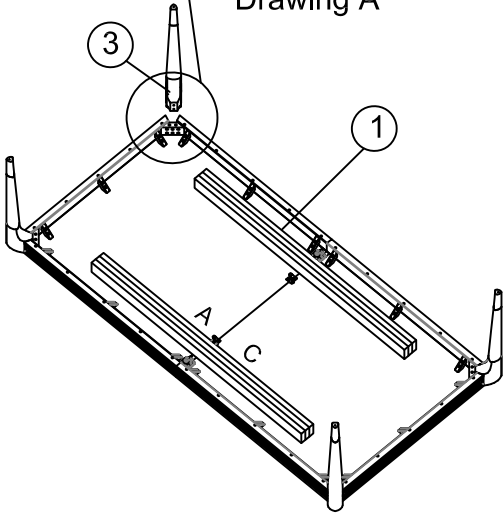

Drawing C

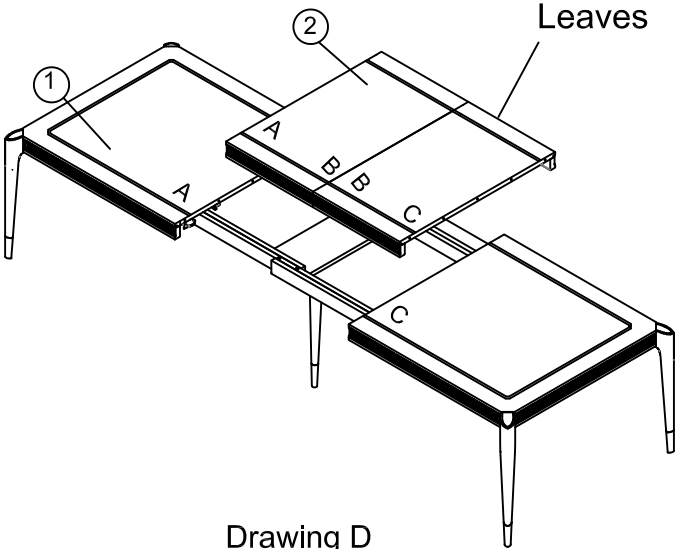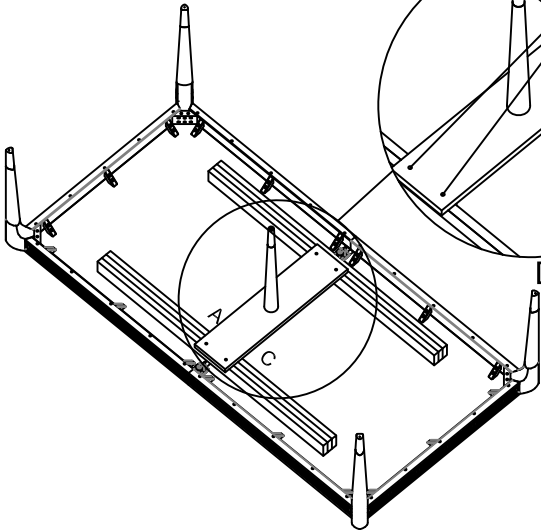

Drawing D

